


ROJECO

Automatic Pet Feeder

User Manual

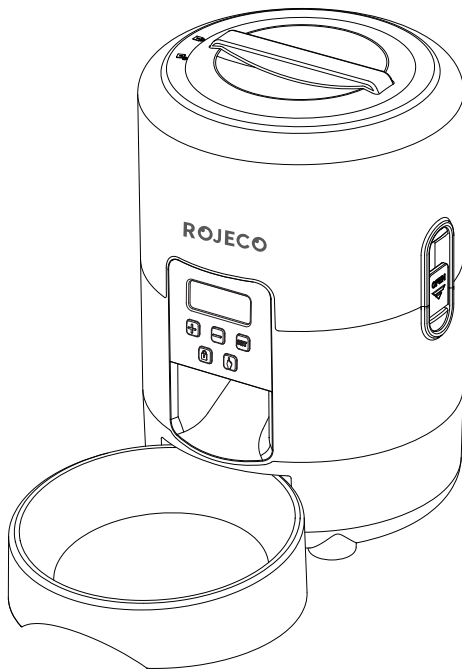


Model: PAF-186B

Please read this manual carefully before use.

1. Product Description


Front View

- 1. Lid
- 2. Food Tank
- 3. Rotor
- 4. Food Tank Lock
- 5. Food Outlet
- 6. Tank Base
- 7. Bowl Tray
- 8. Stainless Steel Bowl
- 9. Button
- 10. LED Display

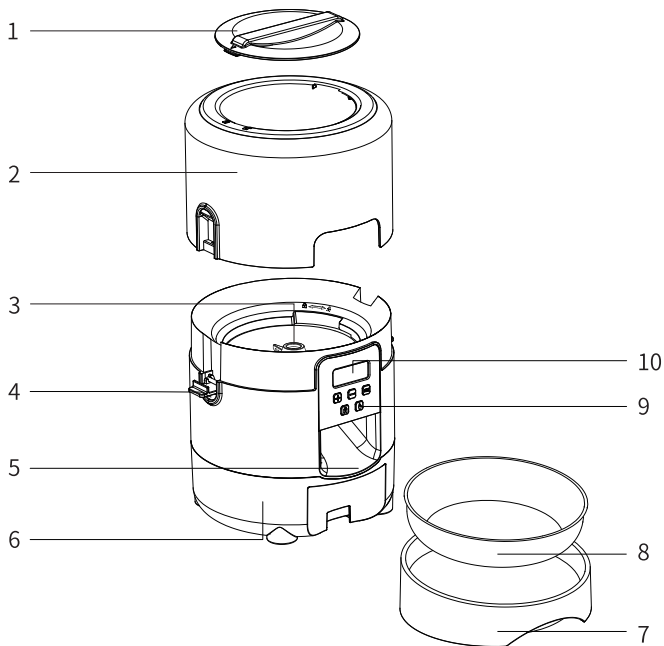


Bottom View

- 11. Battery Compartment
- 12. DC Charging Port

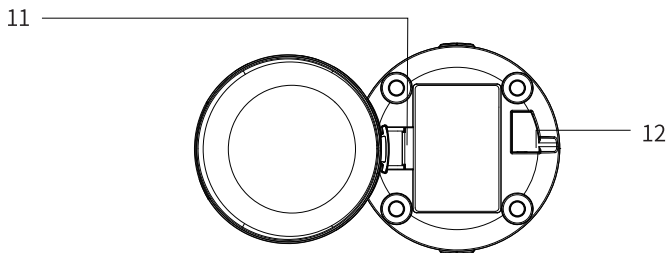


2. How to Install

1. Open the locks on both sides and remove all accessories from the feeder base.

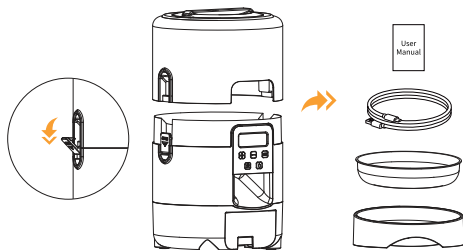


2. Plug in the 5V power adapter. If you want, install 3*D alkaline batteries (Not included) in case of a power failure.


Note: When powered by battery only, the LED screen will not remain lit, and the feeding plan will be distributed normally even when the screen is off. The LED screen will light up when you press any button.

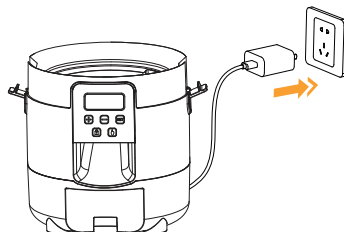

3. Install food tank and tighten both side tank latches inward.

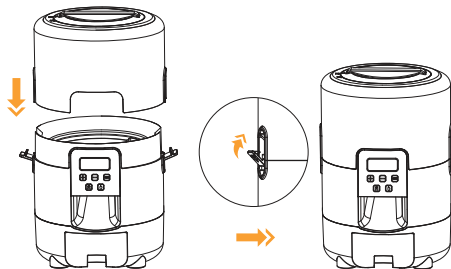


4. Place stainless steel bowl into the food tray. Lift feeder and slide the holder into the groove on the bottom of the feeder.

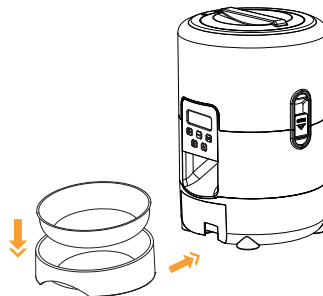


5. Fill the food tank with your pet's favourite dry food. Smooth out the food, put on the lid and turn clockwise to lock.

Note: Suitable for dry food with kibble size ranging from 2-15mm(0.07-0.6in) in diameter. Larger kibble may get stuck at the food outlet.

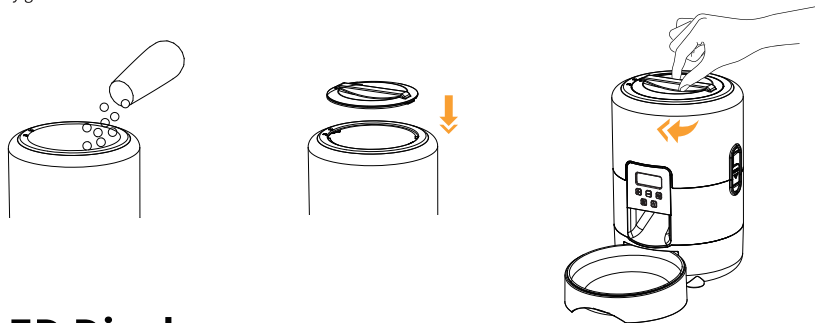

3. LED Display

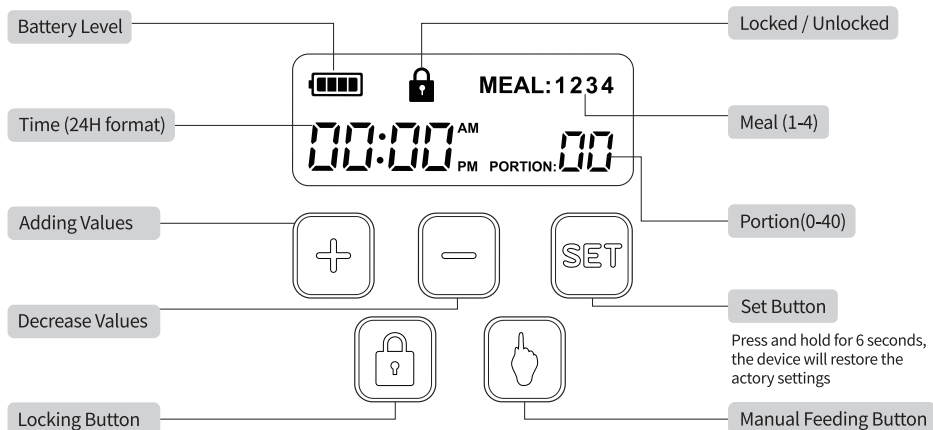

4. Feeding Plan Setup

Locked / Unlocked

After the feeder is powered on, press and hold "  " for 3s to unlock other buttons and screen.

Note: No operation within 30 seconds will lock the screen.



Time Setting

1. Hour Setting

While unlocked, short press the "  " to set the "hour".

Press "  " / "  " to adjust the "hour".



2. Minute Setting

Short press "  " to set the "minutes". Press "  " / "  " to adjust the "minutes".



Meal Setting

 
1. Short press "  ", "MEAL 1" lights up, set the "hour" for the first meal, press "  " / "  " to adjust the "hour".

2. Short press "  " to set the "minutes". Press "  " / "  " to adjust the "minutes".

3. Short press "  " to set the "number of servings". Press "  " / "  " to adjust the "number of servings".

4. Repeat steps 1-3 above, setting 2-4 meals as needed.

Tips: In the above steps, if you press and hold the "  " button for a long time, it will directly return to the unlock standby state.




Manual Feeding


Short press once to manually feed "  " one portion.

5. Disassemble for Cleaning

1. Disconnect the power supply, turn the cap counterclockwise, and lift the top cover upwards.

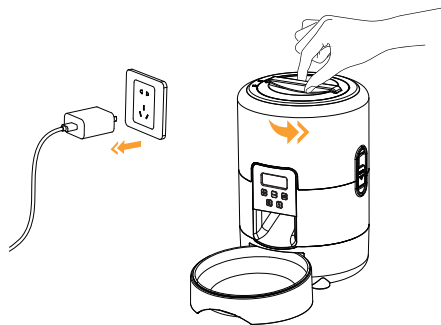


2. Remove the food tank: open the latches on both sides outwards.

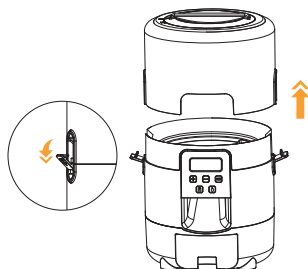


Washable parts.

Note: Do not wash in dishwasher.

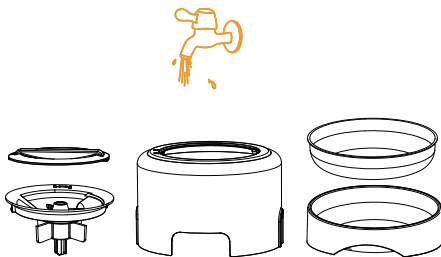

Wipe the main unit.

Note: Do not rinse.

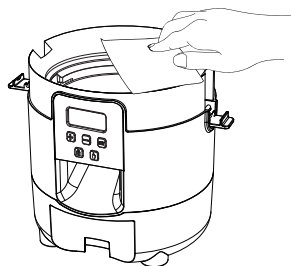

Note: For the health of your pet, cleaning is recommended once a month.

6. Specifications

Capacity	2L	Battery Power	DC/3*D battery
Material	ABS+304 Stainless Steel	Output	5V/1A
Dimensions	7.08*7.08*10.62 in	Weight	1.08 kg / 2.38 lb

7. Troubleshooting

Problem	Solution
Device does not deliver grain	1) Check whether the power supply of the device is normal. 2) Manually feed the pet to check if the grain can be discharged. 3) Check if the pet grain size is within 15mm. 4) Check if the current time is correct and if the feeding schedule is saved. 5) Check if the food outlet is clogged with too much food.
Screen does not light up	Check if the device is battery powered only. Note: When the unit is battery powered only, it will go into standby mode, the screen will not light up, and the feed plan will dispense food normally with the screen off. Click on the knob to wake up the screen.
The MEAL does not light up	When the feeding plan is executed and completed, the MEAL will be hidden and will light up again after 24:00.
Inaccuracy of food delivery	Due to the different granularity of pet food, it will lead to a slight deviation in the amount of food discharged. Note: A large difference in the amount of food dispensed in the first few portions does not mean that the equipment is faulty, after 6 portions of food are dispensed, each portion is almost even.
Low battery indicator	Please confirm that the battery indicator light is on and flashing. When going out or travelling, please replace the batteries in a timely manner to prevent your pet from going hungry.