 

SwitchBot Τηλεχειριστήριο Remote (Λευκό)

SwitchBot · EAN 850007706074

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

SwitchBot Remote


REMOTE

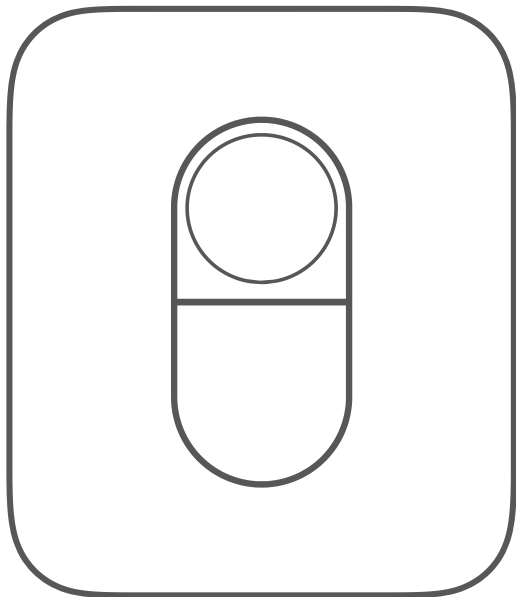



USER MANUAL

Before using the device, please read this user manual.


PACKAGE CONTENTS

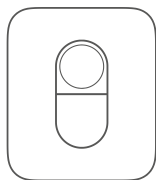


Remote x1
User manual x1
3M adhesive tape x2

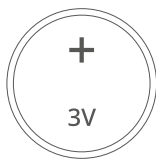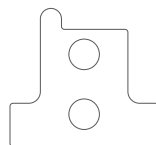


CR2450 Battery
(Installed in the remote)

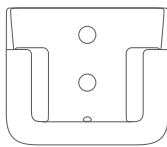

Remote holder x1
(2 x3)
DIY sticker x1

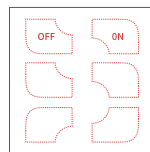


PRODUCT APPEARANCE DESCRIPTION

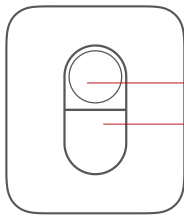


Concave key

Convex key

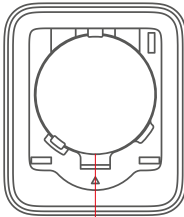

Battery
compartment

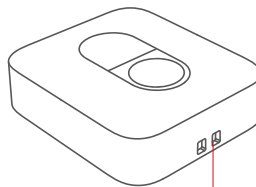

Strap hole

USER INSTRUCTIONS

1. Download the Switchbot app from the Apple App Store or Google Play Store.
2. Open the app and register an account or log in directly if you already have an account.




iOS 11.0+



Android OS 5.0+


3. Open the battery cover, remove the plastic insulating tab from the battery, the indicator will start flashing.

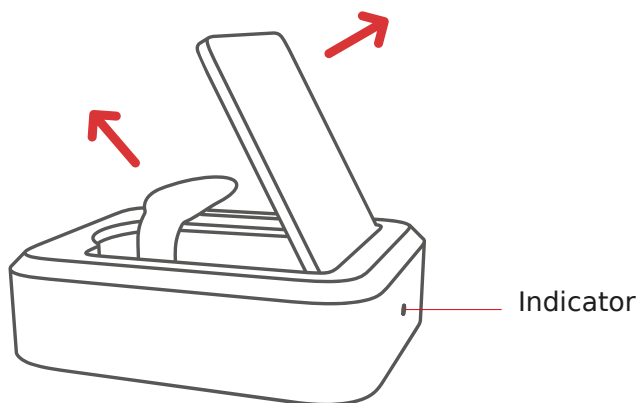


PLACING THE REMOTE

After adding the remote in the SwitchBot app, you can place it anywhere.


Option 1 - place the remote on a table

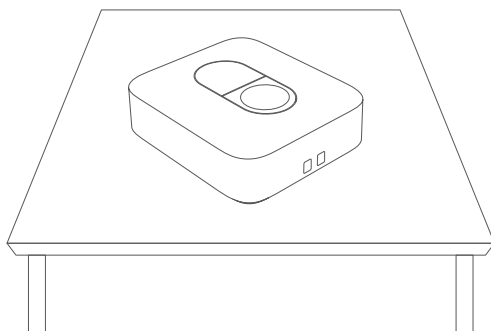


Option 2 - place the remote in the remote holder.
Peel off the tape located on the back of the holder. Stick the holder to a smooth, clean surface, press and hold for 30 seconds to ensure the holder is securely attached. Then place the remote in the holder.

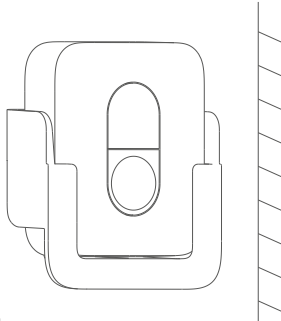

Option 3 - strap hole
Place a lanyard (or strap) in the strap hole to use the device while traveling. Lanyard (strap) is not included - must be purchased separately.

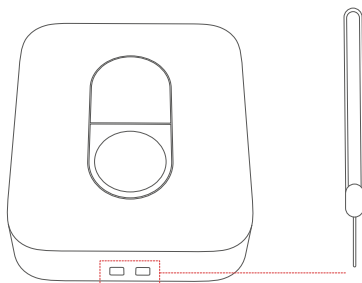

Option 4 - use the DIY stickers, where you can make notes, and then stick them to the remote - personalized use.

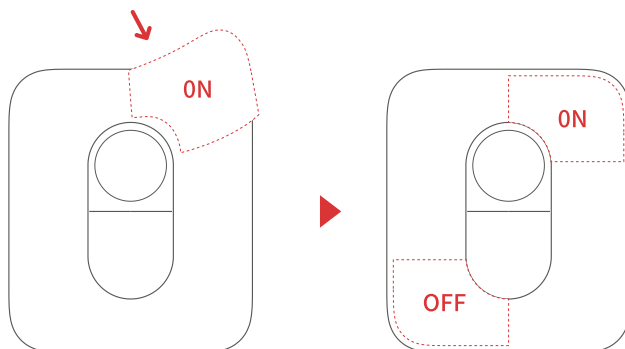

PAIRING THE REMOTE

You can pair the remote with other SwitchBot devices, such as the Bot or curtain control systems (SwitchBot Curtain), to control them.

Pairing instructions:

1. During pairing, place the phone, remote, and target device close to each other.
2. Open the SwitchBot app, click on the "Remote" option on the home page, click on the key icon below the settings button, the phone will start searching for available devices. When the target device appears, select it, and then set up remote control actions for it.

BUTTONS (KEYS) MAPPING

Two buttons on the remote can be individually set for remote control activation for two different devices, one button for each device.


For example, you can set the action of the concave button to close/open the curtain, and the convex button to turn on the Bot device.

BATTERY REPLACEMENT

If a red battery icon appears in the Remote option on the home page of the app, it means that the battery needs to be replaced.

RESTORING FACTORY SETTINGS

Press and hold both buttons on the remote, the indicator will start flashing. Hold the buttons again for 15 seconds and release when the indicator stops flashing. The remote will emit a sound, and the indicator will light up for 1.5 seconds, indicating that the factory settings of the remote have been restored.

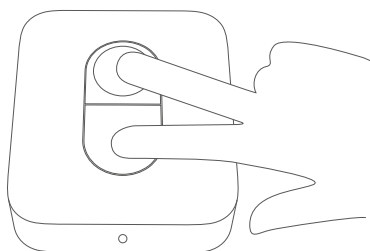

Note: Since all previous settings of the remote will be erased after the reset, it will be necessary to pair the remote again.

SPECIFICATION

Model: W0301700

Color: White

Material: ABS plastic with UV-resistant coating

Size: 37.1 x 43.1 x 13.4 mm (1.5 x 1.7 x 0.5 inches).

Weight (with battery): 17.7 g (0.6 oz.)

Battery: CR2450

Network connectivity: Bluetooth Low Energy

Wi-Fi: 2412 MHz to 2472 MHz (16.22 dBm)

Operating temperature: -20 °C to 60 °C

For the longest and safest possible use of the product, it should be regularly maintained either by yourself or through specialized service points. In the absence of information about necessary maintenance actions in the user manual, you should regularly, at least once a week, assess the physical condition of the product against that of a physically new product. If any discrepancies are detected or noted, you must promptly inform the seller. Failure to properly maintain and respond when a discrepancy is detected and to notify the seller may lead to permanent damage to the product, property, or health for which the manufacturer and guarantor will not be held liable.

Ochrona środowiska



Zużyty sprzęt elektroniczny oznakowany zgodnie z dyrektywą Unii Europejskiej, nie może być umieszczany łącznie z innymi odpadami komunalnymi. Podlega on selektywnej zbiórce i recyklingowi w wyznaczonych punktach. Zapewniając jego prawidłowe usuwanie, zapobiegasz potencjalnym, negatywnym konsekwencjom dla środowiska naturalnego i zdrowia ludzkiego. System zbierania zużytego sprzętu zgodny jest z lokalnie obowiązującymi przepisami ochrony środowiska dotyczącymi usuwania odpadów. Szczegółowe informacje na ten temat można uzyskać w urzędzie miejskim, zakładzie oczyszczania lub sklepie, w którym produkt został zakupiony.



Produkt spełnia wymagania dyrektyw tzw. Nowego Podejścia Unii Europejskiej (UE), dotyczących zagadnień związanych z bezpieczeństwem użytkowania, ochroną zdrowia i ochroną środowiska, określających zagrożenia, które powinny zostać wykryte i wyeliminowane.

Urządzenie wyposażone jest w akumulator, który z uwagi na swoją fizyczną i chemiczną budowę starzeje się z biegiem czasu i użytkowania. Producent określa maksymalny czas pracy urządzenia w warunkach laboratoryjnych, gdzie występują optymalne warunki pracy dla urządzenia, a sam akumulator jest nowy i w pełni naładowany. Czas pracy w rzeczywistości może się różnić od deklarowanego w ofercie i nie jest to wada urządzenia, a cecha produktu.

Szczegółowe informacje o warunkach gwarancji dystrybutora /
producenta dostępne na stronie internetowej
<https://serwis.innpro.pl/gwarancja>

Simplified declaration of conformity:

Manufacturer: Woan Technology (Shenzhen) Co, Ltd.

Address: Room 1101, Qiancheng Commercial Center,

No. 5 Haicheng Road, Mabu Community, Xixiang

Subdistrict, Bao'an District, Shenzhen, Guangdong, P.R. China,
518100

Product: SwitchBot Remote

Model: W0301700

Radio frequency: Wi-Fi: 2412 MHz to 2472 MHz

Maximum radio frequency power: 16.22 dBm

The product complies with the European Parliament and Council Directive 2014/53/EU of April 16, 2014, on the harmonization of the laws of the Member States relating to the making available on the market of radio equipment and repealing Directive 1999/5/EC.

The full text of the declaration of conformity can be found on the website at: <https://files.innpro.pl/SwitchBot>

Product battery specifications

Feature Value	
Battery category General-purpose portable battery	
Battery type Portable button batteries: Lithium	
Contains Cadmium/Lead (>0.002% Cd, >0.004% Pb)	in progress
Net weight (kg) 0.005	
Capacity (mAh) 500	