

 
 
TELESIN

FOR A3/A4 Charging Case 充电盒

USER GUIDE/使用指南

Product introduction


The main function of the multi-functional battery box is to charge the sports camera battery and check the battery level of the camera battery without connecting to the power supply. It can charge 3 batteries at a time and also store 2 TF cards.

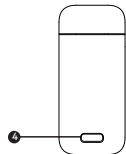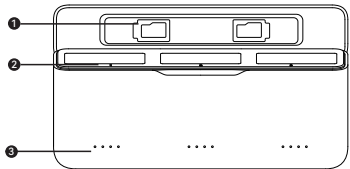

- ① TF cards slot
- ② Battery charging slot
- ③ Power indicator
- ④ Type-C charging port

How to use

Please put the battery into the battery slot, then connect the charging case with the Type-C cable and plug it in to charge.

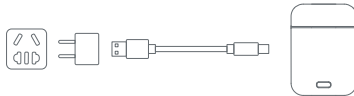

Check the power level (Unplugged power status)

- * Put in the battery, the LED light directly shows the power level.
- * If the battery is already in the box, open the upper lid and the LED light will directly display the charge level.

	One light flashing	< 30%power
	One light solid white	≈30%power
	Two lights solid white	≈50%power
	Three lights solid white	≈75%power
	Four lights solid white	100%power

Charging indicator (Connected to power status)

	Light flashing	Charging
	One light solid white	≈30%power
	Two lights solid white	≈50%power
	Three lights solid white	≈75%power
	Four lights solid white	Fully charged

Specification

Model	SO-BCG-02-TDJ
Operating temperature	0°C~40°C
Input	5V 3A 9V 3A 12V 2A
Output	4.4V 3A
Weight	84g

Notes

1. Do not drop the charger to the ground or place heavy objects on it.
2. Children must be supervised by an adult when using the charger.
3. The charger must be used within a temperature range of 0°C to 40°C
4. Do not use or store the charger in direct sunlight, near hot equipment or other hot places.
5. Do not cover the charger with towels, clothing or other items during charging to avoid fire.
6. Remove the batteries from the charger when not in use to avoid depletion of battery power.

Disclaimer

Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this product. You undertake to use this product only for legitimate and lawful purposes. You understand and agree that ("Telesin") shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations. The warranty period for TELESIN products begins 6 months on the day you receive the product.