

TELESIN

Fun Shot Magnetic Grip2



Scan to download ReefColor and
access hidden tricks for your Master
Grip

Foreword

Thankyou for purchasing Telesin product.

Important Notes

Beforeusing this product, read this manual carefully.

 
Keep the manual properly.If other users wanttousethis product,give this manual with the product.

Note all the warnings and follow all the instructions in this user manual.

Do not disassembleor damagethe product.If theproduct is deformed or getswet,stop using itimmediately

Keep this product out of reach of children.

Product introduction

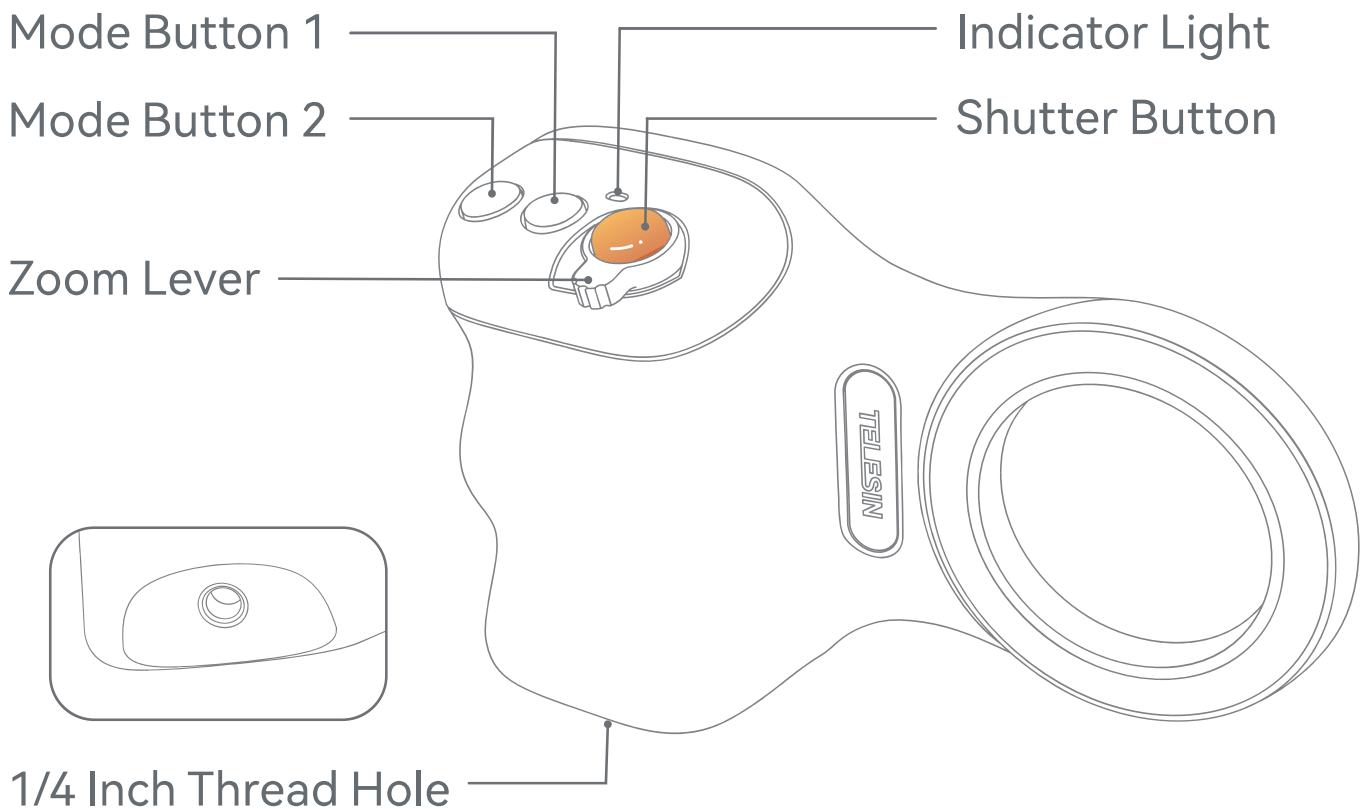

Zoom Lever: During photo and video shooting, you can zoom in and out by sliding the lever.

Shutter Button:


1. Long Press: Turn the device on/off after pressing for 2 seconds.
2. Single Press: Start taking photos/recording videos.
3. Half Press double Tap: Switch between front and rear cameras.
4. Half Press: Focus

Mode Button:

1. Switch between shooting modes.
2. In landscape mode, after half-pressing to focus, the mode button can adjust the exposure.

Operation Instructions


1. Attach the product to the back of the phone. (For compatible magnetic models, please refer to the product specifications.)

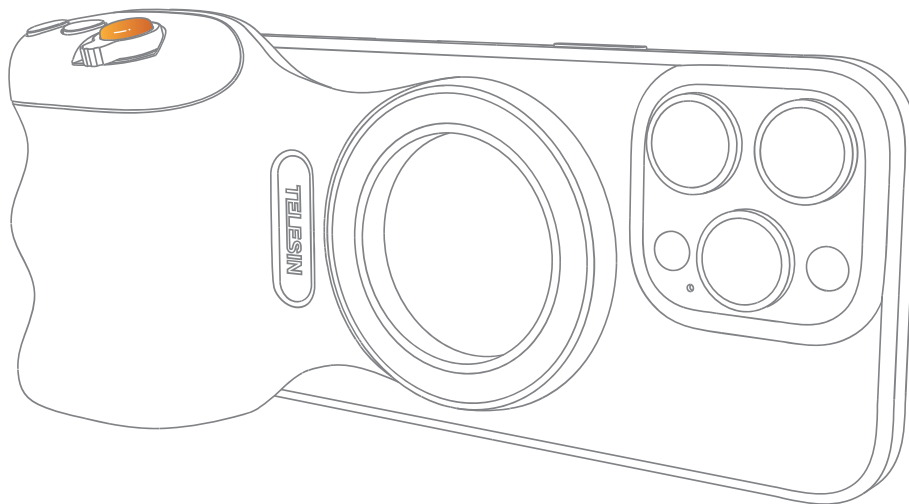

2. Power on by holding shutter for 2s, connect via Bluetooth TELESIN_MG2. Auto shut-off if not connected within 2 mins.

3. iPhone: Bluetooth enables shutter only. First use of other functions requires enabling Zoom in Settings > Accessibility

Go to Settings-Accessibility-Zoom-ZoomRegion(FullScreen Zoom)-Turn on Zoom

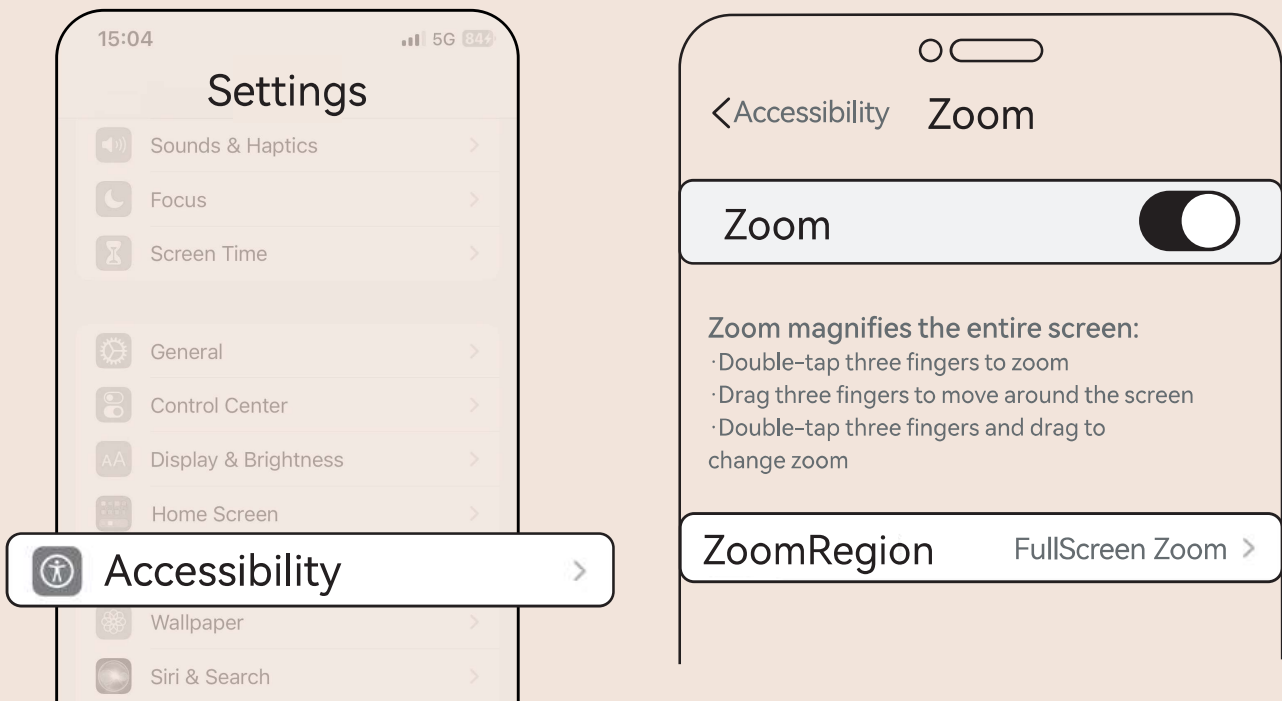

* (Double-tap with 3 fingers to restore).

Power On/Off

Power On: Press and hold the remote control for 2 seconds to turn it on. The indicator light will flash, entering Bluetooth pairing mode.

Power Off:

1. In the on or sleep mode, press and hold the shooting button for 2 seconds. The indicator light will flash quickly three times and then go out, turning off the remote control.

2. If left in sleep mode for 30 minutes, the remote control will automatically turn off to save power.
3. If not paired within 2 minutes after powering on, it will automatically power off.

Quick Wake-up

Screen Status	Black Screen All States
iOS、Samsung、 Harmony、 Some Android Systems	Long Press Mode Button 1
vivo	Long Press Mode Button 1-First Light Up Screen. Long Press Mode Button 1 Again

Entering Sleep Mode

1. Auto-sleep after 30min inactivity post-pairing.
2. Disconnects via phone settings, distance, or Bluetooth off, put it to sleep. Auto-off after 30min.

Waking from Sleep Mode

Press any button to wake up.


1. Auto-reconnects if last paired phone's Bluetooth is on.
2. If the previously paired phone's Bluetooth is off and there's no pairing within 2 minutes, the device will enter sleep mode and shut down after 30 minutes.

Low Battery Reminder

When the battery is low, and all indicator lights turn red, it indicates that the battery level is below 10%. Please replace the battery.

Note

In complex environments or crowded scenarios, please be sure to use the product with a magnetic phone case and a phone lanyard. Do not use the product in high-impact or other sports scenarios.

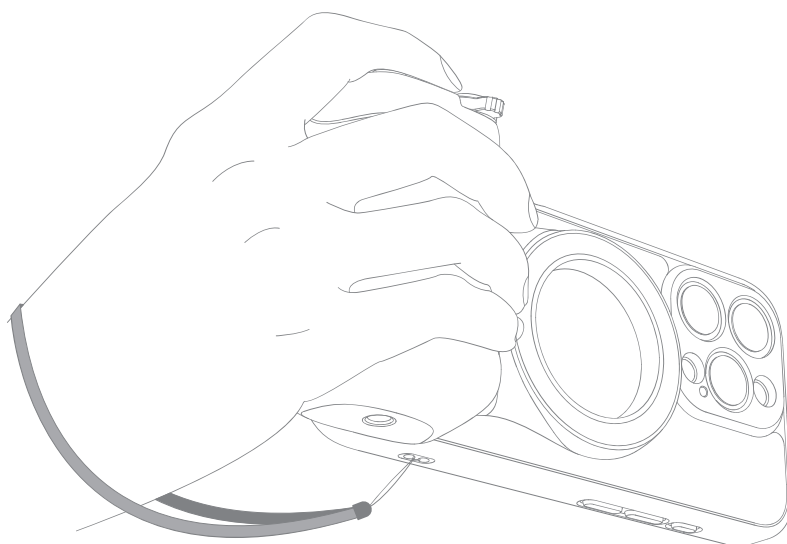

This grip is suitable for use with iPhone 12 and above. If your phone is not one of these models, or if you use a phone case, you can choose one of the following two options:

1. Use a strong magnetic phone case

(The magnetic phone case is not included in the set, please purchase separately)

2. Use a magnetic sticker

Choose a smooth and flat phone case, attach the metal ring to it, press gently, and then wait for 12 hours before use. The oily material in the phone case, such as liquid silicone or patterned cases, can affect adhesion, so they are not recommended. Do not attach the metal ring directly to the back of the bare phone!

Do not reapply the magnetic plate to prevent a reduction in adhesiveness!

Product Parameters

Material:	ABS+PC+Aluminum Alloy
Product Size:	124.7mm*79.6mm*37.7mm
Product Weight:	109g
Battery nominal voltage:	5V $\approx$ 1.0A
Bluetooth Compatible Devices:	Apple, Android, HarmonyOS devices
Magnetic compatibility:	iPhone 12 to 16 series. Other models require a magnetic phone case, or an adhesive magnetic plate.

Warning

If consumers use a power adapter for charging, they should purchase a power adapter that is either compatible with the device and meets the corresponding safety standards or has obtained CCC certification. After charging is complete or when not charging, please disconnect the adapter from the device and unplug the charger from the power outlet. Do not place the battery or device near heating appliances such as microwave ovens, ovens, or radiators. Overheating of the battery may cause an explosion. Do not disassemble or modify the battery, as this may lead to battery leakage, overheating, catching fire, or bursting. If the battery leaks, avoid letting the leaked liquid come into contact with your skin or eyes; if it does get on your skin or in your eyes, rinse immediately with clean water and seek medical treatment at a hospital. If the battery is in use, exhausted, or damaged, do not continue to use it to avoid electric shock or fire.

Do not throw the device into a fire, as this may cause the battery to catch fire or burst. Replacing the battery with an incorrect model poses an explosion risk—always dispose of used batteries in accordance with the instructions. Do not throw the battery pack into a fire or heating stove, or subject it to mechanical compression or cutting, as these actions may cause an explosion. Placing the battery pack in an extremely high-temperature environment may lead to explosion or leakage of flammable liquids or gases; subjecting the battery pack to extremely low atmospheric pressure may also result in explosion or leakage of flammable liquids or gases.



Declaration
of Conformity

Disclaimer

Please read this statement carefully. Once you use this product, it is deemed that you fully recognize and accept this statement. Before each use, please carefully check the product. If it is damaged or deformed, do not use it. By using this product, you acknowledge and agree that you will be fully responsible for the actions and possible consequences of using this product. You promise to use this product only for legitimate and legal purposes. You understand and agree that Telesin Digital Co., Ltd. (hereinafter referred to as "Telesin") will not be liable for any abuse, adverse effects, damages, injuries, penalties or other legal consequences directly or indirectly caused by the use of this product. Users should follow the usage precautions mentioned herein and others. Within the scope of national laws and regulations, the right to interpret and modify this commitment belongs to Telesin. The Telesin warranty period starts from the day you receive the goods and enjoys a 6-month warranty service.

www.telesin.com