

Προβολέας Ultima Nova C40

Ultimea · EAN 4262533460058

Machine translation from Polski. In case of doubt the manufacturer's original document prevails.

USER MANUAL

SMART PROJECTOR NOVA C40

Model No: U0322

Nova C40

1 Safety Instructions

Before using the device, please read the entire user manual.

DO NOT make any changes or set parameters that are not described in this manual.

In case of bodily injury, data loss, or damage caused by non-compliance with the instructions, the warranty is void.

TO HELP

support@ultimea.com

Configuration

- °`To avoid bodily injury or damage to property, strictly follow the instructions contained in this user manual and do not use the product in any other way.
- °`To reduce the risk of fire and/or electric shock, do not expose the device to rain or moisture. Do not place objects filled with liquids, such as vases, on the device.
- °`Do not place the device on soft surfaces, such as tablecloths or carpets, as this may pose a fire hazard.
- °`Do not place the device in areas exposed to excessive dust and dirt or near devices that generate strong magnetic fields.
- °`To prevent overheating, do not block or cover the ventilation openings.
- °`Never place this device in an enclosed space. Always ensure sufficient space around the device to allow for ventilation.
- °`Avoid excessive exposure of the device to direct sunlight, heat, large temperature fluctuations, and moisture. Avoid extreme temperatures.
- °`During prolonged operation of the device, its surface may become hot. In such cases, immediately turn off the device and disconnect the charger from the power supply. Resume operation after the device has cooled down.
- °`Always handle this device with care. Avoid touching the lens.

- °` Do not allow children to operate the device without supervision.
- °` Do not place heavy or sharp objects on the device.
- °` Protect the power cord from being stepped on or pinched, especially at plugs.
- °` Avoid strong vibrations. They may damage internal components.
- °` In case of thunderstorms or when the device is not in use for an extended period, disconnect it from the power supply.
- °` Use only the power supply provided.
- °` Before unplugging the power cord from the outlet, turn off the device.
- °` Before connecting or changing any connections, ensure that all devices are disconnected from the power outlet.

04

- °` Never touch the power cord or plug with wet hands.

Repairs

- °` Do not attempt to repair this device yourself. Repairs should only be entrusted to authorized service centers.

Hearing Safety

- °` Improper maintenance may cause injury to persons or damage to the device.
- °` To prevent hearing damage, do not listen to music at high volume for extended periods. Set the volume to a safe level.

Caution

- °` Do not look directly at the light beam. Bright light may damage your eyesight.

- °` Since the Google TV system interface will be regularly

Cleaning updated, and the appearance of the user interface will change with software updates, there may be some

- °` Use a soft, lint-free cloth. For differences between the interface and the content of the instructions. In the event of

cleaning, never use liquid, gas, or discrepancies between the instructions and the user interface

flammable cleaning agents. In the finished product, please refer to what is actually

- °` Do not use any liquid cleaning agents for displayed on the screen. cleaning the lens to avoid damaging the coating on

the lens. °` Gently wipe the surfaces. Be careful not to scratch

the surfaces. °` Use lens cleaning paper to clean the lens.

05

2 Package contents 3 Product overview

USER MANUAL Lens

NOVA C40 SMART PROJECTOR Power button

Model No.: U0322

Nova C40

Radar sensors Front infrared receiver

ToF infrared

Smart projector Remote control User manual Speaker

Nova C40 (Batteries not included Gimbal
in the package)

Warranty card HDMI cable Power cable

HDMI port AV port

USB port USB HDMI AV IR

Rear infrared receiver

3.5 mm AUX jack

AC power input

1/4 inch mounting screw hole

06

4 Remote control LED indicator

LED Status Description

Signal source Blue Power on

Power button

Activation Red Standby mode

Auto Focus Google Assistant Off Power off

Projector home

Navigation buttons OK 5 Getting started

Projector home

Google TV Prepare the remote

Back Configuration °`Open the battery compartment cover of the remote. Mute °`Insert two
AAA batteries. Make sure

Volume Focus the polarity (+/-) matches
the markings, then replace

Menu list the cover. Youtube Netflix °`To pair the remote with the projector

Prime Video Disney+ Nova C40, follow the on-screen

instructions.

°`The distance between the remote control and the projector should not exceed 10 m/33 feet. 07

°`Place the Nova C40 device on a stable, flat surface.

Turning On/Off

°`Connect the power plug using the included power cable before the wall or screen.

°`Please adjust the distance between the Nova C40 projector and the projection surface to achieve the desired image.

°`Press the power button once or the power button on the remote to turn on the device.

°`Press the power button twice or the power button on the remote to turn off the device.

Projection Distance and Image Size

Image Size Distance (m)

(inches) Distance (ft)

Connect the power cable to the socket. Press the power button to turn on the projector.

80 2.22 7.28

90 2.50 8.20

100 2.78 9.12

120 110 3.05 10.01

100 110 " 120 3.33 10.93

90 " "

80 "

"

2.22

2.50

2.78

3.05

3.33

08

°`Press the button to go to the main menu of the projector, then select [Settings] -> [Projection Settings].

Note: The stated image size refers to the diagonal length of the image, not its width.

°`Select the [Keystone Correction] option and adjust the projector to achieve a proper image.

Auto Focus

°` Aim the device at the appropriate projection surface or wall, and the Nova C40 will initiate autofocus until a sharp image is obtained.

Manual Focus Adjustment

°` Press the “F+” / “F-” buttons on the remote to manually adjust the focus. Watch the focus icon closely until the image becomes clear.

Image Distortion Correction

°` The Nova C40 projector supports automatic keystone correction, vertical correction, horizontal correction, and remote corner correction. Automatic correction

°` In case of image distortion displayed by the projector, the device will activate the automatic keystone correction function to restore a rectangular shape to the image. If you notice that the automatic keystone correction is not working as well as before, follow the instructions below to optimize it.

09

Horizontal Correction

Resetting Keystone Correction

To restore default settings, press the button to go to projection settings. Select [Settings] -> [Projection Settings] -> [Reset Keystone Correction] and press OK.

Zoom In / Zoom Out

Press the button to go to projection settings. Select [Settings] -> [Projection Settings] -> [Zoom In/Out]. Using the remote, change the image size. If the displayed image is stretched or distorted along both axes due to the projection angle, press the button to go to the main menu of the projector, then select [Settings] -> [Projection Settings] -> [Corner Correction], select the desired corner, and press the left or right button on the remote to make adjustments.

10

6 Projection Settings 7 Pairing the Remote

Turn on the projector, and the Bluetooth remote pairing page will appear. Follow the on-screen instructions to complete the pairing.

□ Keep the remote close to the projector.

□ Press and hold the  and  buttons simultaneously for about 10 seconds. The projector at the front of the desktop. Front projection on the ceiling.

] When the message "Connected successfully" appears on the screen, the LED on the remote will turn off, and the remote will be paired.

Projector at the back of the desk Rear projection on the ceiling

Press the button , select [Settings] -> [Projection settings] -> [Projection mode], and then choose the option Front projection on the desk/Rear projection on the desk/Front projection on the ceiling/Rear projection on the ceiling. Preparation Connecting Connected

11

8 Language selection Google TV settings

After pairing the remote, you will be redirected to the language selection page. Use the remote buttons or to select the language. Then press the button to proceed to the next page. After selecting the "Continue" option, you will be redirected to the quick setup page for Google. Follow the instructions displayed on the Google TV device screen to complete the setup, including connecting to Wi-Fi and signing in to your Google account. Once the setup is complete, the Google TV home screen will appear. You can download streaming apps and start watching your favorite content. Welcome English (United States) Note:

Afrikaans A Google account is required to use Google TV. If you do not have one, create an account before continuing. Català

Čeština

Dansk

Deutsch

English (Australia)

12

Play audio through external 9 Wireless connection

audio devices via Bluetooth Note: The Chromecast feature works only on Google TV. To connect Bluetooth speakers or headphones in Google TV, go to [Settings] -> Cast from websites and apps that support Chromecast

[Remotes and accessories] -> [Add accessory]. Search for your Bluetooth device and select it to pair. (on Android/iOS devices)

Note: The Bluetooth connection must be established ☐ Ensure that your device and Google TV are connected to the same

within Google TV. Wi-Fi network and that you are using the latest version of the app supporting Chromecast. ☐ Open a website or app that supports Chromecast. } Press the cast button and select "4K Google TV

Stick". Displaying from Chrome

Browser tab (for computers)

☐ Ensure that your computer and projector are connected to the same Wi-Fi network.

□ Click the "Cast" button in the upper right corner of the Chrome browser tab, and then choose from the available sources whether you want to cast the tab content or the entire screen. ↳ Select "4K Google TV Stick" to start casting. Add a new user with a Google account Add a new Google account in Google TV to facilitate login and enhance payment security. Go to [Settings] ->

[Accounts and login] to add or change an account. 13

Screen mirroring from Android devices Screen mirroring from iOS devices

- Ensure that your iOS devices and projector are
- Ensure that your Android devices and projector connected to the same Wi-Fi network. are connected to the same Wi-Fi network. □ Go to the "Apps" tab in the main menu, and then
- Download the "Google Home" app on your Android device. search for and download the "AirScreen" app. ↳ Open the "Google Home" app, select "4K Google TV Stick", and then tap "Cast my screen".

Apps

11:36 11:36 11:36

Devices 4K GoogleTV Stick

Google Home

Google LLC AirScreen

Uninstall Open

Google Home

1 of 5 ↳ Open the "AirScreen" app and follow the instructions

When any household member adds a device, it appears here

Romain Guy displayed on the screen in the AirScreen app. Add device Google·Featured photos

Local devices Open remote Add to a room

Cast my screen

4K GoogleTV Stick

4K GoogleTV Stick Cast my screen

Screen Mirroring

14

10 Wired connection

Play from USB drive

With the Nova C40, you can listen to music, watch movies, and photos

or install apps saved on a USB drive. Play from Google TV

□ Connect the USB drive. □ Go to the "Apps" tab in the main menu, then search for and download the "File Manager" app. ↓ Open the "File Manager" app, find the USB drive

and select the file. □ Press the button to start playback. Play from HDMI source Play from projector

□ Connect the USB drive. The Nova C40 projector supports connections with various devices

□ Press the button on the remote to select the [USB] option, that output HDMI signals, such as a computer, DVD player, and then press set-top box (STB), game console, or other devices. ↓ Select the file you want to play from the files and folders menu. □ Connect this projector to the device outputting □ Press to start playback. HDMI using an HDMI cable. □ Press the button on the remote to select the [HDMI] option,

and then press . 15

Playback via external devices Standard Maintains the natural appearance of colors

audio using AUX cable with a balance of warm and cool tones

Mode Light Provides greater detail

□ Connect one end of the 3.5 mm AUX cable to the AUX jack in this image image and clarity of colors

projector. Soft Provides warm tones in low light

□ Connect the other end of the 3.5 mm AUX cable to the AUX jack Personal Manual adjustment of brightness, contrast,

in headphones or external speakers. saturation, sharpness, and hue

↓ Start playback on the projector. Cool Provides a cool color temperature

Temp. Normal Provides a cool color temperature

Warm Provides a cool and warm temperature

Personal Manual adjustment of red,

green, and blue colors

Standard Provides standard sounds

Mode Music Provides richer sound

11 Auto Focus sound Cinema Provides sound like in a home theater

Personal Manual adjustment of sound

Press the button, and the projector will automatically adjust each frequency band focus. Off

Timer 10min Low power consumption and longer

turn off 20min projector lifespan

30min

12 Shortcut menu 60min

EDID 1.4

Version EDID 2.0 Change HDMI EDID version

Press the button to display additional menu items on EDID

the projector. HDMI

EDID 2.1

16

13 Companion mode

Press the power button to go to the shutdown options,

select Companion Mode, and then go to settings. 14 Specification

Operating system: Google TV 11.0

Native resolution: 1920 × 1080p

Speakers: 2 × 5 W

Projection ratio: 1.25:1

Aspect ratio: 16:9 / 4:3

Recommended screen size: 80–120 inches

Power supply: 100–240 V AC, 50–60 Hz, 1.5 A

17

WARNING

Any changes or modifications not expressly approved by the party responsible for compliance

with regulations may void the user's authority to operate the device.

WARNING: This device has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection