 


Chapter 04 Screen Adjustment

On-Screen Display Menu Introduction

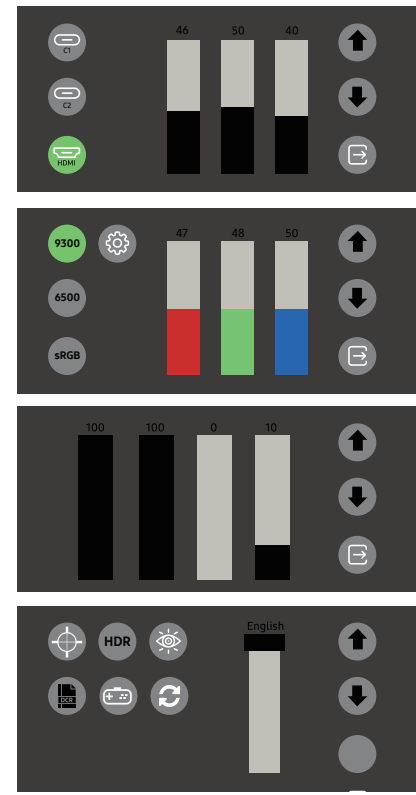


Chapter 05 Setting Up(Windows10)

Extend Mode / Duplicate Mode/ Display Mode

Way1: Set on the device’s Display Settings

 
- A: Verify that your cables are connected properly to the new monitors.
- B: Right-click anywhere on your desktop and select Display settings to open the Display page.
- C: Scroll down to Multiple displays, then select an option from the drop-down list to determine how your desktop will display across your screens. For the largest work area, select Extend desktop.

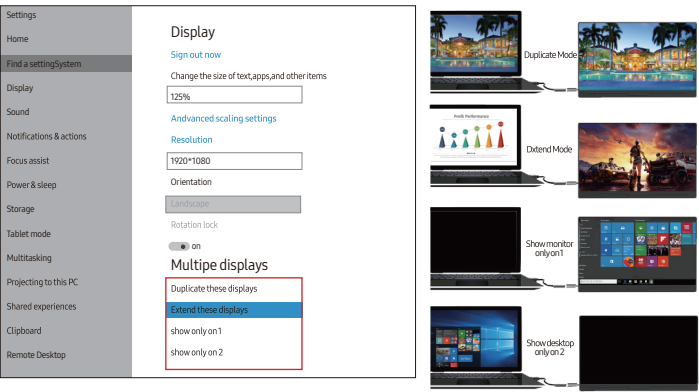

Note: If you cannot see the additional monitor(s) listed, click Detect. If does not work, try restarting your computer and do steps again.


Way2: Set via Windows key + P keyboard shortcut

 - A: Enter the “Windows” key and “P” keyboard at the same time.
- B: select an option from the drop-down list to determine how your desktop will display across your screens.

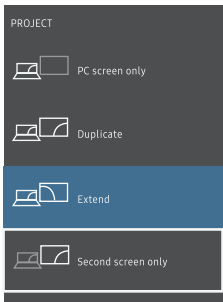

Rotate the Screen

 - 1: Right-click anywhere on your desktop and select Display settings to open the Display page.
- 2: Under the "Select and rearrange displays" section, select the monitor that you want to adjust.
- 3: Under the "Scale and layout" section, use the Orientation drop-down menu to select Landscape or Portrait screen.

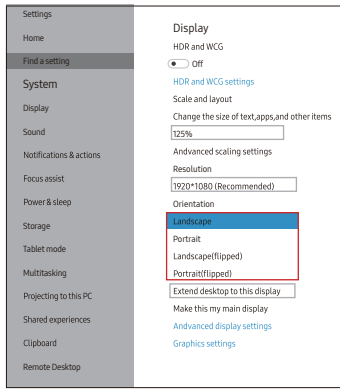

Chapter 06 Q&A

Important Tips:

If you find any issues with your monitor, please contact us at help@uperfect.com before returning it. We will help you solve your problems and try our best to make you satisfied. We take full responsibility for our products. If there are any defects that cannot be solved, we will refund or send you a replacement.

Q: Why does my monitor not turn on?

- 1. Please check whether the Type-C port of your device is a full-featured Type-C port, which can support power and signal transmission. If not, please use HDMI to Mini HDMI cable to transmit video signal, and use USB-C to USB-C cable to connect external power supply.
- 2. This may be caused by insufficient power supply. The minimum power requirement for the monitor is PD 18W. Especially when you need to run the display at 2K 120hz, the power consumption will be relatively large, it is recommended to use an external power supply, otherwise the monitor may not work properly.
- 3. If the above steps still cannot solve your issue, please feel free to contact us.

Q: It says "no signal", what to do?

- 1. When connecting with a USB-C cable, make sure your device supports USB3.1./Thunderbolt 3. If not, please add a Mini HDMI to HDMI cable for signal transmission.
- 2. Please make sure to use the original cables.
- 3. Please try another device. If it still fails, please tell us for a replacement.

Q: Why does my monitor turn off when I turn up the brightness?

This is caused by insufficient power supply. Turning up the brightness will increase the power consumption, which can be solved by an external power supply.

Q: Abnormal conditions occurred - such as a splash screen, spots when using the monitor or constant restarts.

- 1. It is generally caused by an insufficient power supply. The monitor require high power support. Please use the original cable included to power the monitor.
- 2. If you use a mobile power bank to power the monitor, please confirm whether the power of the power bank reaches 30W or more. In addition, if you need a power bank, please contact us at Aarr-customerservice@hotmail.com
- 3. If none of the above solutions work, please try another device. If it still failed, please contact us for a replacement.

21.5 inch Portable Monitor
User Manual

 


In order to ensure your safe use of this product, please read this manual carefully before using this product and keep it properly.

Email: help@uperfect.com

Chapter 01 Preparations


Checking the Package Contents

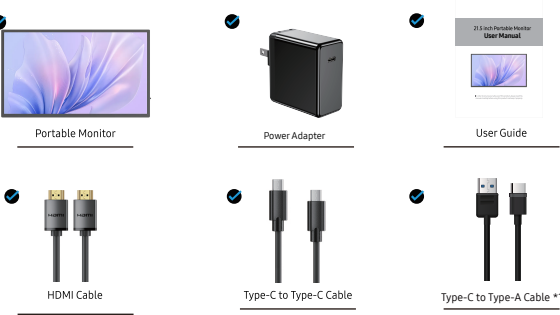


Note:

- If any of the above items is damaged or missing, please contact us immediately. (help@uperfect.com)
- The appearance of the components may differ from the images shown.

 The functions of the bracket & keyboard

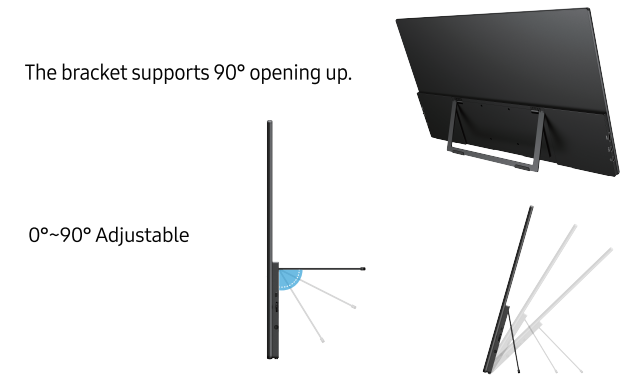

Interface Function Introduction

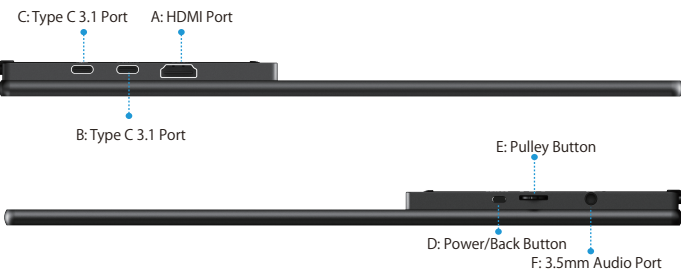 

A: HDMI Port
For signal transmission.

B&C: USB Type-C Ports
Full featured Type C port. For signal and power transmission.

D. Power/Back Button
Long press to turn on/off the monitor. Short press to go back to the previous step.

E: Pulley Button
Scroll the pulley button up/down to open the volume/brightness menu, then scroll up and down to adjust the volume/brightness. Press the pulley button to enter the OSD (On Screen Display) menu. Scroll the pulley button up and down in the menu to control the cursor, and press the pulley button to Confirm.


F: 3.5mm Audio Jack
For headphones.

Chapter 02 Specifications

Color	Black
Model	M215E02
Touch Screen	10-point Touchscreen
Resolution	1920*1080
Brightness	280 cd/m²
Color Gamut	72% NTSC, 100% sRGB
Display Color	16.7M(6bit+FRC)
VESA	M4*5mm
Interfaces	HDMI Prot
	Type C 3.1 Port * 2
	3.5mm Audio Port
Panel Type	IPS
Refresh Rate	120HZ
Contrast Ratio	1300:1

Chapter 03 Connecting

 
Connection for Touch
Type-C Connection



Note: Ensure that your device's Type-c port is a full-featured Type-C 3.1 port.



 Display Mode

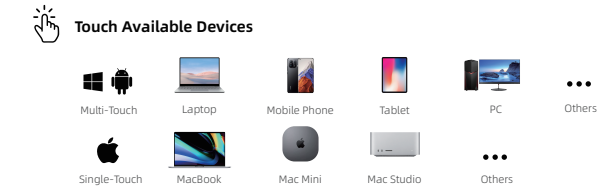

Note: Phones and tablets need to have full-featured Type-C 3.1 port to enable touch.



Chapter 07 Service Support

Dear Customer,
Thank you for purchasing the Portable USB Monitor!
We offer 100% money back guarantee in 30 days and 90 days replacement, 12 month warranty for any issue, professional tech support to ensure no-worry service.
Any query or problem, please contact us via help@uperfect.com

