 


Chapter 04 Screen Adjustment

On-Screen Display Menu Introduction

Setting- Brightness

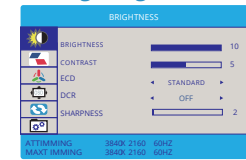 


How to adjust brightness/sound with shortcut keys?

-Quickly adjust the volume: Press the volume "-" button to decrease the volume, and then press the volume "+" to increase the volume.

-Quickly adjust the brightness: Press the volume "+" to increase the brightness, and then press the volume "-" to decrease the brightness.


OSD SETTING

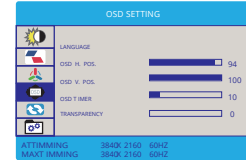

How to set language?

1. Press the MENU button to activate the setting.
2. Scroll the "+" / "-" button up and down to toggle between options in the Menu, choose "Language".
3. Press the MENU button and choose the language you need.

 Setting- Color Temp

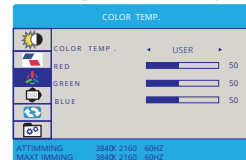

How to adjust the contrast/color temperature?

1. Press the MENU button to activate the setting.
2. Scroll the "+" / "-" button up and down to toggle between options in the Menu, choose "contrast" / "color temperature".
3. Press the MENU button and choose the contrast/color temperature you need.

Setting- Reset



How to turn on the HDR function?

1. Press the MENU button to activate the setting.
2. Scroll the "+" / "-" button up and down to toggle between options in the Menu, choose "HDR MODE".
3. Press the MENU button and turn on the HDR MODE.

 
Chapter 05 Setting Up(Windows10)

Extend Mode / Duplicate Mode/ Display Mode

Set via Windows key +P keyboard shortcut


A: Enter the "Windows" key and "P" keyboard at the same time.

B: select an option from the drop-down list to determine how your desktop will display across your screens.

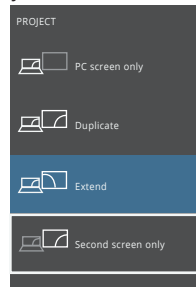

Rotate the Screen

 - 1: Right-click anywhere on your desktop and select Display settings to open the Display page.
- 2: Under the "Select and rearrange displays" section, select the monitor that you want to adjust.
- 3: Under the "Scale and layout" section, use the Orientation drop-down menu to select Landscape or Portrait screen.

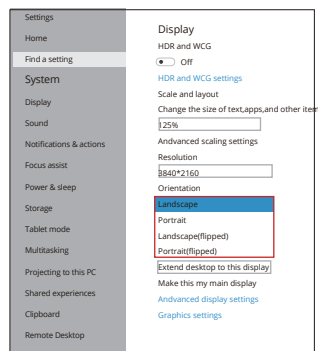

Chapter 06 Q&A

Q: The monitor keeps switching and flicker, although it connected to outlet for extra power supply.

A: This situation is generally caused by insufficient voltage; Please check whether the factory-packed cables are used, and then check whether an external PD power supply is used. The power consumption of 4K monitor is relatively larger, and an external PD power supply is required.

Q: Are vesa mount screws included? if not what are the exact specifications for the vesa mount screws needed?

A: The vesa mount screws are not included, and the specifications are 75x75@M4.

Q: Can we supply energy from power bank without using self power adapter?

A: That depends on the output of the power bank, because this monitor requires at least 15W power supply. And if the output of your power bank is only 10W, this power bank will not supply enough energy for the monitor. The output of power adapter we provide is 30W, so a power bank with output above 30W is recommended.

Q: Is it possible to set the default contrast? I have to adjust each time from 10% to 70%, each time I connect to my Macbook Pro laptop.

A: How to save the settings of brightness, volume, etc.

·When the HDMI port is used for display and monitor powered by PD port, all the settings will be saved automatically.

·But when the Type-C port is used for display without external power supply, brightness and volume will not be saved after the monitor is powered off, this design is to avoid that the monitor doesn't work when connected to phones which could not provide enough power for monitor with high brightness setting. So to avoid the brightness is reset everyday, please give the monitor an external power supply with "PD" port and do not cut off the power.

Actually, all the portable monitors on Amazon all have this same design.

Q: Does the monitor support Free Sync function?

A: Yes, it does. Please note that this feature must be in "Game Mode" mode. Please refer to the "Introduction to OSD" in the instruction manual, and set the display to "Game" mode.

 
Q: The output resolution of the monitor is less than 4k 60hz, what is the reason?

- A:** 1. Check the display settings on the device and adjust the resolution to 4k;
2. Connect to another device and check if the output resolution is 4k;
3. If it still cannot be adjusted, please check whether the graphics card of the device supports 4K. If your graphics card does not support 4K, the output resolution of the monitor will also be lower than 4K;
4. If the above methods can not solve the problem, please contact us. Our professional team will give you a satisfactory answer within 12 hours.

Q: The power indicator is on, but the screen is black or the screen is fixed.

- A:** 1. Please use the factory-packed cables we have equipped;
2. Please check whether there have video signal transmission;
3. Check whether the monitor is in the default extended mode, please change to duplicated mode/mirror mode, and then the screen will be displayed;
4. If possible, please try to connect to another device.
5. If the above methods can not solve the problem, please contact us. Our professional team will give you a satisfactory answer within 12 hours.

UPERECT® Przenośny monitor Instrukcja obsługi

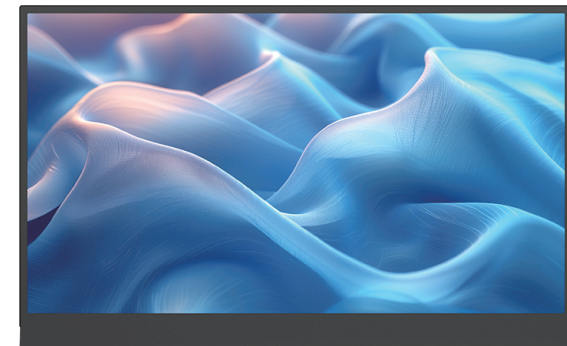


Aby zapewnić bezpieczne korzystanie z tego produktu, przed jego użyciem należy uważnie przeczytać niniejszą instrukcję i odpowiednio ją przechowywać.

Email: support@uperfect.com

Rozdział 01 Przygotowanie

 
Sprawdzanie zawartości opakowania

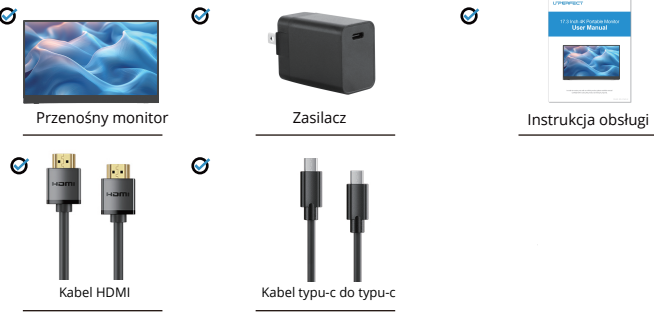


Uwaga:

- Jeśli którykolwiek z powyższych elementów jest uszkodzony lub go brakuje, prosimy o natychmiastowy kontakt. (support@uperfect.com)
- Wygląd komponentów może różnić się od przedstawionego na zdjęciach.

 Montaż obudowy stojaka

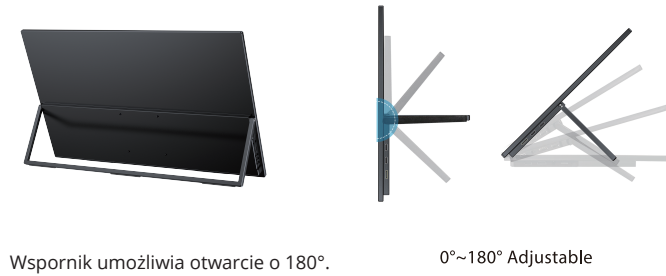

Interface Function Introduction

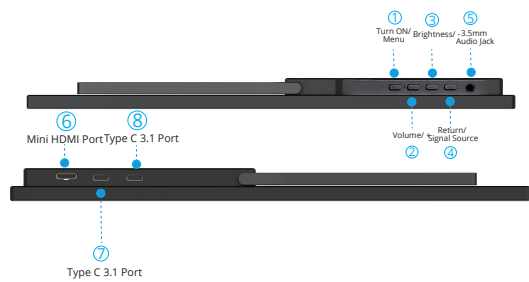 

- 1. Turn ON/OFF&Menu**
Long press to turn on/off the monitor.
Press to enter the menu or confirm your choice.
- 2. Quick adjust Volume/ +**
Press to quick adjust Volume
Press to Next Step/ Increase
- 3. Quick adjust Brightness/ -**
Press to Former Step/ Decrease
- 4. Return/ Quick adjust Signal Source**
Press to Return
Press to quick adjust Signal Source
- 5. 3.5mm Audio Jack**
Headphone/ Sound Box Extension Port
- 6. Mini HDMI Port**
Audio and Video signal transmission
- 7&8. Type C 3.1 Port**
For signal and power transmission
- 9. VESA**
4-M4*4mm VESA holes


Chapter 02 Specifications

Color	Black
Brand	UPERFECT
Resolution	3840*2160
Brightness	500 cd/m²
Color Gamut	100% Adobe RGB
VESA Mount	Support
VESA Standard	75mm*75mm M4*4mm
Interface	Mini HDMI Port
	Type C 3.1 Port * 2
	3.5mm Audio Jack
Display Color	8-bit
Panel Type	IPS

Chapter 03 Connecting

TYPE-C signal transfer

 Note: 4K monitor needs higher voltage power, for a more stable power supply, it is recommended to use our original PD adapter to power.

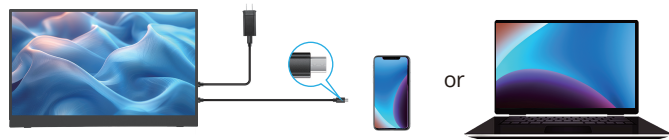

HDMI signal transfer

Note: 4K monitor needs higher voltage power, for a more stable power supply, it is recommended to use our original PD adapter to power.



Chapter 07 Service Support

Dear Customer,
Thank you for purchasing the Portable USB Monitor!
We offer 100% money back guarantee in 30 days and 90 days replacement, 12 month warranty for any issue, professional tech support to ensure no-worry service.
Any query or problem, please contact us via support@uperfect.com

