

Inteligentna lampa sufitowa CW Yeelight Yeelight Mercury C380

YEELIGHT · EAN 6924922259824

Machine translation from Čeština. In case of doubt the manufacturer's original document prevails.

Yeelight Smart Ceiling Light

User Manual

EN

Product Introduction

Front view of the light body

Lock switch

Connection wiring

(Phase conductor - brown,

neutral conductor - blue)

Mounting base plate

Rear view of the light body Mounting hole for screw

Self-tapping screw Plug

Remote control Dimensions: M4*40 mm Dimensions: $\varnothing 6 \times 32$ mm (Usable drill size: $\varnothing 6$ mm)

Installation Instructions

1. Installation of the base plate

Based on the mounting holes on the base plate, drill holes into the ceiling, then insert the plugs, adjust the external power cable and let it pass through the hole in the base plate.

Attach the base plate to the ceiling with self-tapping screws and ensure that it is securely mounted. Plug

Base plate

Self-tapping screw

* Before installation, always turn off the power to avoid electric shock. Follow the instructions in the user manual strictly to prevent incorrect installation, which could cause fire, electric shock, or falling of the fixture. 33

EN

2. Connecting the wires

Connect the external wires and the wires from the base plate using the terminal block: phase wire

(brown) and neutral wire (blue). Ensure good contact of the wires and that no copper wires are left exposed at the ends.

3. Installation of the fixture

Align both raised sides on the back of the fixture with the installed base plate. According to the arrows on the diagram, push the fixture inward until it clicks and ensure that it is securely fastened.

4. Completing the installation

Check that all the above steps have been performed correctly. After completing the installation, connect the power and start using this product. * Ensure that the fixture has been installed correctly to prevent the fixture from falling due to incorrect installation. 34

EN

Specifications

Yeelight Smart Ceiling Yeelight Smart Ceiling Yeelight Smart Ceiling

Name

Light C300 Light C380 Light C480

Model YLXDD-0241 YLXDD-0242 YLXDD-0243

Rated Power 18W 24W 48W

Rated Input 220-240V~ 50/60Hz 0.09A 220-240V~ 50/60Hz 0.11A 220-240V~ 50/60Hz 0.23A

Power Factor 0.9 0.9 0.9

Luminous Flux 1300lm 2400lm 4200lm

Color Temperature 2700K-6500K 2700K-6500K 2700K-6500K

Color Rendering Index $Ra \geq 80$ $Ra \geq 80$ $Ra \geq 80$

Dimensions $\phi 300\text{mm} \times 58\text{mm}$ $\phi 380\text{mm} \times 64\text{mm}$ $\phi 480\text{mm} \times 74\text{mm}$

Wireless Wi-Fi IEEE 802.11 b/g/n, 2.4 GHz, Bluetooth 4.2 BLE

Connectivity

Compatible with Android 8.0 and iOS 12.0 or higher

Operating Temperature $-10 \sim 25^{\circ}\text{C}$

Operating Humidity Relative Humidity 0-85%

Connect to the Mi Home app

Download the app

Search for "Mi Home" in the app store or scan the QR code to download and install the app.

Adding Device

- Open the main page of the Mi Home app, tap the "+" icon in the upper right corner and add your device.
- Follow the instructions provided in the app.
- After successfully adding the device, you will find it in the device list.

About "Connected to Mi Home"

About "Connected to Mi Home":

"Connected to Mi Home" means that this product can be controlled through the Mi Home app or Xiao Ai assistant.

Please note that "Connected to Mi Home" represents only software certification. Xiaomi and Mi Home are not responsible for the manufacturing, standards, quality control, or oversight of the product or company.

Note: Due to app updates, the steps may differ from those mentioned here. Follow the instructions in the app. This product can also be controlled through Google Home or Amazon Alexa apps. Download and install one of these apps from the app store and follow the instructions to configure the device. After completing the configuration, you can control the lighting using the app. Scan the code to download the Mi Home app

35

EN

Factory Reset

Using the wall switch, repeatedly turn the ceiling light on and off five times (turn off the ceiling light, wait two seconds, then turn the light on and wait another two seconds - this counts as one cycle).

After the fifth cycle, the light will start to "breathe" and after five seconds, it will automatically restart.

The fixture will be reset to factory settings.

Note: If you are using the ceiling light in a new network configuration,

you need to reset the factory settings and reconnect the device to the network.

How to connect and use the remote control

Make sure that the remote control and the ceiling light are in the same room. Turn on the light and within 60 seconds perform the following: simultaneously press the "OFF" and "M" buttons on the remote control and then immediately release them. The indicator on the remote will start blinking, indicating that it is trying to connect. The blinking will stop after a successful connection. Turn on the light Set color temperature

Turn off the light Switch mode

Increase brightness

Decrease brightness

Precautions

1. This fixture must be installed by a professional technician or qualified electrician. 2. Keep accessories and packaging bags out of reach of children, as they are not toys. 3. During installation, disconnect all electrical circuits. 4. This light source should be replaced by a professional. 5. This standalone control unit must be replaced by a professional. 6. This fixture contains a light source with energy class F. ⚠ WARNING

Handle it carefully and gently. Keep it away from sources of ignition. EU DECLARATION OF CONFORMITY

Qingdao Yeelink Information Technology Co., Ltd. hereby declares that this device complies with applicable directives, European standards, and their amendments. DISPOSAL AND RECYCLING OF ELECTRICAL WASTE

Proper disposal of this product. This marking indicates that this product should not be disposed of together with other household waste within the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly and promote the sustainable use of material resources. To return your used device, use collection and return systems or contact the retailer where the product was purchased. They may take this product back for environmentally safe recycling. 36