

Kamvas Pro 19



User Manual

contents

1. Product Introduction.....	3
2. Product Overview.....	3
2.1. Product Overview.....	3
2.2. Accessories.....	5
2.3. Stand Installation and Usage.....	7
3. Connection.....	8
3.1. Connect via the 3-in-2 Cable.....	8
3.2. Connect via the Full-featured USB-C Cable.....	8
4. Driver Installation.....	9
4.1. Windows.....	9
4.2. mac.....	12
4.3. Linux（Ubuntu）.....	14
5. How to Use the Digital Pen.....	22
6. How to Use the Capacitive Touch.....	23
7. Driver Setting and Functions.....	24
7.1. Driver Interface Overview.....	24
7.2. Pen Display Setting.....	26
7.3. Digital Pen Setting.....	30
7.4. Driver Setting.....	35
8. Pen-enabled OSD Menu.....	39
8.1. Scene Mode.....	39
8.2. Color Temperature Settings.....	40
8.3. Color Gamut Settings.....	41
8.4. General Settings.....	42
9. Troubleshooting.....	43

1. Product Introduction

Thank you for choosing HUIION Kamvas Pro 19 pen display.


brings more possibilities for users who work in 3D design, painting, and animation fields, enabling them to create more efficiently no matter where they are - indoors or outdoors.

To better know and use this product, please read this user manual carefully.

Note: Design and specifications are subject to change without notice. The pictures in the User Manual are for reference only.

2. Product Overview

2.1. Product Overview

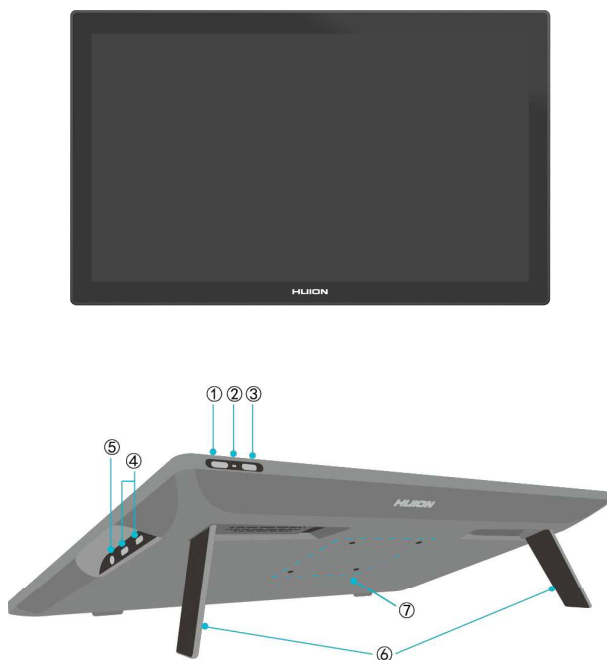

① Power Button/Display Settings Button

- Short press: Turn on/off the pen display.
- Long press for 3 seconds when the pen display is turned on: Call up the on-screen adjustment menu ([pen-enabled OSD menu](#)).

② Indicator Light

- White light on: Working status

- Red light on: Sleep status
- Light off: Not connected to power/pen display is not turned on

③ Slide Switch

Slide the switch left or right to disable or enable the finger touch function.

④ Full-functioned Type-C Port x 2 (Power Supply/Signal & Data Transmission)

Support reverse insertion. To connect monitors, video equipment, or other devices. Provide reverse charging up to 40W for the connected computer/phone/tablet.

⑤ 3.5mm Headphone Jack

To connect a 3.5mm connector.

⑥ Built-in Stand

Two built-in stands adjustable between 0° to 20° provide the right viewing height and stable support.

⑦ VESA Mounting Hole

With the 75 mm × 75 mm VESA hole pattern, you can mount the Kamvas Pro 19 pen display on a variety of specification-compliant VESA brackets (available at [HUION Store](#)) or on other brackets or arms for flexible adjustment of the angle and position of the pen display.

Note: As the Kamvas Pro 19 pen display weighs approximately 2kg, you should make sure that the bracket or arm you purchase separately can support the weight, otherwise safety hazards may occur during installation.

2.2. Accessories


After unpacking, make sure you receive the following items:

Kamvas Pro 19 Pen Display	
PD Power Adapter	
3-in-2 Cable (1.8m)	
Full-featured USB-C Cable (1.8m)	
USB-C to USB-C Cable (1.8m)	
PW600 Digital Pen	
PW600S Digital Pen	
PN06 Standard Pen Nib x 5 (inside the pen case)	
PN06F Felt Pen Nib x 5 (inside the pen case)	
Pen Case (Built-in nib clip, pen nibs)	

K20 One-handed Keyboard	 A black, compact, one-handed keyboard with a numeric keypad and function keys. The Huion logo is visible at the top.
Cleaning Cloth	 A white, folded cleaning cloth with a small Huion logo in the bottom right corner.
Glove	 A black, one-handed glove with a white dashed line indicating the wrist strap.
Quick Start Guide	 A small, folded white card with the text "Quick Start Guide" and two horizontal lines below it.

2.3. Stand Installation and Usage

The Kamvas Pro 19 pen display has two built-in stands on the back which can be unfolded for use.



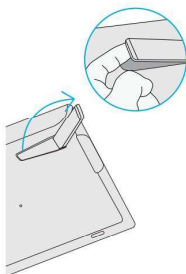


Note:

In addition to the built-in stands, with the VESA hole pattern on the back of the pen display, you can also mount the pen display on a variety of specification-compliant VESA brackets (available at [HUION Store](#)), or on other brackets or arms that allow you to adjust the angle and position more conveniently.

The following takes the installation of the Huion ST100 adjustable stand as an example, but the stand is not included and needs to be purchased separately:

- ① Align the 4 mounting holes of the stand with the 4 VESA mounting holes on the back of the pen display and tighten the screws.
- ② After installation, pull the slider bar to adjust the stand angle (30°-85°).
- ③ Find a suitable angle and you can start to use the pen display.

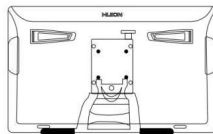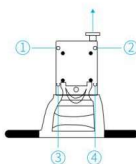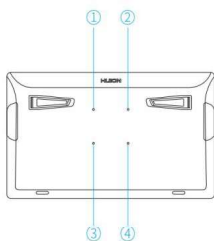


3. Connection

The pen display can be connected to computers and Android devices. Please refer to the following connection methods.


3.1. Connect via the 3-in-2 Cable

1. Plug the two USB-C connectors of the 3-in-2 cable into the USB-C ports of the pen display.
2. Plug the HDMI and USB-A connectors of the other end into the corresponding ports on your computer or docking station to transfer signals and data.
3. Plug the USB-C connector into the port of the PD power adapter and insert the plug of the adapter in the socket.

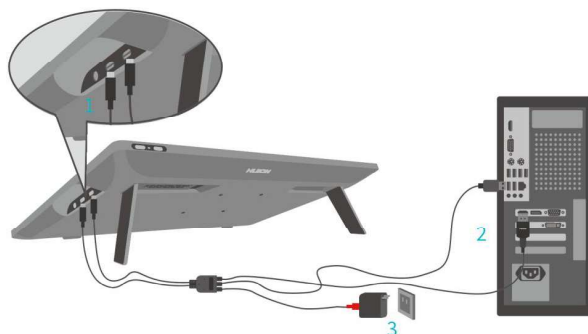

3.2. Connect via the Full-featured USB-C Cable

1. Plug one end of the full-featured USB-C cable into the USB-C port of the pen display and the other end into the USB-C port of your computer/tablet/Android device or docking station to transfer signals and data;
2. Plug the black connector of the USB-C to USB-C cable into the USB-C port of the pen display and plug the red connector into the port of the PD power adapter. Then insert the plug of the adapter in the socket.

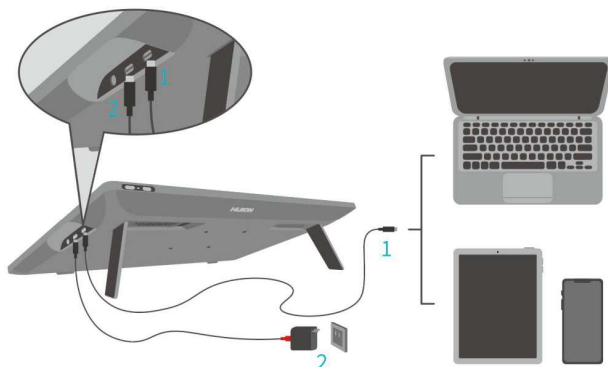


4. Driver Installation

4.1. Windows

Note:


① Before installing the driver, please close all graphic software and antivirus programs. The note ("HuionTabletCore.exe" failed to launch!) below appears only on devices with Windows OS, indicating that the driver is blocked by antivirus programs or drawing applications.

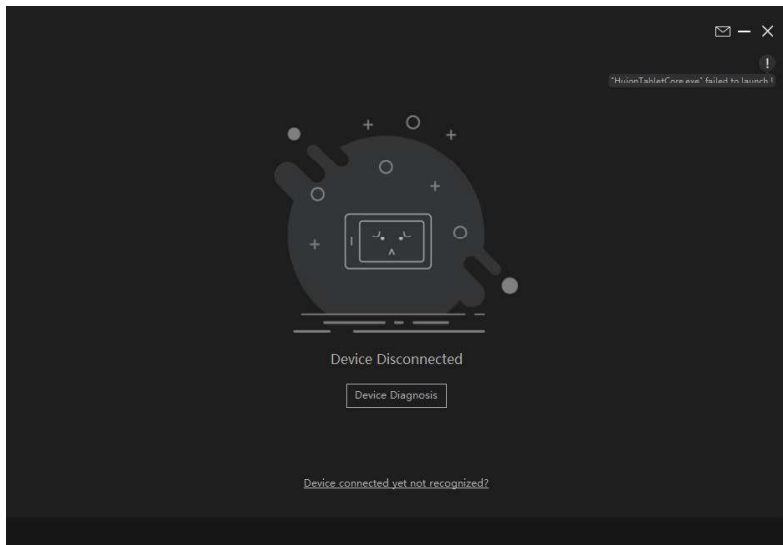


- ② Please make sure your computer operating system is Windows 10 or later.
- ③ If the connection fails, please restart the driver or your computer.
- ④ If you uninstall the driver, the pen display may experience no pressure sensitivity or other unknown issues in certain applications. In this case please reinstall the driver and your pen display will return to its default settings.

Driver Installation Instruction:


1. Connect the pen display to your computer.
2. Click [Driver-Kamvas Pro 19](#) to get the latest driver for your device.
3. Double-click the driver and click "OK" to proceed.

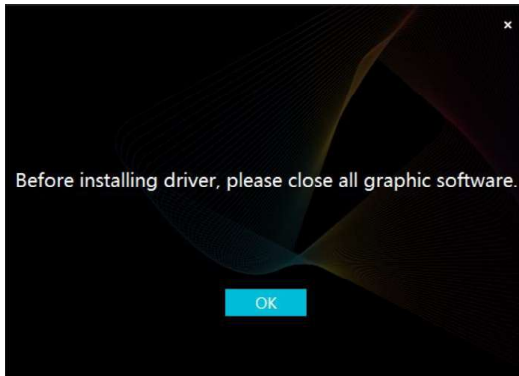


4.Check the box to agree with the User Agreement and click "Install Now".

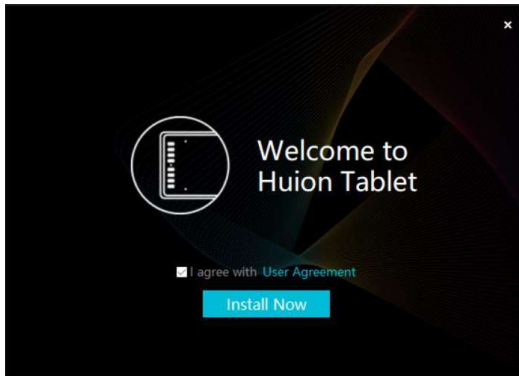

5.After the installation has been completed, click on "Try it now".

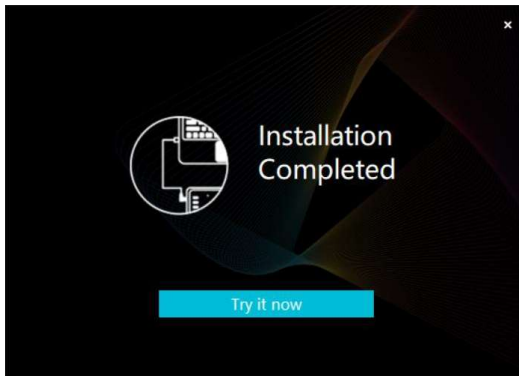

6.A picture of Kamvas Pro 19 will appear on the driver interface to indicate a successful connection. Now you can use your pen display.

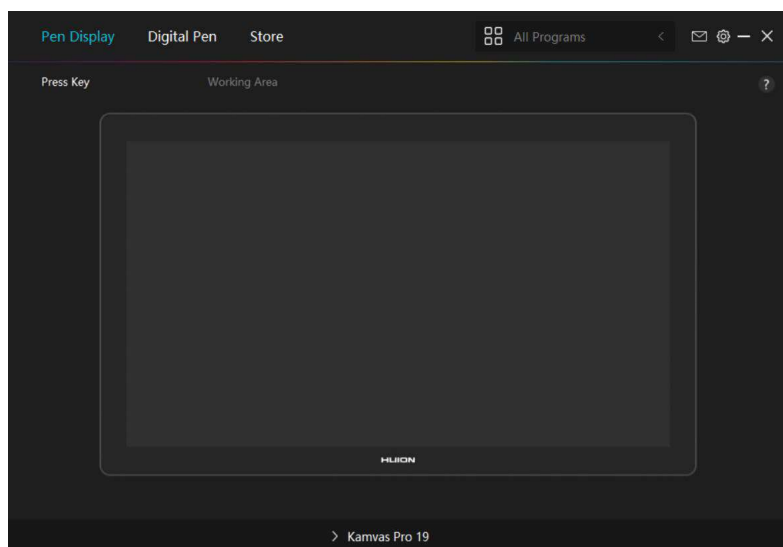

4.2. mac

Note:


- ① Please make sure your computer operating system is macOS 10.12 or later.
- ② If the connection fails, please restart the driver or your computer. For more information, please refer to Troubleshooting. See section.
- ③ If you uninstall the driver, the pen display may experience no pressure sensitivity or other unknown issues in certain applications. In this case please reinstall the driver and your pen display will return to its default settings.

Driver Installation Instruction:

- 1.Connect the pen display to your computer.
- 2.Click [Driver-Kamvas Pro 19](#) to get the latest driver for your device.
- 3.Unzip the driver file and drag the “HuionTablet” icon into the “Applications” folder.




- 4.Open the folder and then find and double-click the HuionTablet driver application.

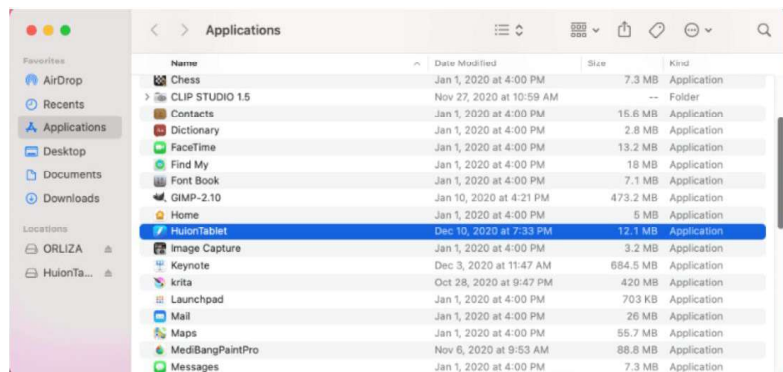


- 5.Connect the pen display to your Mac, and click “Open System Preferences” when prompted. Go to Security & Privacy > Privacy > Accessibility settings and click the lock icon to unlock the settings. Tick the checkbox on the left of the HuionTablet driver application to enable accessibility.

Then click the lock icon to lock the settings.

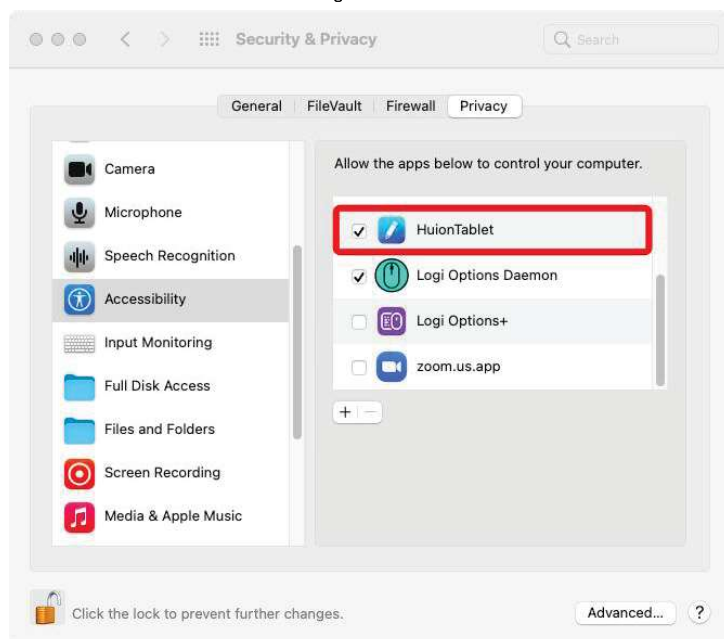

6.A picture of Kamvas Pro 19 will appear on the driver interface to indicate that the pen display is successfully connected to your computer. Now you can use your pen display.

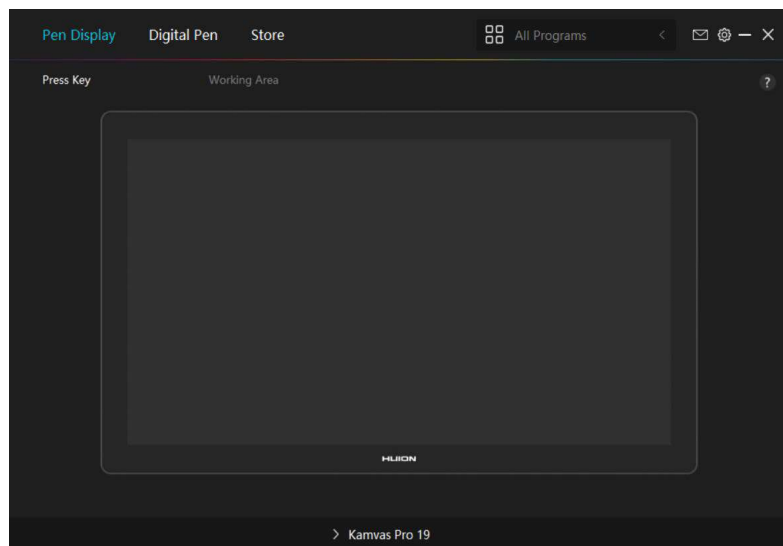

4.3. Linux (Ubuntu)

Note:

1. Please remember to close the command window and reboot your Linux device after installing the driver, or the driver will not be useful. After rebooting the device, you can access the system main menu to find the Huion Tablet driver and then open it to finish some settings.
2. If you are running Linux operating system on VMware, you must use the VMware Workstation Pro version. And the Play version of VMware Workstation doesn't support the Huion Tablet driver.
3. Some versions of the Ubutun operating system don't support using more than one monitor simultaneously. And we recommend you upgrade your system to 20.04LTS or later if you want to use a Huion painting device on multiple display screens simultaneously smoothly.

Huion Tablet Driver installation packages in 2 different formats are available for Linux devices:

[- tar.xz \(file format\)](#)

[- deb \(file format\)](#)


Here are the step-by-step instructions for installing the driver packages in different file formats respectively:

4.3.1. Instructions for installing the driver package file in tar.xz format.


Linux operating systems supported:Ubuntu

4.3.1.1. Steps to Install:


- 1.Extract the contents of the driver file, huiontablet_XXX.tar.xz, into a folder.
- 2.Open the command window in the folder.

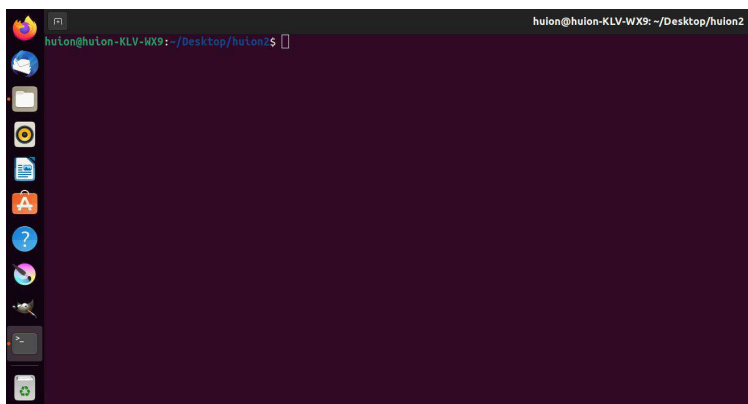


- 3.Input the following command: "sudo sh install.sh", and press the enter key on the keyboard to make your Linux device execute it.

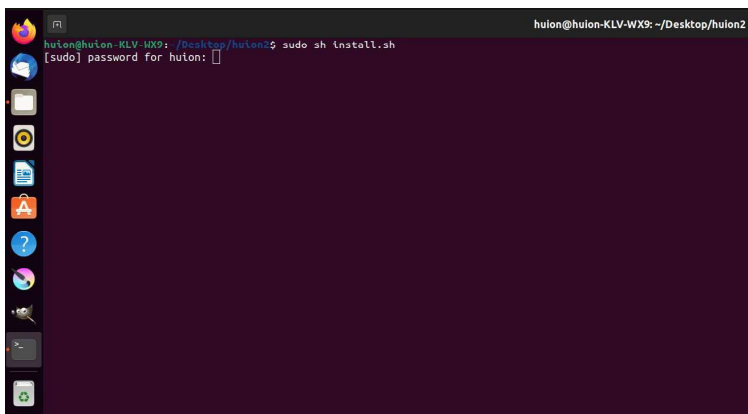


4. Enter the user password to complete the installation.

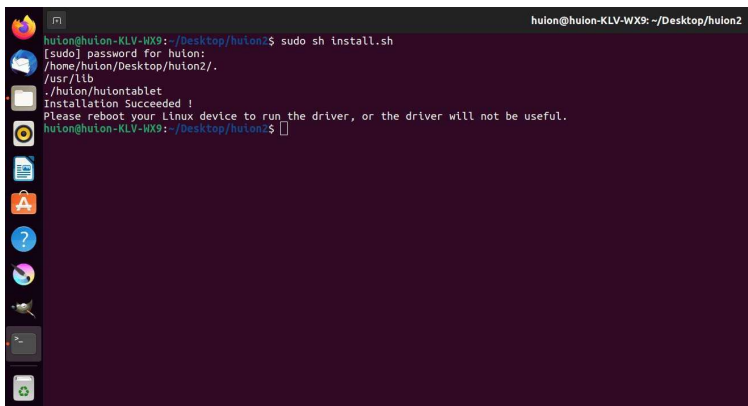

5. Please reboot your Linux device to run the driver, or the driver will not be useful.

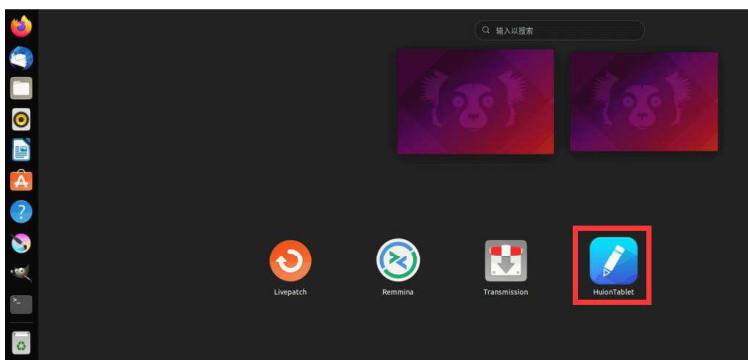


6. A picture of Kamvas Pro 19 will appear on the driver interface to indicate that the pen display is successfully connected to your computer. Now you can use your pen display.

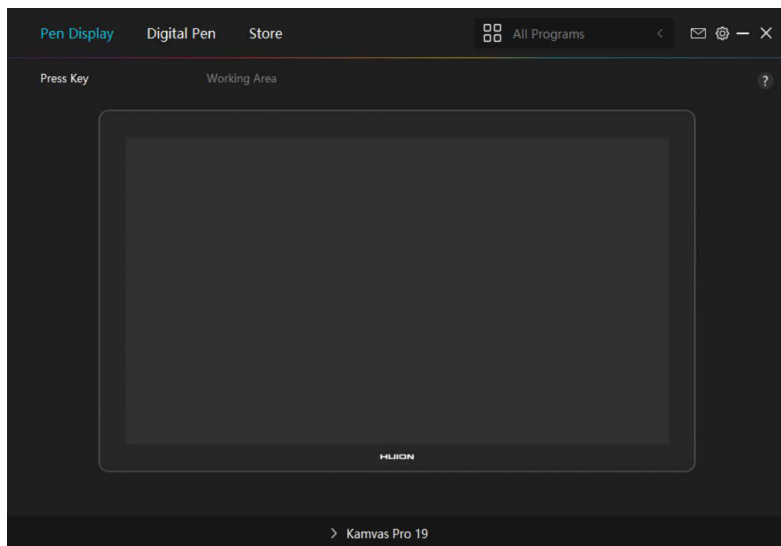


4.3.1.2. Steps to Uninstall:

1. Open the command window in the folder of the driver.

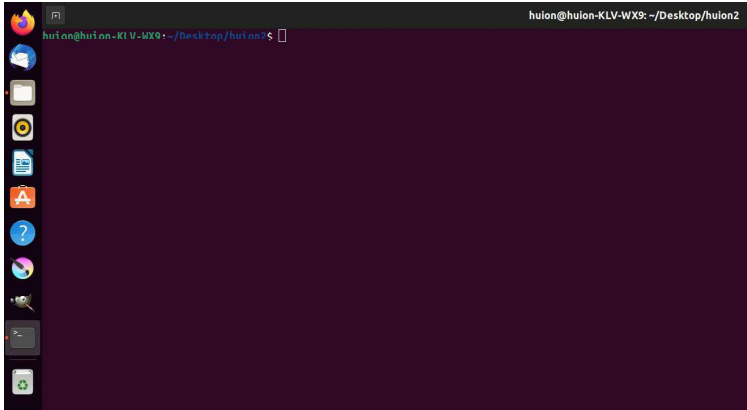

2. Input the following command in the command window: “sudo sh uninstall.sh”, and press the enter key on the keyboard to make your Linux device execute it.

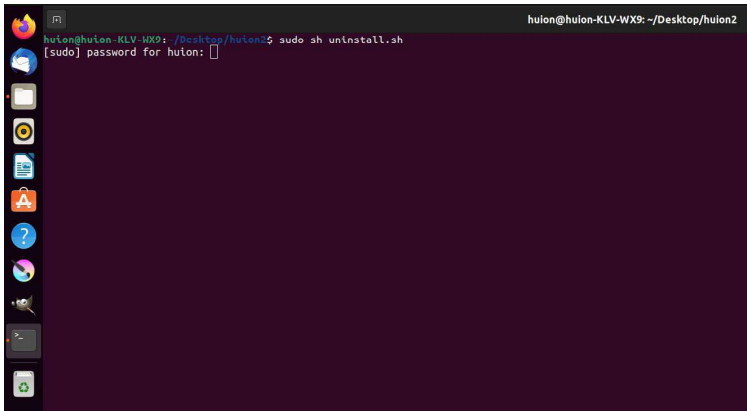

3. Enter the user password to complete the uninstallation.

```

huion@huion-KLV-WX9: ~/Desktop/huion2
huion@huion-KLV-WX9: ~/Desktop/huion2$ sudo sh uninstall.sh
[sudo] password for huion:
close core
huionCore: no process found
close tablet
huiontablet: no process found
Uninstallation Succeeded !
huion@huion-KLV-WX9: ~/Desktop/huion2$

```

4.3.2. Instructions for installing the driver package file in deb format.


Linux operating systems supported:Ubuntu

4.3.2.1. Steps to Install:


1.Open the folder and double-click the driver file in deb format to enter the system default interface of installing the driver on the application store, then click to install.



2.Enter the user password to complete the installation.

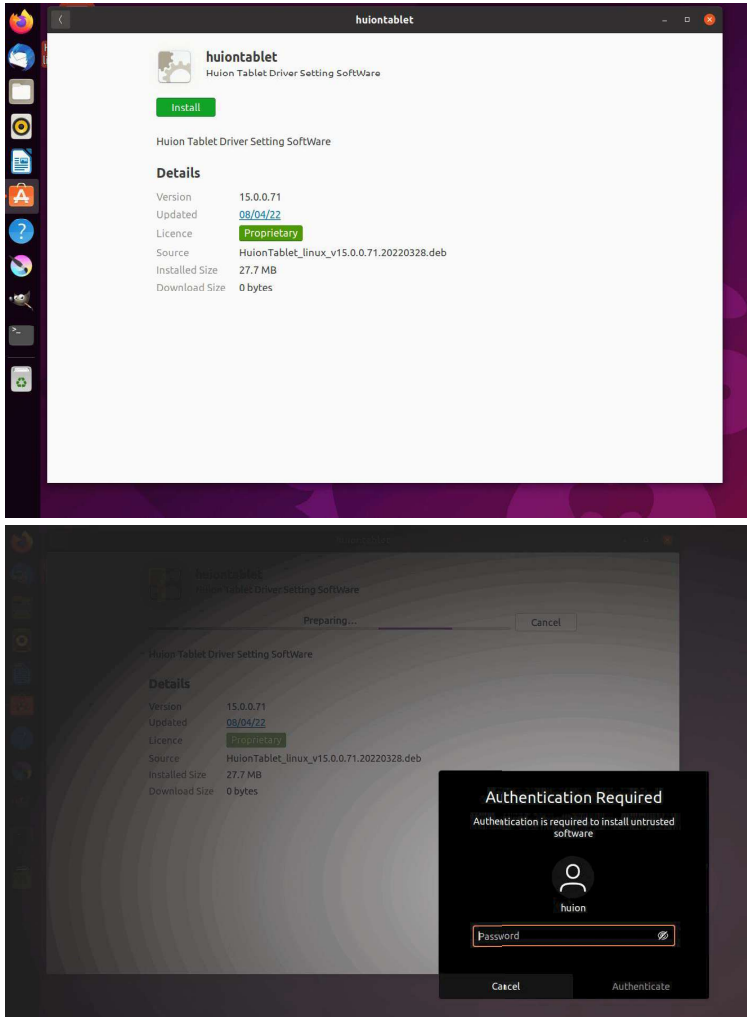


3. Please reboot your Linux device to run the driver, or the driver will not be useful.

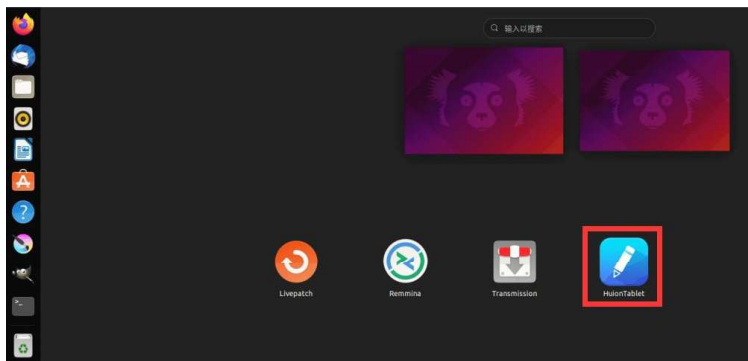


Tips: Please ensure that your Linux device has been connected to the internet when installing the driver, or the installation will fail when entering the application store interface.

4. A picture of Kamvas Pro 19 will appear on the driver interface to indicate that the pen display is successfully connected to your computer. Now you can use your pen display.

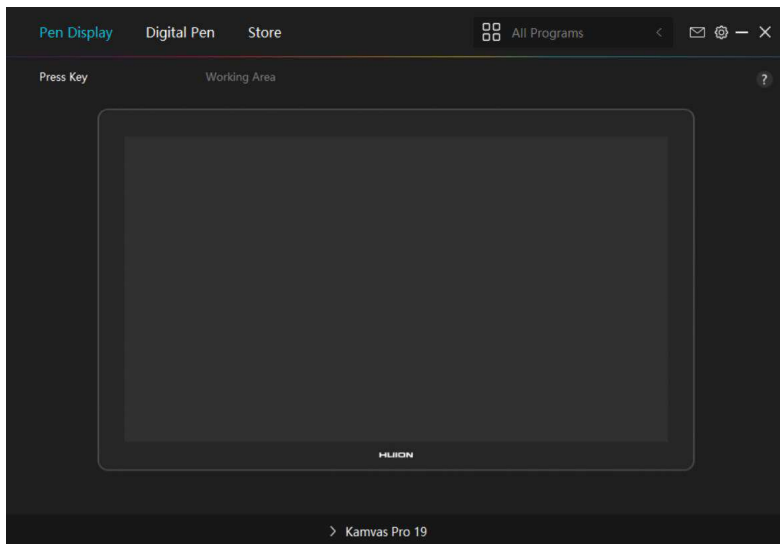

4.3.2.2. Steps to Uninstall:

1. Enter the interface of the installed applications on the system's built-in application store.
2. Find the driver and click to uninstall it.

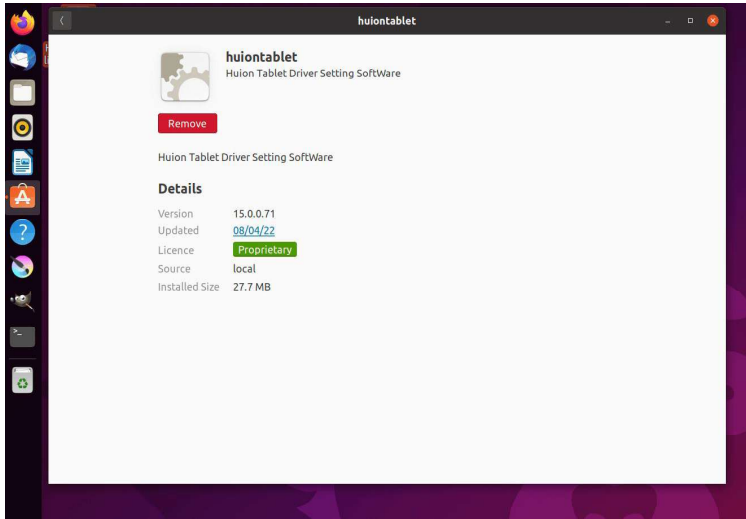

Tips: If you can't access the system's built-in application store, you can search out the driver file, huiontablet_xxx.deb, then double-click it to enter the installation interface, and click the remove button to uninstall it.

5. How to Use the Digital Pen

Kamvas Pro 19 pen display is equipped with a new generation of digital pens: PW600 and PW600S which come with an eraser button at the top. The pen eraser button works like the pencil eraser, and you can erase intuitively and naturally in graphic applications that support the pen eraser.

The anti-slip silicone grip makes it easy for the user to hold the pen for a long time without feeling fatigued. The PW600 features 3 programmable pen buttons and the PW600S features 2 programmable pen buttons, making the operation more efficient and convenient.

Hold the Pen:

Hold the digital pen as you hold a real pen. Adjust your grip so that you can toggle the pen press keys easily with your thumb or index finger. Be careful not to accidentally press the key while drawing with the pen.

Note: Please do not put the pen on the pen display when it is not in use, otherwise it may interfere with the function of the mouse and other devices, and it may also prevent your computer from entering sleep mode.

Cursor Movement:

Move the pen slightly above the working area of the pen display without touching the surface of the pen display, and the cursor on the screen will move to the new position accordingly.

Click:

Tap on the working area of the pen display with the pen to register a click. Press lightly to highlight or select an item on the screen, long press to drag the item and double-click to open it.

Move:

Pick up a file or icon, then slide the pen nib across the screen to move it.

Erase:

Move the eraser button over the area you want to erase, just as you would with a pencil eraser.

Use the Pen Press Keys:

The functions of the pen press keys can be programmed in the driver. The pen press keys will work as long as the vertical distance between the pen nib and the pen display is within the sensing height (10mm). If you don't want to use the pen press keys, you can set them to no function in the driver.

Replace the Pen Nib:

Tip: When the pen nib is badly worn, please replace it with a new pen nib timely.

1. Open the pen case and take out a replacement nib.
2. Tilt the pen, and pull the worn nib out of the pen through the built-in nib clip on the back of the pen case.
3. Insert the replacement nib straight into the barrel of the pen until the nib stops moving forward.



6. How to Use the Capacitive Touch


Adopting a capacitive touchscreen panel, Kamvas Pro 19 supports 10-point capacitive touch which can greatly improve creation efficiency.

Slide the switch to the left/right to turn off/on the multi-touch.

General Functions		
Finger	Gestures	Action
One-finger	Tap	Select
	Double tap	Open the file
	Press and hold	Show more commands (like right-clicking)
	Press and drag	Move the file
Two-finger	Slide horizontally or vertically	Scroll
	Pinch in or stretch out	Zoom out or zoom in
Three-finger	Swipe up	Show all open windows
	Swipe down	Show the desktop
	Swipe left or right	Switch between open apps or windows
Four-finger	Swipe up	Show all open windows
	Swipe down	Show the desktop
	Swipe left or right	Switch desktops

7. Driver Setting and Functions

7.1. Driver Interface Overview

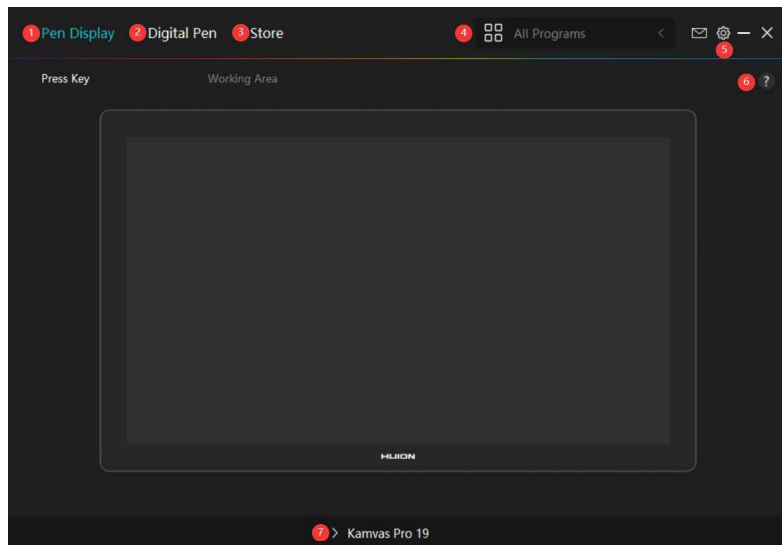

① Pen Display

On the “Pen Display” interface, Users can set functions of the display, including Press Key and Working Area Set. [See Section](#)

② Digital Pen

Users can set functions of the pen on this “Digital Pen” interface, including Press Key, Mode selection, Pressure Sensitivity Adjustment, and Pressure Test. [See Section](#)

③ Store

Huion Store is where you can get the latest information about the product such as its FAQ or sales promotion. In addition, you can also purchase Huion’s other products or accessories here.

④ Add Programs

- 1) Some programs which have already been opened will appear for you to choose from after clicking Add a Program on the screen. For more programs, you need to open them and then enter this interface to add, or click Browser, select the program on your computer, and click Open to get it added.
- 2) For different programs, you can make different settings for the working area and the digital pen. Then when you launch another program, the Driver will automatically recognize it and the setting features will change to its corresponding ones.
- 3) When you select All programs, settings for the working area and the functions of the digital

pen are valid for every program that is not customized.

⑤ **Setting**

Users can set the functions of a driver on this interface, including check out Device information, Backup setting, General setting, and its version. [See Section](#)

⑥ **Common Problems**

Click “?” and jump to Forum in our website <https://support.huion.com/en/support/home> to get a user manual or feed back the problems to us.

⑦ **Switch between Devices**

The Driver is able to support two devices at most. Functions of them can be customized by users respectively. When switch to one of them, functions change to its corresponding ones.

7.2. Pen Display Setting


Select the Working Area tab to adjust the ratio of the distance of pen movement on the pen display to that of the corresponding cursor movement on the monitor. By default, the entire active area of the pen display maps to the whole monitor.

If more than one monitor is in use and they are in extended mode, users need to choose one that will be mapped to on the driver interface and the other one as the external display.

In mirror mode (All monitors display the same content), the pen display maps to the entire screen on each monitor and cursors displayed on them move simultaneously.

7.2.1. Working Area Setting

Define the pen display area that will be mapped to the monitor. Three modes on the driver can be chosen:

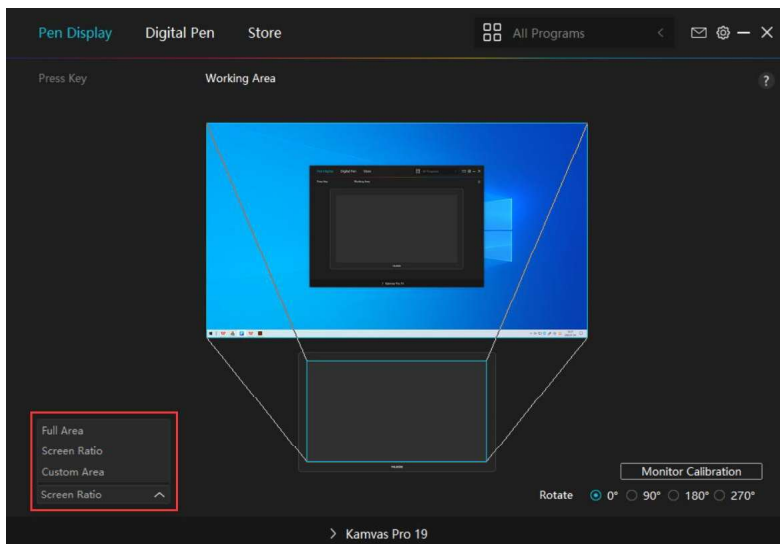

[1] Full Area: The entire active area of the pen display will be mapped to the monitor. It is the default setting.

[2] Screen Ratio: The ratio of the active pen display area is the same as that of the monitor, which as a general rule, is 16:9. For example, if you choose the screen ratio and draw a circle on the pen display, then a circle appears on the monitor that has been connected to the pen display, in this case some parts of the pen display may not work. But if you don't choose the screen ratio and draw a circle, then the circle may change into an oval on the monitor.


The ratio of the active pen display area depends on that of the display device, which as a general rule. In Screen Ratio mode, these two ratios keep the same.

[3] Custom Area:


1> Enter coordinate values.

2> Users can adjust the working area of the pen display by changing the outlines of the smaller

rectangle (see picture 1). Users can also drag the two blue rectangles to select the active areas of the digital pen on the screen and the pen tablet. (see picture 2 and 3).

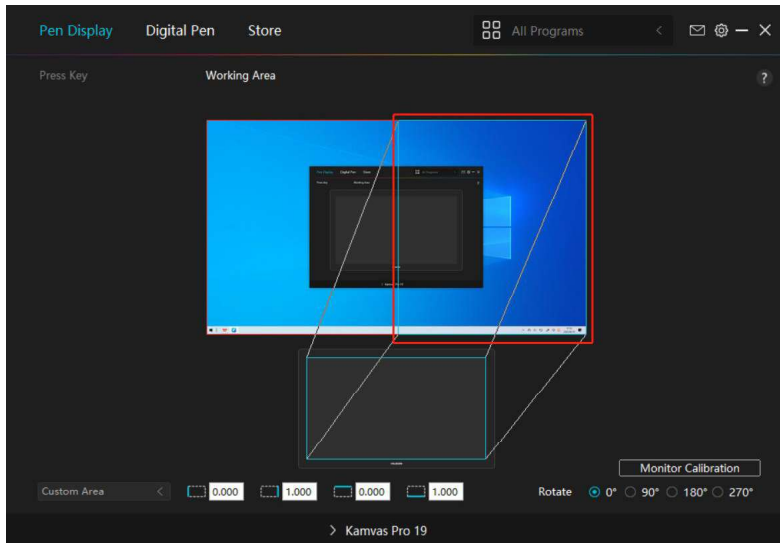


Picture 1

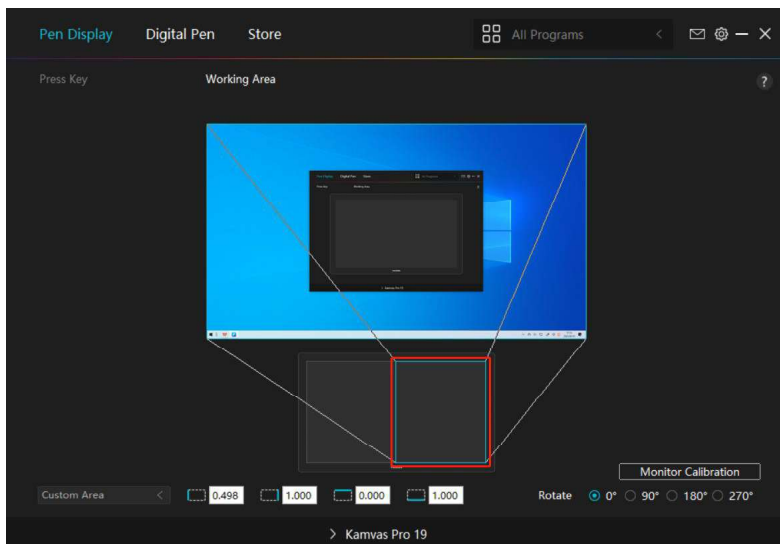


Picture 2

7.2.2. Rotate Working Area

Change the direction of the pen display to adapt to the left- and right-handed operation. You can rotate the pen display by 0°, 90°, 180° or 270°.

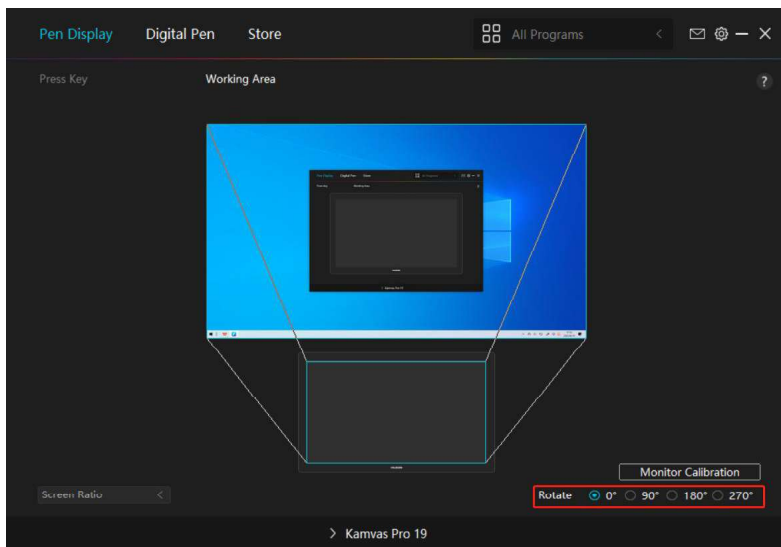


Picture1

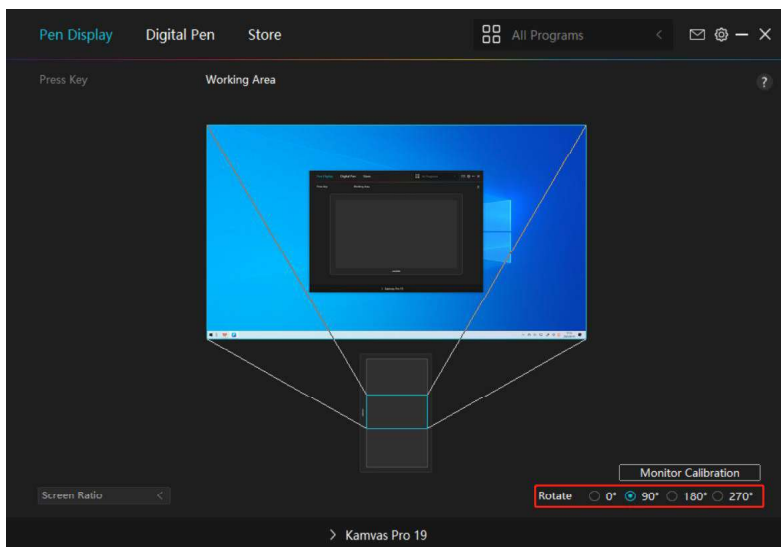


Picture2

7.2.3. Calibrate Your Pen Display

Click Monitor Calibration tab and follow the instructions to calibrate your pen display.

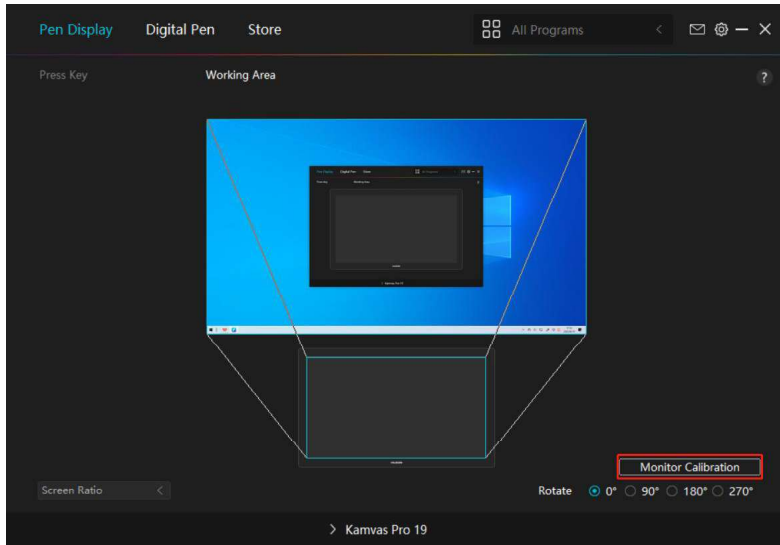


Please use the digital pen to click on the center red dot of the cross in a common pen-holding posture. You can cancel Calibration and restore default.

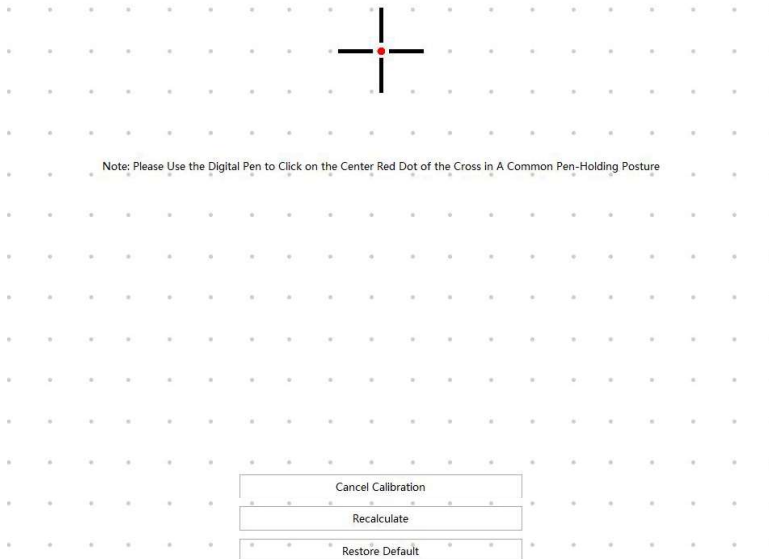

7.3. Digital Pen Setting

7.3.1. Press Key

You can use this digital pen to interact with your device, including drawing, writing, moving files, or activating the functions of pen press keys.

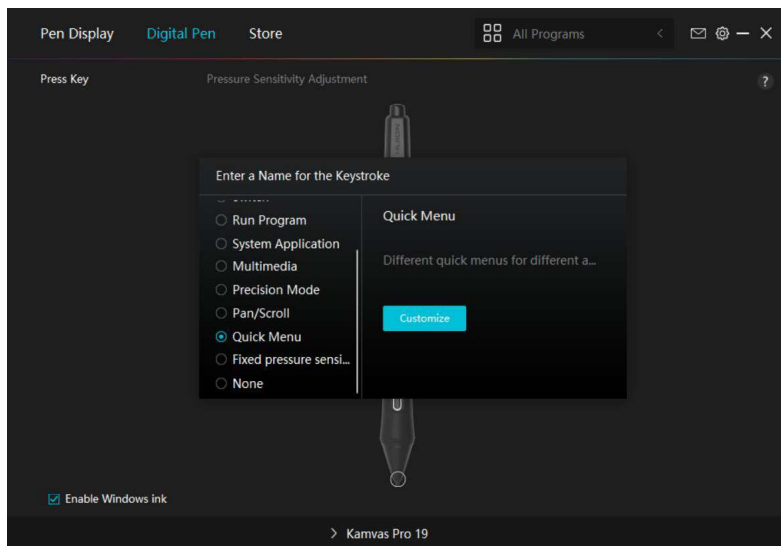

Refer to this table of settings below to help you decide if you want to change the existing settings.

Note: The performance of functions in the table below is up to the device that you have connected. And this table is subject to change without notice.

The settings of the press keys' functions can be found in the following list.


The functions of the press keys can be set as:

Keyboard Key	Click on the input box and enter a valid key combination to create a shortcut (support up to 18 characters).
Mouse Key	Select the functions of a Mouse or Wheel. Please see the picture below for detailed information of these functions. Mouse: Left Button, Right Button, Middle Button, and Double-left Click. Wheel: Wheel Forward and Wheel Backward. Other functions: Ctrl, Alt, Shift, and Win .
Tool	Select Switch Screen, Eraser, Recover, Revoke, or Clear.
Run Program	Click Browse and select the program that you want to run quickly. After that, press the key to launch the item.
System Application	For the Windows OS, the key functions can be set as: Lock the Screen, Sleep, Power Off, Show/Hide Desktop Icon, Task View, Start Menu, and Calculator. For the macOS, the key functions can be set as:

	Sleep, Lock the Screen, Show/Hide Desktop, Mission Control, Launch Pad, and Finder Search. For the Linux OS, the key functions can be set as: Lock the Screen, Sleep, and Power Off.
Multimedia	You can apply these functions to press keys: Previous Song, Next Song, Play/Pause, Volume up, Volume down, and Muted.
Precision Mode	You can toggle between the normal precision and precision that you choose, from Fine(level 1) to Ultra Fine(level 5). - When you select Precision Mode, the Precision Mode window appears and you can move the slider to set the precision you want to toggle into. - For example, if you assign Precision Mode to a pen button, when you press the pen button, you switch to working in the precision that you selected using the slider. When you press the pen button again, you switch back to working in the normal precision. - Press "Esc" or press the pen button for the third time to exit Precision Mode.
Pan/Scroll	This function allows you to pan and scroll in a document or item by moving the pen tip up and down or right and left. When you select Pan/Scroll, the Scroll Speed window appears. Move the slider to your preferred scrolling speed.
Quick Menu	Pick it up and you can use the key to pull up the Quick Menu. Detailed information for reference is down below this table.
Fixed Pressure Sensitivity	You can lock the pressure at the current level until you release the component. For example, if you assign this setting to a pen button, you can paint with pressure sensitivity enabled in your application until you reach the brush size you like. Then, press and hold the pen button to lock in that brush size as long as you are pressing and holding the button.
None	When None is selected, the key will not perform any function when pressed.


Note: The pictures are for reference only.

The specific settings of the Quick Menu are as follows:

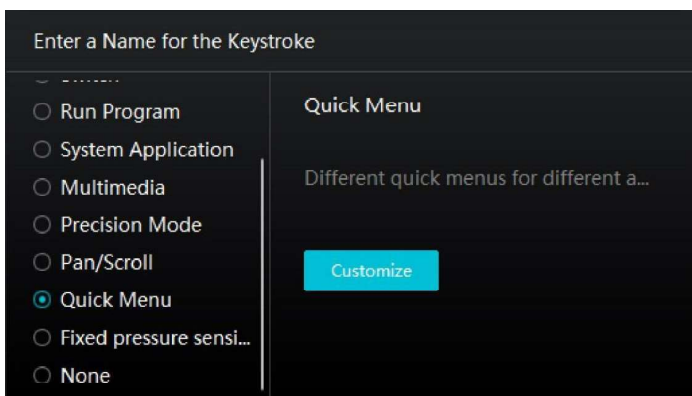


Click Customize in the picture above to call out a quick menu (see picture 1). For each of the six buttons on the left, users can enter a name for it and set unique function for it. After that, users


can call up the Quick Menu by pressing the key (see picture 2). The menu disappears after a click on any of the six buttons. By clicking “Fix” once the menu will be fixed on the desktop while after a second try the “Fix” button changes to “Close” and the menu disappears (see picture 3). Put the cursor on the menu to drag it.

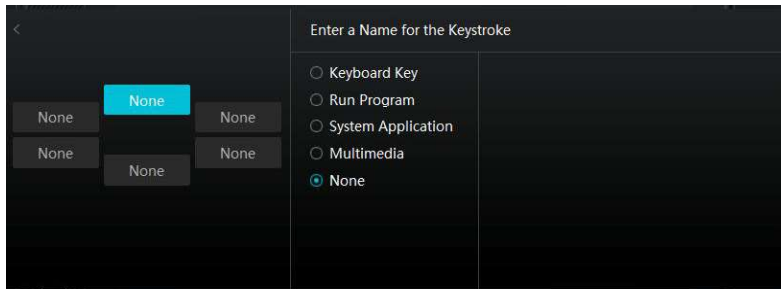

Picture1

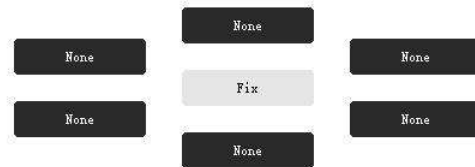


Picture2

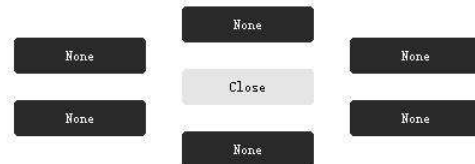

Picture3

7.3.2. Pen Nib Activity


The pen nib of the digital pen can be set as Valid/Invalid in the driver according to users’ needs. Click the drop-down button to set its activity. In Valid mode, the pen can complete specified actions such as clicking, double-clicking, and dragging when you tap the pen on the screen. In Invalid mode, the pen can control the movement of the cursor, but cannot complete specified actions.

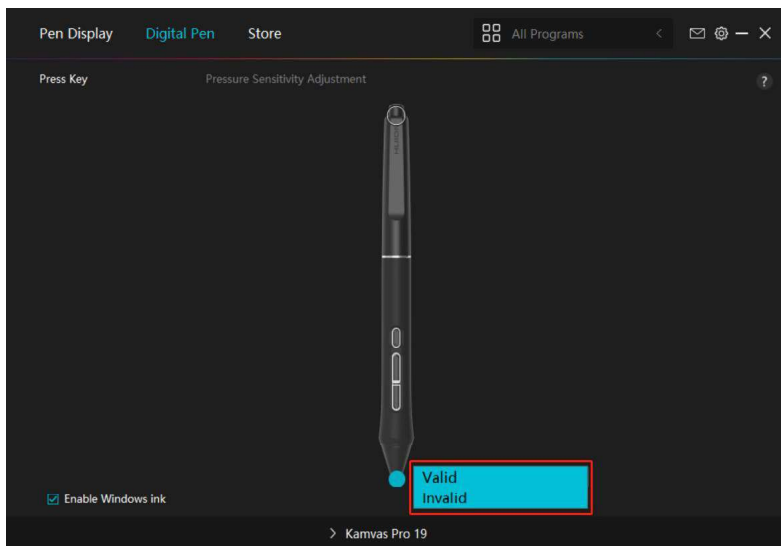

7.3.3. Enable Windows ink

Microsoft Windows provides extensive support for pen input. When the “Enable Windows Ink” option is ticked, pen features are supported in software such as Microsoft Office, Windows Whiteboard, Adobe Photoshop CC, SketchBook 6, etc.


Note: macOS and Linux OS do not support this feature.

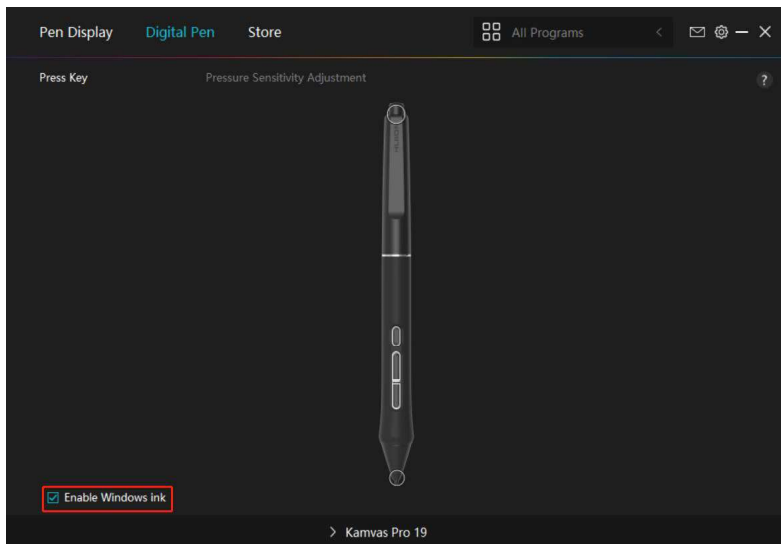

7.3.4. Pressure Sensitivity Adjustment

Users can adjust the pressure sensitivity level by dragging the slider in the Pressure Sensitivity Adjustment box according to your usage habits. Users can also check the five options from soft to hard on the right of the box to find the proper pressure sensitivity for themselves. Click the redo button at the top right to revert to the default pressure.


- ① To decide the force required for a pen to produce a click or a pressure sensation.
 - ② ③ You can change the slope of the pressure response curve.
- Draw lines in the Pressure Test box with the pen, and the bar on the right will simultaneously show the pressure changes on the pen nib. Click the “Delete” button above to remove the lines, reset the pressure sensitivity level and test it until you find the appropriate pressure sensitivity level.
 - A steep curve means a more sensitive response.

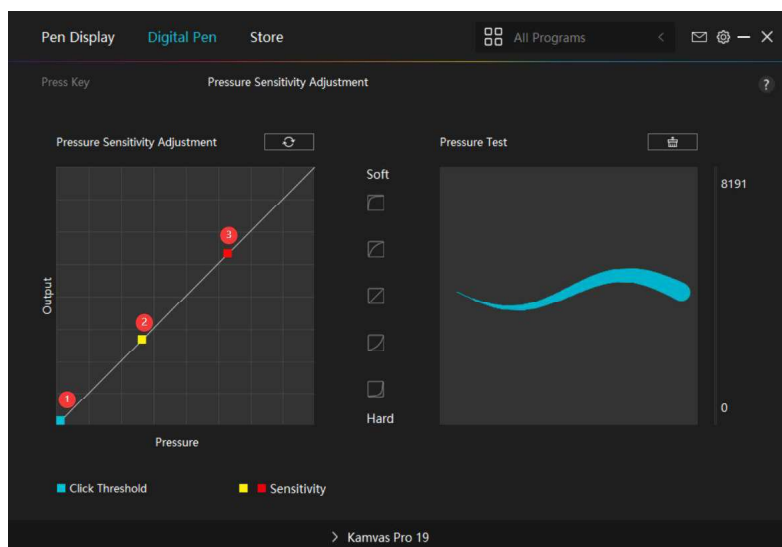

7.4. Driver Setting

7.4.1. Device

You can view the information of the firmware and the connected product here.

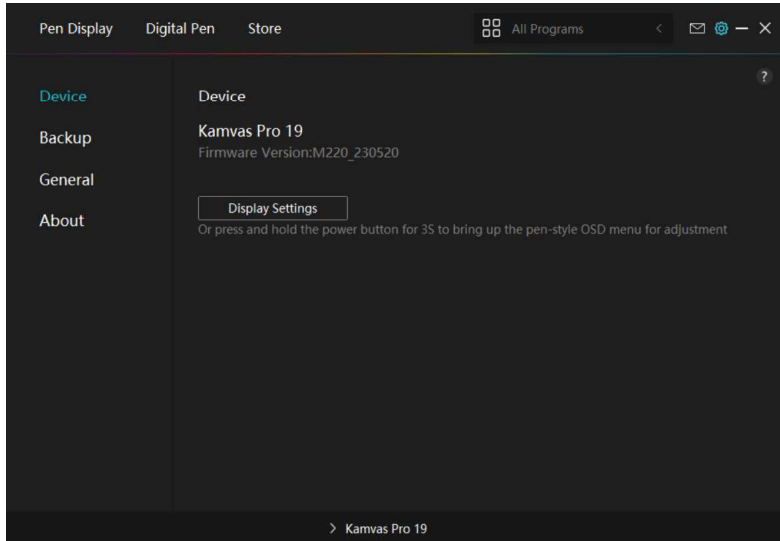

* Display Settings

Scene Mode: "Standard Mode", "Game Mode", "Movie Mode" and "USER" can be selected.

When selecting "Standard Mode", "Game Mode", or "Movie Mode", you can adjust the "Saturation" value by dragging the blue slider.

When selecting "USER" mode, you can adjust the "Brightness" value, "Contrast Ratio" value, and "Saturation" value by dragging the blue slider.

Brightness: You can drag the corresponding slider to adjust the brightness of the screen.

Contrast Ratio: You can drag the corresponding slider to adjust the contrast ratio of the screen.

Saturation: You can drag the corresponding slider to adjust the saturation of the screen.


Color Temperature: "6500K", "7500K", "9300K", or "USER" mode can be selected. In "USER" mode, color temperature can be customized by adjusting RGB values.

Color Space: "Native", "sRGB", "Adobe RGB", or "DCI-P3" can be selected.

In Native color space, "Scene Mode" and "Color Temperature" can be freely adjusted or selected.

While in sRGB, Adobe RGB, and DCI-P3 color spaces, to ensure that the standards of the three color spaces can be met as far as possible, only "Brightness" in "USER" mode can be adjusted.

Note: For macOS users, Display Settings is available only when the full-featured USB-C cable is used for the connection. If you want to change the display settings, please use the full-featured USB-C cable to connect your device, or make adjustments by long pressing the power button for 3s to bring up the [pen-enabled OSD menu](#).

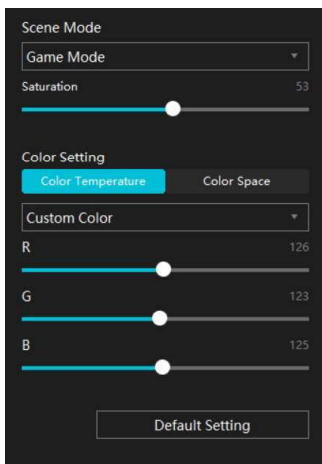


7.4.2. Backup

The backup contains all the settings data of the device. You can restore these settings at any time, locally or on another computer. Importing and exporting configuration settings is supported, which helps to avoid repeated settings when you use different devices.

Export settings: Click Export to export the current settings data locally.

Import settings: Click Import, open file manager, select the configuration file, and then open it.

Default Setting: All the settings on the current device are covered and the default settings are restored.

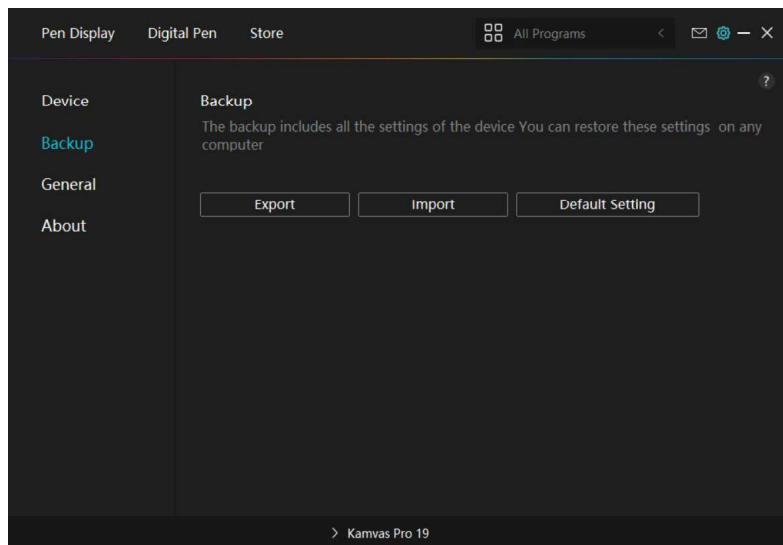

7.4.3. General Setting

Language: Click the drop-down button to switch between 14 languages.


Color: You can select the color of the Driver interface among Dark, Blue, and Light according to your preference.

Start Menu: Click to select boot options. Click to enable “New Message Alert”, “Auto-Start”, and “Automatic Updates”, which helps improve our products and services, and makes it easier for you to experience the latest driver in a timely manner. They can also be disabled anytime.

Hotkey: You can set a hotkey to call out the Driver interface quickly according to your usage habits. When you want to restore the press key for opening the driver page by default, click “Reset to Default”.


Switch Screen: Set a hotkey to switch between the monitors to which the current pen tablet/pen display maps. The Switch Screen hotkey works only for the current device supported by the HuionTablet driver application.

Administrator privilege: This item is only available for Windows OS. The driver will identify whether or not the current driver interface is opened with administrator privilege. If it is opened with administrator privilege, this item will not be displayed. If it is not opened with administrator privilege, this item will be displayed.

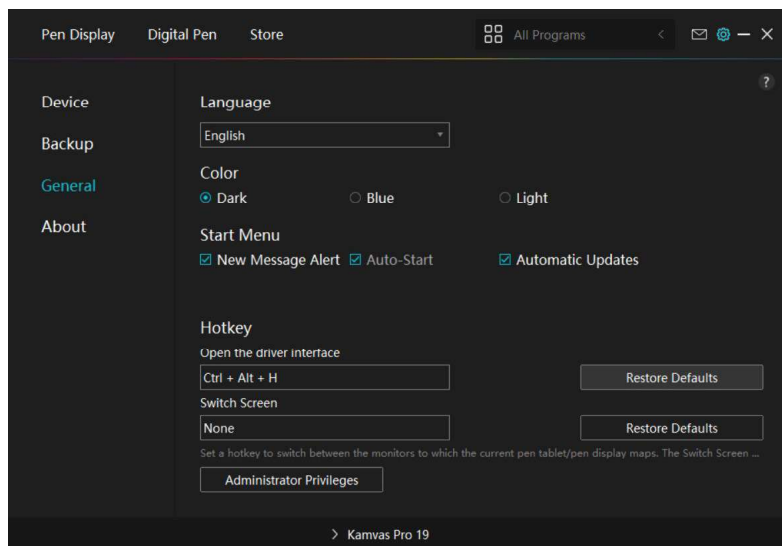

7.4.4. About

Users can check the Driver version here. Click "Check for Updates" to find the latest Driver version and then follow the prompts to update the Driver if needed;
Click "Feedback" to send a feedback email if you have any question about the driver;
Click "Uninstall" to delete the current driver. If you can't click or draw or there is no pressure sensitivity under the software, click "Software Diagnosis" to find out cause. For specific operation, Please click [here](#).

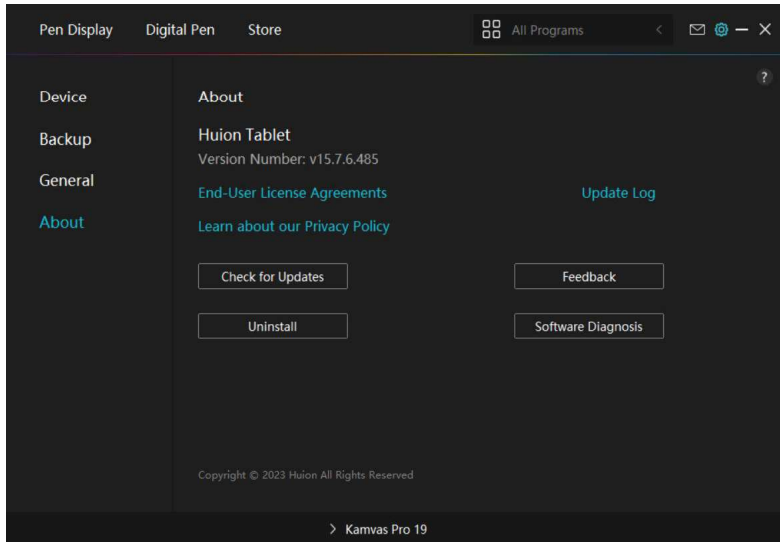

8. Pen-enabled OSD Menu


OSD menu settings on Kamvas Pro 19 can be done with the digital pen.

Long press the power button for 3s to bring up the OSD menu, and then use the digital pen to adjust the settings on the screen. The user interface is designed in a minimalist way. Four interfaces including the Scene Mode adjustment interface, Color Temperature adjustment interface, Color Space adjustment interface, and General Settings interface are reserved to meet users' needs.


8.1. Scene Mode

Click the sun icon to adjust the brightness. On the upper left of the interface, there are four modes to be chosen: "Standard Mode", "Game Mode", "Movie Mode" and "USER" mode. On the upper right are "Brightness", "Contrast", and "Saturation".

When "Standard Mode", "Game Mode", or "Movie Mode" is chosen, only the third bar will be blue and users can drag it to adjust the saturation.

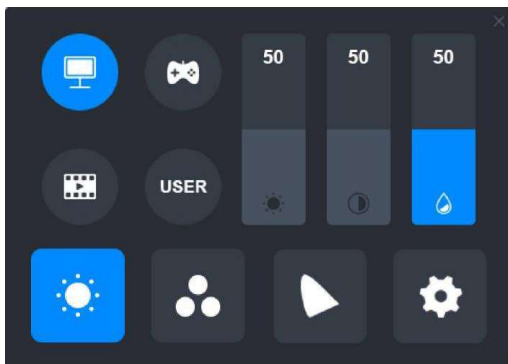


When "USER" mode is chosen, all three bars will be blue and users can adjust the brightness, contrast, and saturation by dragging them.

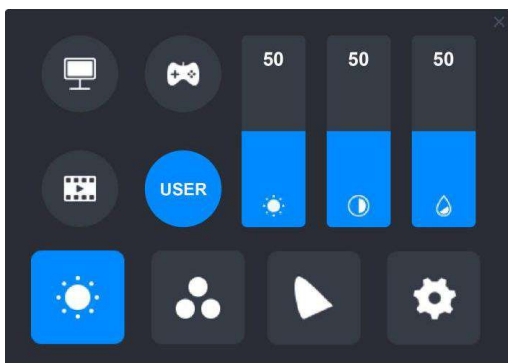


8.2. Color Temperature Settings

On the upper left are three standard color temperatures ("6500K", "7500K", and "9300K") and a customizable one "USER" mode. On the upper right are the RGB color values: "R(Red)", "G(Green)", and "B(Blue)".

If "6500K", "7500K", or "9300K" is chosen, all three bars will be dark and users can not adjust "R(Red)", "G(Green)", or "B(Blue)".

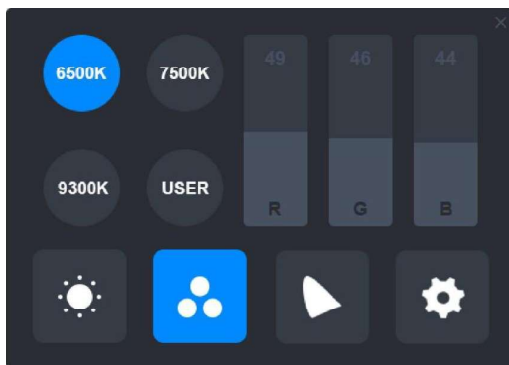


When "USER" mode is chosen, all three bars will be blue and users can adjust "R(Red)", "G(Green)", and "B(Blue)" by dragging them respectively.

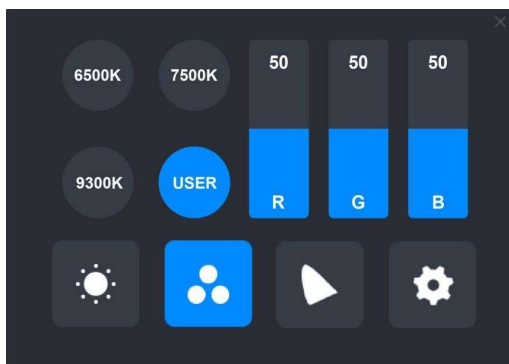

8.3. Color Gamut Settings

Four color spaces: "Native", "sRGB", "Adobe RGB", and "DCI-P3" are displayed on the interface.

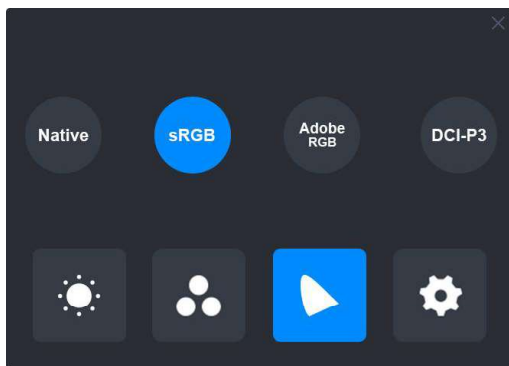

Note:

In Native color space, values on the "Scene Mode" adjustment interface and "Color Temperature" adjustment interface can be freely adjusted or selected.


While in sRGB, Adobe RGB, and DCI-P3 color spaces, to ensure that the standards of the three color spaces can be met as far as possible, only "Brightness" in "USER" mode can be adjusted.



8.4. General Settings

On the menu are “TypeC”, “HDMI”, “Full”, “4:3”, “16:9”, and “Reset” to be chosen.

- ① TypeC/HDMI: connect via a type-c cable or HDMI cable.
- ② FULL: change the viewable area to full screen.
- ③ 4:3: change the aspect ratio of viewable area to 4:3.
- ④ 16:9: change the aspect ratio of viewable area to 16:9.
- ⑤ Reset: All the settings of the OSD menu will be reset to default ones.

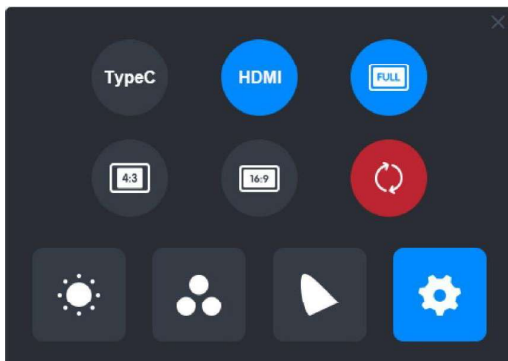

9. Troubleshooting

Problems	Solutions
The pen tablet cannot sense the pen pressure while the cursor can move.	You may have installed other drivers or run the drawing software when installing the driver. Please uninstall all the drivers, close the drawing software, and then reinstall the Huion driver. It is suggested to restart your computer after finishing the installation. In addition, if the application is not compatible with the driver or does not support pressure sensitivity, there will also be no pressure sensitivity in this application.
The digital pen does not work.	1. Make sure you are using the pen that originally came with your tablet. 2. Make sure you installed the driver correctly.
The press key does not work.	1. Make sure you are using the pen that originally came with your tablet. 2. Make sure you installed the driver correctly.
The computer cannot enter sleeping mode.	Please do not place the digital pen on the working area of the pen display when you are not using it, otherwise, the computer will not be able to enter sleep mode.
The press key of the digital pen does not work.	The press keys of the digital pen will not work when the vertical distance between the pen nib and the tablet is over 10mm. If the vertical distance is within 10mm and the pen press key does not work, please check whether the driver works well and whether you have assigned functions to the two keys correctly or not. Then if the keys still do not work, maybe your pen is broken and you can contact our service team as long as the pen is under warranty.
The computer cannot recognize the pen display.	Please check whether the USB port of your computer functions well. If not, please try another USB port.
Failed to connect Kamvas Pro 19 to other device and "Device Disconnected" appears.	Please restart your computer or driver; make sure the USB port and USB-C cable work well; unplug the USB cable and plug it again; try another USB port; download and reinstall the latest driver; please whitelist the driver on macOS devices.

If your problem is not resolved, please click [FAQs](#) to view more troubleshooting methods or email us(service@huion.com).

This document is a translation of the original instruction manual created by the manufacturer.

Detailed information on the distributor's / manufacturer's warranty terms and conditions is available at website <https://serwis.innpro.pl/gwarancja>

The product must be regularly maintained (cleaned) by the user himself or by specialised service centres at the user's expense and expense. In the absence of information on necessary cyclical maintenance or service actions in the operating instructions, the deviation of the physical condition of the product from a physically new product must be assessed regularly, at least once a week. If any discrepancy is detected or found, maintenance (cleaning) or service measures must be taken urgently. Failure to properly maintain (clean) and react when a dissimilar condition is detected may result in permanent damage to the product. The guarantor is not liable for damage resulting from negligence.

Warnings and safety information

All information on the operation of the device is contained in the instruction manual. Before using it, read its contents and follow the instructions contained therein.

Also read the following information before use:

Warnings for use

Safety of screen use: Tablet screens are larger and more susceptible to mechanical damage. Use a case with corner protection and a film or tempered glass. Avoid excessive pressure on the screen, especially when using stylus or accessories.

- Tablet screens are larger and more susceptible to mechanical damage. Use a case with corner protection and a film or tempered glass.
- Avoid excessive pressure on the screen, especially when using stylus or accessories.

Battery and charging: The tablet, like a smartphone, should be charged using original chargers. Avoid using the tablet while charging to prevent overheating. For tablets with larger screens, battery life may be shorter - use power-saving modes if available.

- The tablet, like a smartphone, should be charged using original chargers. Avoid using the tablet while charging to prevent overheating.
- For tablets with larger screens, battery life may be shorter - use power-saving modes if available.

Water resistance and protection: If your tablet is waterproof, follow the manufacturer's guidelines for depth and immersion time. Remember that waterproof does not mean resistant to salt water or detergents. Avoid using

waterproof tablets in harsh conditions, such as under running water, if the manufacturer does not recommend it.

- If your tablet is waterproof, follow the manufacturer's guidelines for depth and immersion time. Remember that waterproof does not mean resistant to salt water or detergents.
- Avoid using waterproof tablets in harsh conditions, such as under running water, if the manufacturer does not recommend it.

Using 5G: Tablets equipped with 5G support can significantly increase battery consumption during heavy mobile data use. In areas with poor 5G coverage, it is recommended to use Wi-Fi to optimize device performance.

- Tablets equipped with 5G support can significantly increase battery consumption during heavy mobile data use.
- In areas with poor 5G coverage, it is recommended to use Wi-Fi to optimize device performance.

Child safety and privacy: Tablets, especially those used by children, should be secured with parental controls. Enable appropriate locks to limit access to apps, online shopping and age-appropriate content.

- Tablets, especially those used by children, should be secured with parental controls. Enable appropriate locks to limit access to apps, online shopping and age-appropriate content.

Information on proper use

Cameras and video: Tablets with advanced cameras offer features such as wide-angle photography or 4K recording. Use them according to the manufacturer's instructions to get the best results. Remember that tablets are no substitute for professional cameras - their main advantage is convenience and functionality.

- Tablets with advanced cameras offer features such as wide-angle photography or 4K recording. Use them according to the manufacturer's instructions to get the best results.
- Remember that tablets are no substitute for professional cameras - their main advantage is convenience and functionality.

Biometrics and data security: Tablets equipped with biometric features, such as facial recognition or fingerprint, should be configured to protect the device from unauthorized access. Update the operating system regularly to protect the device from potential threats such as malware.

- Tablets equipped with biometric features, such as facial recognition or fingerprint, should be configured to protect the device from unauthorized access.
- Update the operating system regularly to protect the device from potential threats such as malware.

Maintenance and storage: Tablets are more susceptible to mechanical damage than smartphones. Keep your device in a protective case, especially when

transporting it. Avoid storing your tablet in areas with high humidity or extreme temperatures.

- Tablets are more susceptible to mechanical damage than smartphones. Keep your device in a protective case, especially when transporting it.
- Avoid storing your tablet in areas with high humidity or extreme temperatures.

Accessories and extended functionality: Take advantage of opportunities to expand your tablet's functionality with dedicated accessories such as keyboards, styluses, holders or wireless chargers.

- Take advantage of opportunities to expand your tablet's functionality with dedicated accessories such as keyboards, styluses, holders or wireless chargers.

Additional precautions

- **Environmental protection:** Dispose of used batteries and devices according to local electrical waste regulations. Take them to an e-waste collection point. Select energy-saving modes of the device (such as battery-saving mode) to reduce power consumption.
- Dispose of used batteries and devices according to local electrical waste regulations. Take them to an e-waste collection point.
- Select energy-saving modes of the device (such as battery-saving mode) to reduce power consumption.
- **Use efficiency:** Turn off the device when not in use for a long time to save battery. Use original accessories, such as headphones or styluses, to ensure compatibility and full use of the device's features.
- Turn off the device when not in use for a long time to save battery.
- Use original accessories, such as headphones or styluses, to ensure compatibility and full use of the device's features.

Safety precautions

Make sure the device's contacts are clean before charging. Never leave the device unattended during use and charging. Ensure that you can quickly disconnect the device from the power source in an emergency situation. Never expose the device to high temperatures. Charge the device in a dry and well-ventilated place away from flammable materials, keep a clearance of at least 1m from other objects. Never cover the device while charging. Never use power adapter, charging station, cables, etc. without the manufacturer's recommendation and approval. Take care of your property, the device is equipped with cells that are difficult to extinguish, equip yourself with a fire extinguishing sheet.

LI-ION battery

The device is equipped with a LI ION (lithium-ion) battery, which, due to its physical and chemical structure, ages over time and use. The manufacturer specifies the maximum operating time of the device under laboratory

conditions, where the optimum operating conditions for the device are present and the battery itself is new and fully charged. The operating time in reality may differ from that declared in the offer and this is not a defect of the device but a product feature. In order to preserve the maximum life of the battery is not recommended to be discharged to less than 3.18V or 15% of the total capacity. Lower values, such as 2.5V for a cell will damage them permanently and this is not covered by the warranty. If you do not use the battery or the entire device for more than one month , charge the battery to 50% and check its charge level periodically every two months. Store the battery and the device in in a dry place, away from the sun and negative temperatures.

LIPO battery

The device is equipped with a LI PO (lithium polymer) battery, which due to its physical and chemical structure ages over time and use. The manufacturer specifies the maximum operating time of the device under laboratory conditions, where the optimum operating conditions for the device are present and the battery itself is new and fully charged. The operating time in reality may differ from that declared in the offer and this is not a defect of the device but a product feature. In order to preserve the maximum life of the battery, it is not recommended to discharge it to less than 3.5V or 5% of the total capacity. Lower values, such as 3.2V for a cell will damage it permanently and this is not covered by the warranty. If you do not use the battery or the entire device for more than one month , charge the battery to 50% and check its charge level periodically every two months. Store the battery and the device in in a dry place, away from the sun and negative temperatures.

EU DECLARATION OF COMPLIANCE PROVIDED

Shenzhen Huion Trend Technology Co.,Ltd. hereby declares that the type of radio equipment Huion Kamvas Pro 19 GT1902 graphics tablet is in conformity with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following web address: <https://files.innpro.pl/huion>

Manufacturer address: Park,Keji 1st Road, Tangtou Community, Bao'an Distric Bld.1 Shiyan Street Fl.1, 518000 Shenzhen, cn

Radio frequency: 2480Mhz - 2483.5Mhz

Maximum radio frequency power: <20dBm

Environmental protection



Electronic waste labelled in accordance with the European Union directive must not be placed together with other municipal waste. It is subject to separate collection and recycling at designated points. By ensuring that it is disposed of correctly, you will prevent potential negative consequences for the environment and human health. The collection system for used equipment complies with local environmental regulations for waste disposal. You can obtain detailed information on this subject from your municipality, your purification plant or the shop where you purchased the product.



The product complies with the requirements of the so-called New Approach Directives of the European Union (EU), which deal with issues relating to safety of use, health protection and environmental protection, specifying the hazards that should be detected and eliminated.

Importer: **INNPRO**

INNPRO Robert Błędowski sp. z o.o.

Rudzka 65c

44-200 Rybnik, Poland

tel. +48 533 234 303

hurt@innpro.pl

www.innpro.pl

Manufacturer:

Shenzhen Huion Trend Technology Co.,Ltd.

Park,Keji 1st Road, Tangtou Community, Bao'an Distric Bld.1 Shiyuan Street Fl.1,

518000 Shenzhen, Chiny

katherine@huion.cn

EU Representative:

Dilectro Spółka z Organiczona Odpowiedzialnoscia

ul. Brukselska 4

03-973 Warszawa, Poland

rafal.pacula@dilectro.pl