V066 BAIT BOAT

BASIC VERSION USER MANUAL

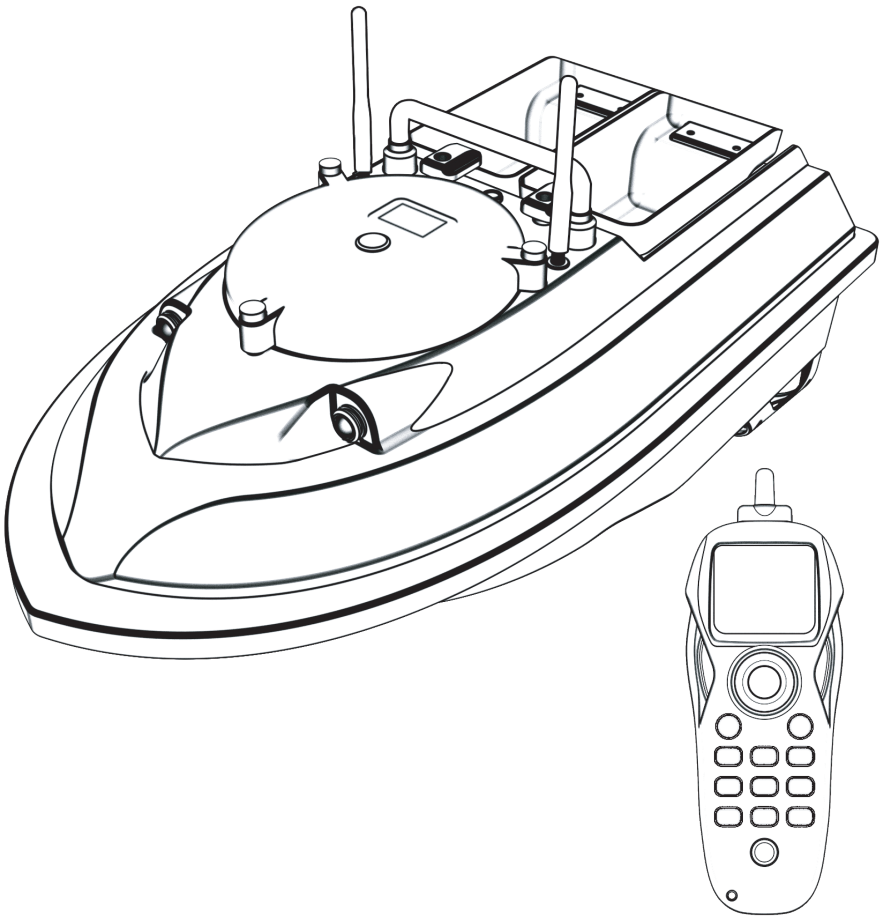

1.Product Introduction

1.1 Boat Hull Parts

The basic structure of the hull is shown in the figure below:

Single Silo Version

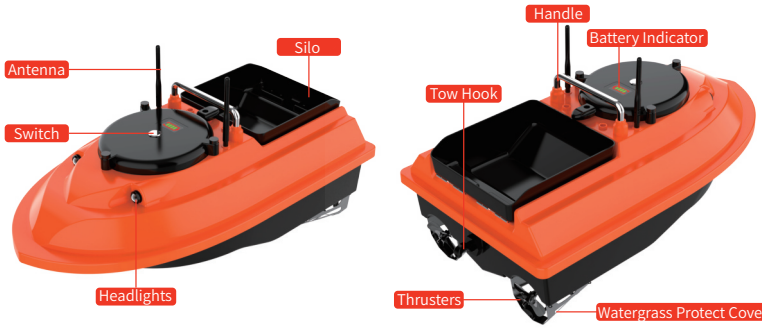

Dual Silo Version

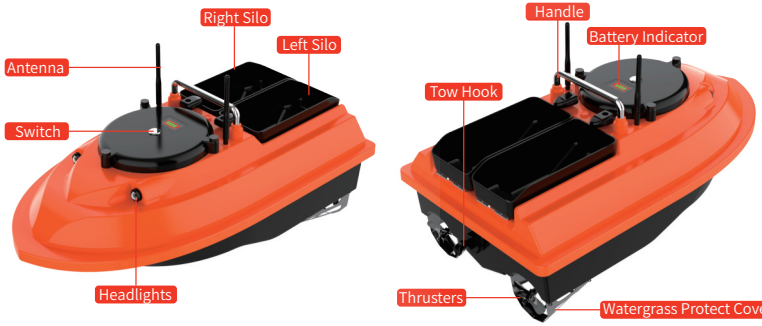

1.2 Buzzer Prompt Instructions

- Both the boat and the remote controller emit a continuous "beep-beep-beep" sound when the battery is in low capacity.
- Press any button on the remote control and it will make a "beep" sound when the operation is successful.

1.3 Remote Control Button Description

Single Silo Version	Dual Silo Version

1.4 Screen Display Instructions

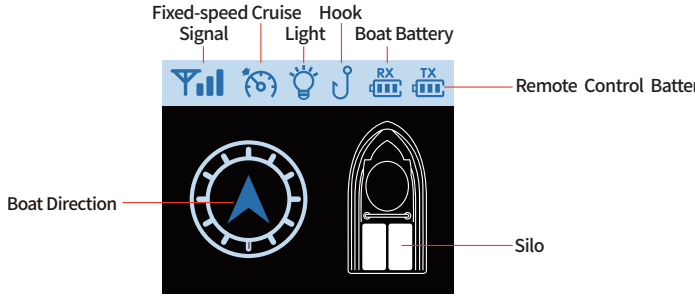

- Signal: Connection status between the remote control and the boat.
- Fixed-speed Cruise: This icon is displayed when foxed-speed cruise control is turned on.
- Light : The icon's display status corresponds to the boat's light status of "steady on - flashing - off".
- Hook : The icon disappears when the tow hook servo is activated and stays on after reset.
- Boat Battery: After pairing, this icon displays the current battery level.
- Remote Control Battery: After turn on, this icon displays the current battery level.
- Boat Direction: Up for forward movement, down for reverse movement, left for left turn, and right for right turn.
- Silo: When the silo servo motor starts, the corresponding icon flashes red and returns to normal after resetting. (In the single-silo version, both silos flash red simultaneously.)

2. Using Instructions

2.1 Installation before use

▪ Antenna and Battery Installation:

①Install the two antennas and tighten them

②Unscrew the nut and remove the battery compartment cover

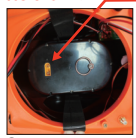

③Insert the battery

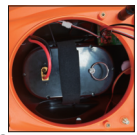

④ Secure the battery with Velcro straps and plug in the power cord.

⑤Install the battery compartment cover and screw back the nut

▪ Battery Removal:

①Hook your fingers around the buckle and pull up

②Lift the battery out of the battery compartment

2.2 Function Operation

Start Up:

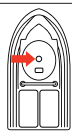

① Place the boat on a level surface and switch on the power supply; the headlights will flash rapidly at this point.

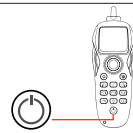

② Once the headlights begin to flash slowly, press and hold the power button on the remote control for three seconds.

③The frequency is successfully linked and the boat light is always on.

Note: Do not put the boat on the slope before the frequency matching, the headlight flashes quickly as the boat is turned on to indicate that the boat is calibrating the gyroscope, and the interference cannot be interrupted, check whether the left and right motors are working before entering the water.

Remote Control Switch/Button Backlight:

Long press the power button to turn the remote on or off. Short press the power button to turn the button backlight on or off.

Note: When the remote is turned on, the backlight is on by default.

Turn on backlight

Turn off backlight

Lighting Control:

Short press to control the boat light in the "Steady on-Flashing-Off" cycle switching. After frequency matching, the default boat light is always on.

Icon display status changes with the boat light status

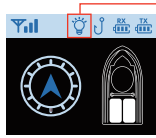

Steady On Flash Off

Tow Hook:

Short press the tow hook button to retract the tail link, and reset after 2 seconds

Hooking servo extension

2 seconds later

Hooking servo reset

The hook icon disappears and stays on after reset

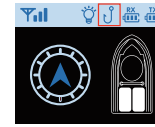

Steering Control:

Forward

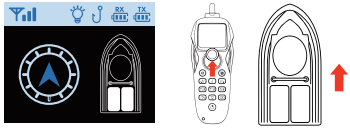

Backward

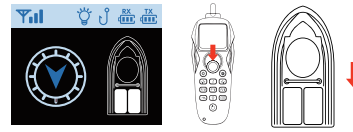

Turn Left

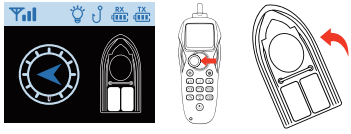

Turn Right

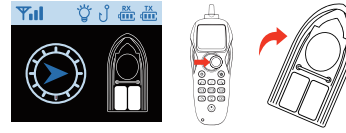

Fixed-speed Cruise control:

Turn on fixed-speed cruise mode

The fixed-speed cruise control icon lights up

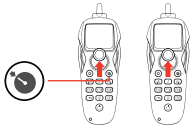

Move the joystick forward and short press the cruise button or push the joystick up for more than 5 seconds.
The remote control emits a "beep" sound, indicating that the operation is successful.

Note: When in fixed-speed cruise mode, the joystick can be used to fine-tune the boat's direction.

Exit the fixed-speed cruise model

The fixed-speed cruise icon disappears

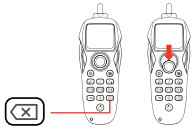

Short press the cancel button or push the joystick down.
The remote control emits a "beep" sound, indicating that the operation is successful.

Yaw Fine-tuning:

Left Trim Adjustment	Right Trim Adjustment
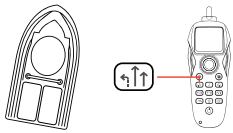	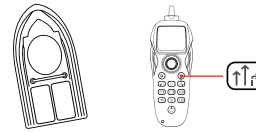
When the boat's course deviates to the right, you can use this button to fine-tune it back to a straight line	When the boat's heading deviates to the left, you can use this key to fine-tune it back to a straight line

Silo Release:

Dual Silo Version Release Diagram

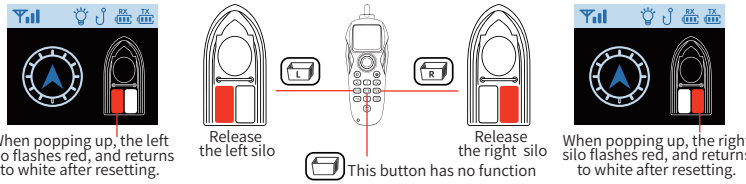

Single Silo Version Release Diagram

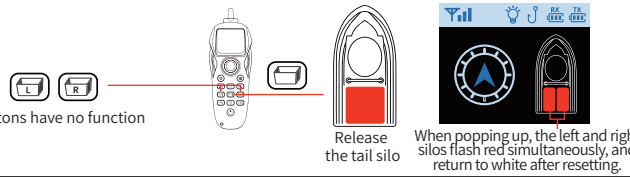

Note: The silo knob cannot be reset manually. To reset the silo, press the corresponding silo button again and reset the silo manually before resetting the silo knob.

Speed Switching:

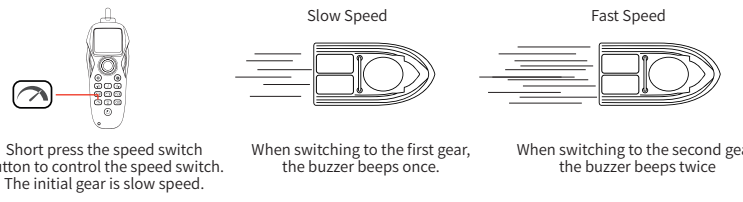

3. Low Battery Reminder and Charging Instructions

3.1 Low Battery Reminder

Low Battery On Boat	Low Battery On Remote Control
① The remote control emits a continuous beeping sound. ② The boat battery icon on the screen shows 0 bar remaining.	① The remote control emits a continuous beeping sound. ② The remote control battery icon on the screen shows 0 bar remaining.
Note: When the battery is low, please drive back the boat and charge it in time to avoid losing the boat.	

3.2 Charging Instructions

- Boat Charging:

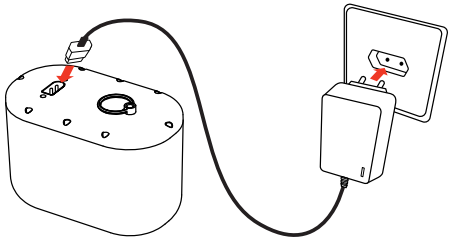

Connect the charging cable to the battery power socket and the socket

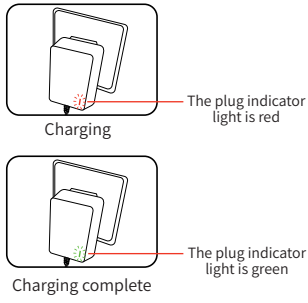

- Remote Control Charging:

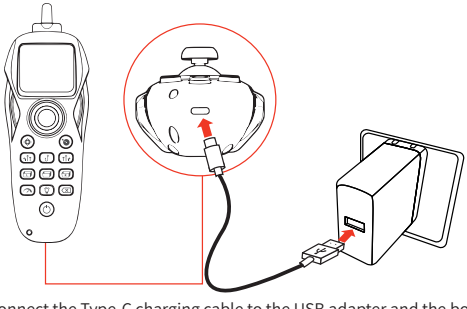

Connect the Type-C charging cable to the USB adapter and the bottom port of the remote control

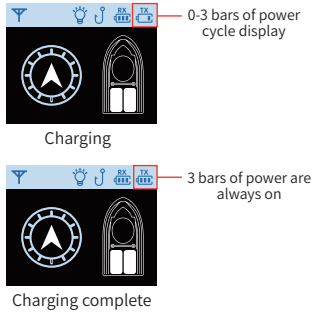

4. Care and Maintenance Guide

▪ Motors

Check for tangled debris after each use.

▪ Boat hull
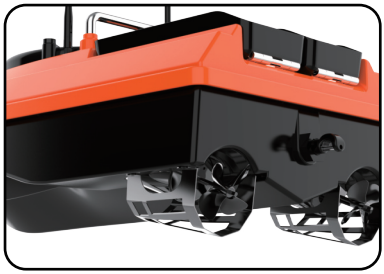
1. After use, please wipe the water to keep the boat dry and clean.
2. When the battery is not used for a long time, please take it out and charge it for storage.
3. Do not store corrosive liquids and items together
4. Please do not close to high temperature objects
5. When not in use, please store the boat to prevent dusting.