TELESIN

For HERO 12/11/10/9/8

Underwater Selfie Stick with Remote Control

QUICK STAR GUIDE

Preface

Thank you for purchasing a Telesin product. Please read this user manual carefully before use.

Important Notes


- Please keep this user manual properly. When handing over the product to others, be sure to include this user manual.
- Pay attention to all warnings and follow all instructions in the user manual.
- **After using the product in a seawater environment:**
  - First, shake off the seawater from the selfie stick;
  - Then soak it in fresh water for 10 minutes;
  - After removing the product from fresh water, rinse it under gentle running tap water for 5 minutes.
  -After washing, wipe away any water droplets remaining on the surface with a soft, dry cloth and leave to dry. Do not dry with a hair dryer or any other heat source.
  -Store the product in a dry, well-ventilated location.
- Do not disassemble or damage this product. If it becomes deformed or damaged, stop using it immediately.
- Do not cover the product with items like towels or clothes during charging to prevent fire hazards.
- Do not drop the product or use it under high temperatures or short-circuit conditions.
- Keep this product out of reach of children.
- The product has passed the waterproof test of GB/T 4208-2017 and IEC 60529-2013 enclosure protection rating standard IP68. It is not recommended to use the product in extreme water environments or unknown liquid environments. Do not use it in hot springs or corrosive liquids.
- The product is only compatible with HERO 12/11/10/9/8 models.
- The waterproof depth of this product is 30 meters.

Warnings

Do not disassemble the product or replace the battery. If you suspect any problem with the product, contact the purchase platform for after-sales service.

Installation and Connection


1. Mount the action camera onto the selfie stick. If diving deeper than 10 meters, use a waterproof case (not included in the package).



2. Open the action camera remote connection interface and click "Connect with the remote" (the connection interface may vary by model, please refer to the user manual of the corresponding model).



3. Press and hold the power button on the selfie stick for 3 seconds to turn it on and automatically search for signals.



4. Before the Bluetooth connection is established, all three indicator lights will light up and flash simultaneously;




Once connected successfully, the indicator light of the corresponding mode will light up.



(Complete the connection within 2 minutes, or the remote will automatically shut down).

Functions



1. Switch Shooting Mode
Press the mode button to switch between camera time-lapse, video, or photo mode. The status light of the corresponding mode will light up when switching.

2. Start Shooting
Press the shooting button to start shooting, press the shooting button again to end shooting.

3. Remote On/Off
Each time you press and hold the power button, you can remotely turn the camera on or off synchronously.

4. Reset Pairing
Press and hold the mode button for 3 seconds to reset pairing.

Indicator Light Instructions

* Note: ● remain on, ◐ flash, ○ not on.

Connection Status	Lamp Display Status	Lamp Display Meaning
Bluetooth connection before	Three lights will remain on and flash together.	◐ ◐ ◐
Bluetooth connection	Indicator light will remain on	○ ● ○
During shooting	Indicator light will flash	○ ◐ ○


Electric charge state	Lamp Display Status	Lamp Display Meaning
Indicates the current battery level is below 33%. Please charge promptly.	One light flashing	◐ ○ ○
Indicate the current battery level is below 66%	Two lights flashing	◐ ◐ ○
Indicate the current battery level is below 99%	Two lights flashing	◐ ◐ ○
When fully charged	Three lights will remain on	● ● ●
At the lowest battery level	The indicator light will begin flashing slowly from the leftmost light. Please charge promptly at this time.	◐ ◐ ◐

Charging

Use the included charging cable for charging, connect the contact end to the charging port on the left side of the selfie stick, and connect the other end of the charging cable to a USB power source.

Charging time: 1 hour
Battery capacity: 70 mAh
Input: Pogo Pin Connector

*Data measured by Telesin laboratory, slight deviations may occur due to changes in objective conditions.

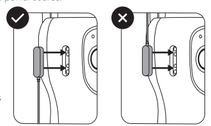

Warning

Hazard warnings:
A product that contains button or coin batteries must display a warning message:
"Warning: Contains button or coin cell battery. Hazardous if swallowed – see instructions"
"Keep out of reach of children. Swallowing can lead to chemical burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately."
All electric toys using replaceable button or coin batteries shall state the following warning in the instructions:
"Warning: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention."

FCC Caution

15.19 Labelling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject tthe following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any inferference received, including interference that may cause undesired operation.
15.21 Information to user.
Any Changes or modifications not expressly approved by the partyresponsible for compliance could void the user's authority to operate the equipment.
15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limitsfor a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againarmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Howvever, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harnnful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit differentt from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IC Caution

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:
(1) This device may not cause interference;
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareil ls radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radicpélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionneement.
L'appareil a été évalué pour répondre aux exigences généralesd'exposition Rf.
L'appareil peut être utilisé dans des conditions d'exposition portables sans restriction.

Disclaimer

Please read this statement carefully and by using this product you will be deemed to have acknowledged and accepted it in full. Please check the product carefully before each use and do not use it if damaged or deformed. By using this product, you acknowledge and agree that you are fully responsible for your actions and the possible consequences of using this productYou undertake to use this product only for legitimate and lawful purposes. You understand and agree that Telesin Digital Co.,Ltd ("Telesin") shall not be liable for any misuse, adverse effects, damages, injuries, penalties or other legal consequences arising directly or indirectly from the use of this product. The user should follow the precautions including but not limited to those mentioned herein. To the extent Telesin reserves the right to interpret and modify this commitment within the limits of national laws and regulations.
*The warranty period for TELESIN products begins 6 months on the day you receive the product.