P20 美英说明书_V0版

尺寸：80*112mm， 材质:128g双铜+哑油

印刷：四色印刷 C0 M63 Y100 K0

折叠方式：折页

oneisall
TRANSFORM HOW YOU PET

Electric Pet Trimmer

Model：P20

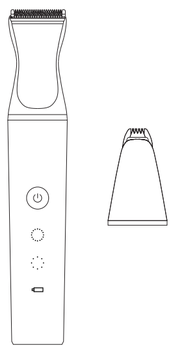

Any problems you have,please contact us:
support@oneisall.com

ON-D13

Safety Warnings

1.Read Before Use: Before using the clippers, read all safety and operating instructions.
2.Electrical Safety: Ensure that the voltage indicated on the rating label matches your electrical outlet. Do not immerse the appliance in water or any other liquids to avoid electric shock.
WARNING: Keep the appliance dry.
3.Supervision: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4.Regular Checks: Periodically check the clippers for damage. If the appliance or power cord shows any sign of damage, do not use it. Contact the service center for repair or replacement.
5.Regular Maintenance: Disconnect the clippers from the power source before cleaning, changing accessories, or performing any maintenance. Keep the blades clean and well-oiled to avoid overheating and ensure optimal performance. Replace blades as needed.
WARNING : Cutting blades may become hot after prolonged use.
6.Storage: After use, unplug and store the clipper in a dry place, away from pets and children.
7.Handling: Avoid touching the blades directly with your fingers. Always switch off the appliance when not in active use.
8.Use for Intended Purpose: These clippers are designed for trimming pet hair only. Do not use them for any other purpose.
9.Disposal: Dispose of the clipper and its accessories according to local regulations for electronic waste.

Product Introduction

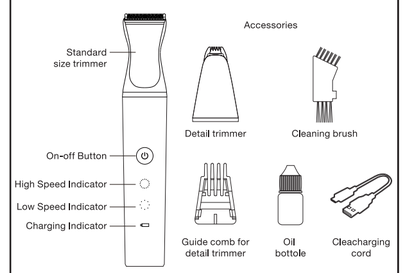

1. Before use, drop a small amount of lubricating oil every few teeth. Due to the high cutting speed of the blade, special oil for trimmer must be used. Do not use grease or mixed oil containing kerosene and other solvents at any time.

2. When in use, press the switch to start the machine, and the work indicator light is on. Press again for high gear. Press the third button to stop the machine

WARM TIPS

In case of uneven or unsmooth shearing during use, the trimmer can be properly lubricated.

Product Specification

Product name:	Electric Pet Trimmer	Model:	P20
Input	5V⎓1A	Battery type:	800mAh Lithium Battery
Charging time:	about 70 minutes	Using time:	about 120 minutes

Features

IPX7 Waterproof
1.5hr Fast Charging
Large Capacity Lithium Battery
Low Noise and Vibration
Type-C Charging
Two Speed Switch

Cleaning & Maintenance

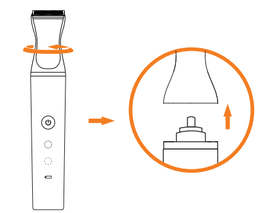

• Remove the blade counter clockwise rotate and pull out the blade

1.Use a clean brush to clean the dirts and hairs around the blade

2.The blade can be remoued out for washing and cleaning

Cleaning and Maintenance

Wipe off hair scraps in replaceable heads slots.
This product is only can be cleaned in wet cloths or with neutral soap lotion.
Wipe the machine and make it dry, then equipped with the head. Keep it well for future use.
Don't wipe clipper body with gasoline, alcohol, Banana Oil and other corrosive chemical agents.
Dent disassemble or repair it without authority, please contact dealar or manufacturefB for repair service.

Attentions

★Do not plug in the power when your hands are wet, otherwise there may be power leakage.
★Do not damage the power cable by pulling hard, otherwise it may cause power leakage, short circuit or fires. If damagejt should stop using immediately and replace in time.
★This product and accessories are not toys. Please keep the accessories out of reach of children to avoid danger.
★If the power cable is found abnormal, put stop using immediately.
★Please use the original power cable for charging, and it can not be used for other models charging to avoid accidents.
★Do not dip the hair when wet, or being ironed or hair dyed to prevent hair damage. This product is only suitable for trimming hair, do not use for other purposes

Trimming Operation

• Trimming with guide comb

According to the desired hair style, select suitable length of guide comb, hold the trimmer with cutter head upwards. Then let the flat surface of comb touch the pet skin gently, move the trimmer forward against the hair in the same direction that hair grows, and cut the hair that needs trimming.

• Trimming without guide comb

Without using guide combs, it requires professional trimming skills to trim hair to the right length. If just move the back side of the cutter head along the pet skin without guide combs, the remaining length of the hair after trimming is about 1mm.

It is advised not to hold the trimmer upside down to trim hair which may cut pet skin.

Don't trim wet pet hair which will reduce cutting performance.
Don't hold trimmer too firmly against pet which may lead to scratch pet skin.

• Trimming skills applicable to different areas

1. Use detail trimmer to trim pet hair on areas around feet, hip and eyes for small size pets.

Instruction of Indicator Light

1. During use, the gear indicator is always on, and the red light of charging indicator flashes when the power is insufficient;

2. When the battery is not fully charged, the red light will be on. When the battery is fully charged, the white light will be on. If you continue to use the battery, it will automatically shut down when the battery power is too low. After three times of automatic shutdown, you can't start the battery without charging, and the charging indicator will flash for three times

3. When the switch is turned off, long press the switch button for 3 seconds or more, and the switch is locked. At this time, short press the switch can not start the machine, and the high and low gear indicator lights flash for 3 times at the same time. Only long press the switch button for 3 seconds or more can the product start normally, and the switch key lock function is removed.

How to Charge the Trimmer

1. Confirm that the machine is in the off state, and plug the USB charger into the power socket;

2. Then insert the type-c connector plug into the fuselage; the indicator light on the fuselage lights up.

(USB charging cable can be plugged into the socket with USB interface / mobile phone charger / desktop computer / laptop computer / mobile power supply, etc.)

• Reminder

1. Please charge the battery before using the new product for the first time;

2. With the self-made 5V charger, please make sure that the current is 1A before charging.

3. When the input voltage is too high (within 18V), the product will not be charged, and the charging indicator will flash red and white alternately.

Contact Us

WE ARE READY TO HELP

oneisall offers a standard **2-year** warranty. if you have any issues with your oneisall product, please do not hesitate to contact us. Be sure to include your proof of purchase, model number, and any relevant photos or videos in your message to expedite the process. Our oneisall support team is available 7 days a week and will respond to your inquiry within **24 hours**. Thank you for choosing oneisall.

Please note that the oneisall warranty does not apply to used products or purchases made from unauthorized sellers. It's important to be aware that the warranty also does not cover consumable parts such as blades, guards, filters, brushes, and similar items. These parts may require regular replacement ormaintenance.brushes, and similar items. These parts may require regular replacement or maintenance.

support@oneisall.com
+1 877-522-8578 (US) Mon-Fri 8am-5pm(PST)
www.oneisall.com

@Oneisall Official

GPSR Product Information

EC REP
Name : Apex CE Specialists GmbH
Add : Grafenberger Allee 277-287,40237 Düsseldorf,DE
Contact Person: Wells Yan
Tel : +353212066339
E-Mail: Info@apex-ce.de

UK REP
Name: APEX CE SPECIALISTS LIMITED
Add: 6f East Union Street, Manchester, England, M16 9AE
Contact: Wells
Tel : +441616371080
E-Mail: Info@apex-ce.com

Product Name: Dog Trimmer
Brand: oneisall
Product Model: P20
Input: 5V ⎓ 1A

GPSR-Manufacturer info:
Business Name: chuzhouguanyidianzishangwuyouxian-gongsi
Manufacturer Address: CN,239200,anhui, chuzhoushi,laianxian,xinanzhenqingliuxilu,taixinxiang-zhangyuanldongldanyuan2403shi
E-Mail: oneisallofficial@hotmail.com

Made in China

oneisall
TRANSFORM HOW YOU PET

Any problems you have, please contact us :
support@oneisall.com