


INSTRUCTION MANUAL

HUANUO

Rev03

HNCM7

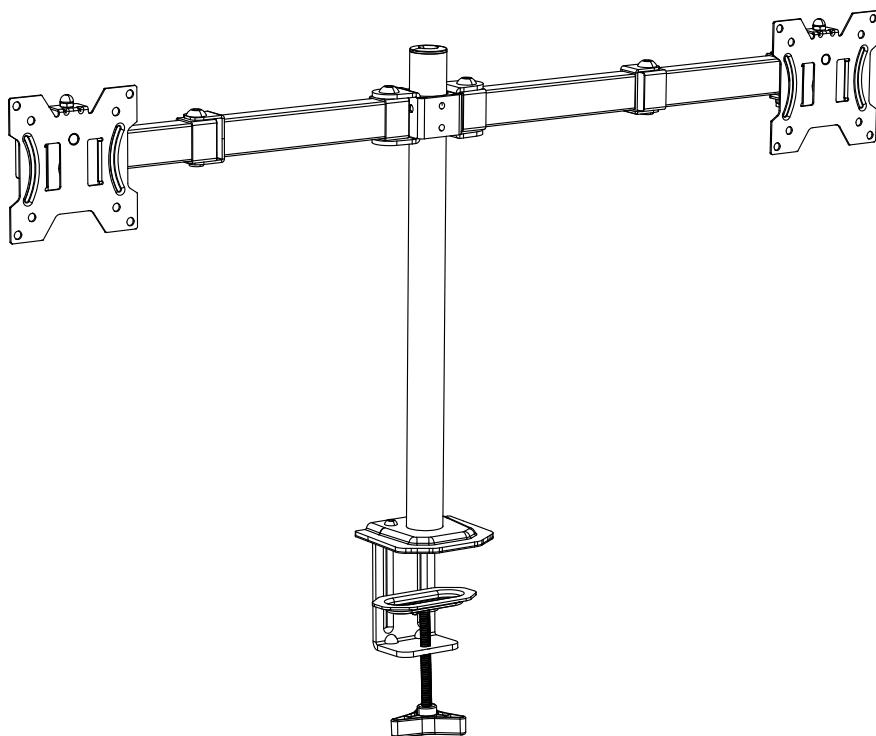

Desk Monitor Arm



1-800-556-0533 (US/CA)
44-808-196-3874 (UK)




support@huanuo.com



www.huanuo.com

Before getting started, let's make sure this mount is compatible.

1 Is the VESA pattern of your monitor 3 x 3" (75 x 75mm) to 3.9 x 3.9" (100 x 100mm)?

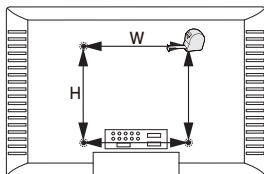


- ☐ Yes – Perfect!
- ☐ No – This mount is NOT compatible.

2 Does your monitor (including accessories) weigh less than 19.8lbs (9kg) ?



- ☐ Yes – Perfect!
- ☐ No – This mount is NOT compatible.

3 Tools Needed (NOT Included)

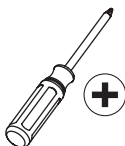

Phillips
Screwdriver



Electric Drill



7/16 – 7/8"
(11 – 22mm)
Wood Drill Bit



3/8" (10mm)
Wrench

4 Important Safety Information

NOTE

- Please carefully read all instructions before attempting installation. If you DO NOT understand the instructions or have any questions or concerns, please call technical support or email customer service.
- Not all hardware included in this package will be used.


CAUTION

- Avoid potential personal injuries and property damage!
- DO NOT use this product on desks made of particle board or other soft woods.
- DO NOT use this product for any purpose that is NOT explicitly specified in this manual. DO NOT exceed weight capacity. We are NOT liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.
- Before starting assembly, verify all parts are included and undamaged. DO NOT use damaged or defective parts. If you require replacement parts, please call technical support or email customer service.


⚠ WARNING

- This product contains small parts that may pose a choking hazard.

Supplied Parts and Hardware




Pole
01 x 1



C-Clamp
02 x 1



Locking Plate
[a] x 1



Bottom Pad
[b] x 1



M8 x 8mm
Bolt
[E1] x 2




M8
Nut
[E2] x 1



3/16" (5mm)
Large Allen Key
[F1] x 1




1/8" (3mm)
Small Allen Key
[F2] x 1

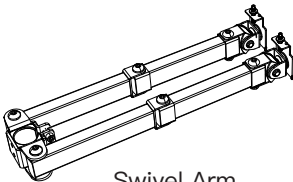


Swivel Arm
03 x 1




Decorative Cover
[C1] x 1

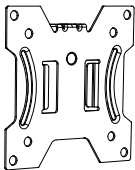


VESA Plate
04 x 2




M4 x 12mm
Bolt
[A] x 8



M4 x 30mm
Bolt
[B] x 8



L13mm
Spacer
[C] x 8






M4
Washer
[D] x 8



M6
Nut
[E3] x 2

Step 1 Install the Base


Option A: For C-Clamp Mounting

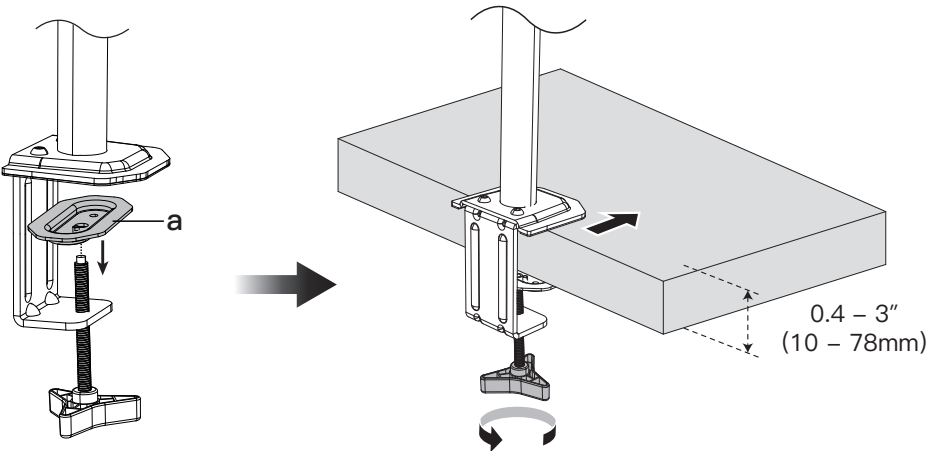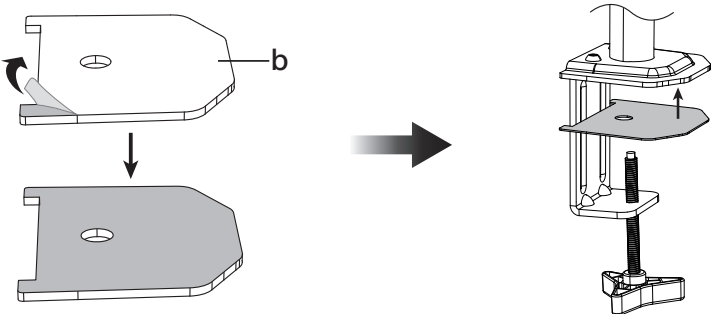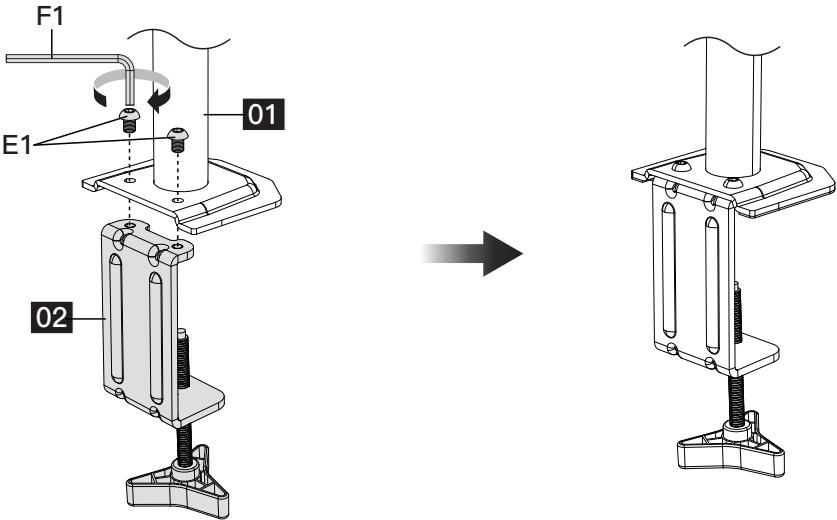

If your desktop is too thin, you may be able to use a wood board or block as a spacer. Please note that the oval C-clamp plate must make full contact with the desk and/or wood spacer.


Example 1

If there is a crossbar underneath the desk, you need to use a spacer that is the same height as the crossbar.

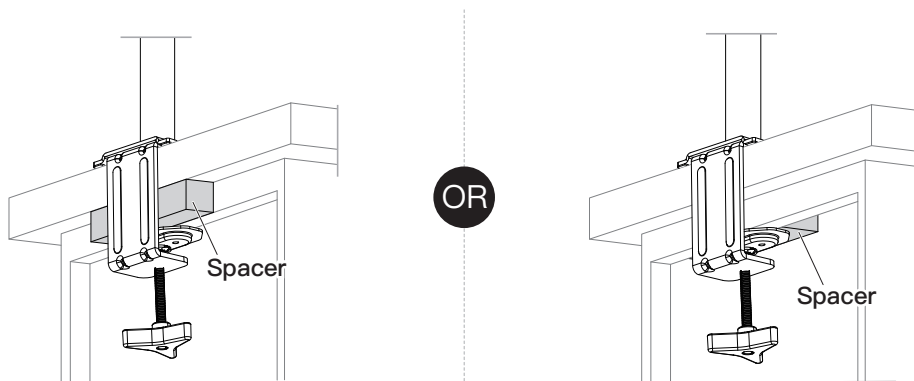


Example 2

A spacer can be placed on top of the desk to fulfill the required dimensions.


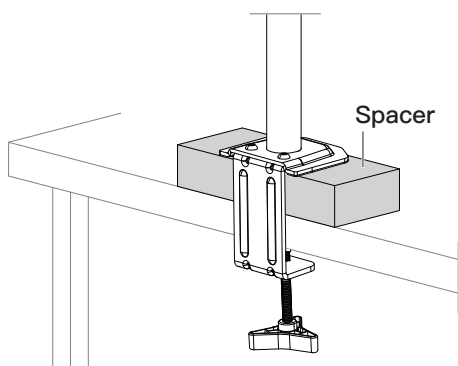


Example 3



A spacer can also be placed on top of the desk to maximize installation height.

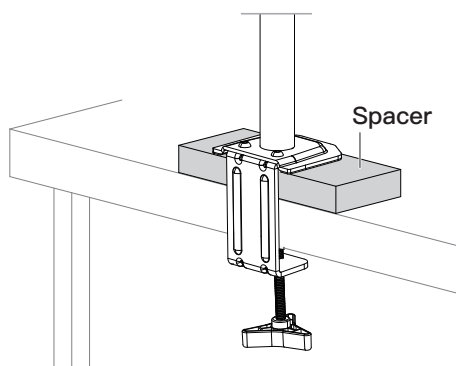

Option B: For Grommet Mounting

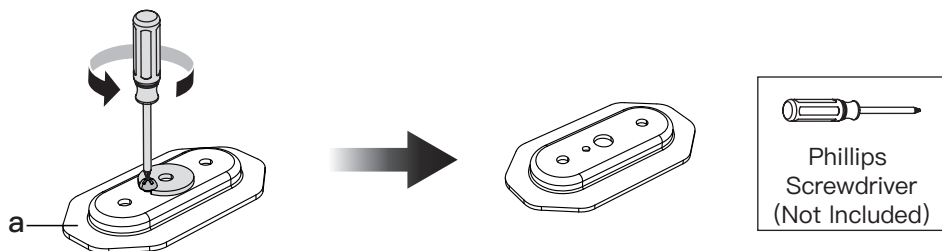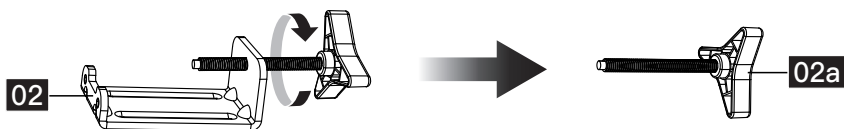


Remove the pre-assembled washer and bolt on the locking plate [a].

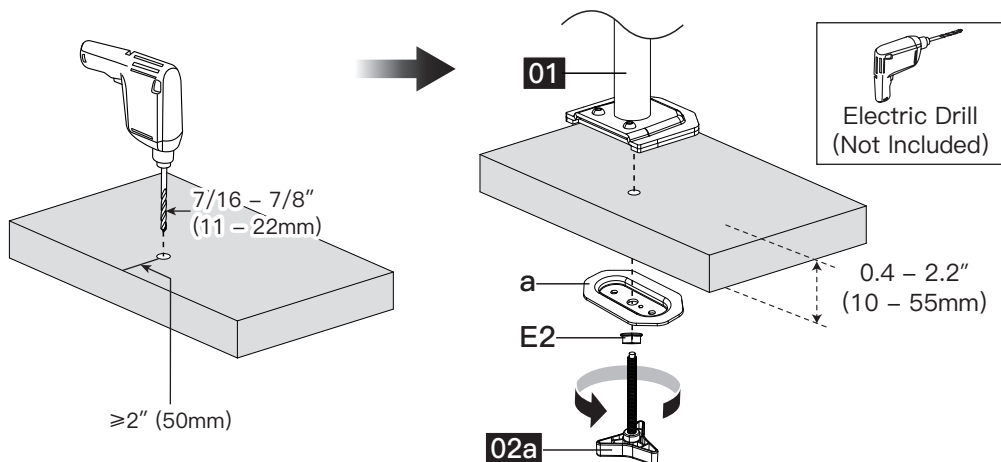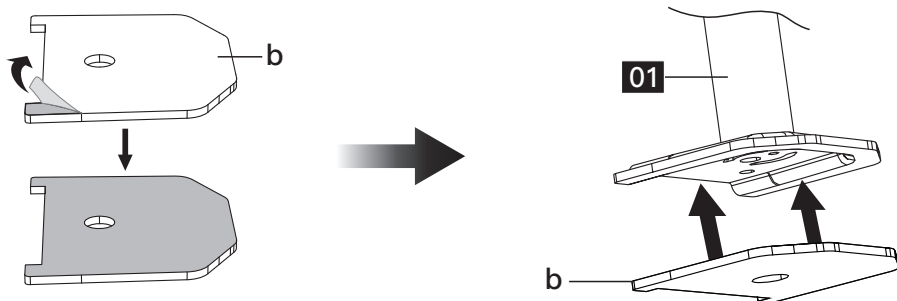

NOTE: If there is no grommet hole on your desktop, mark a hole on your desired position (Be sure to leave 2" (50mm) from the edge of the desktop). Drill a hole using a drill bit in the diameter of $\frac{7}{16} - \frac{7}{8}$ " (11-22mm).


Step 2 Secure the Swivel Arm and Decorative Cover to the Pole

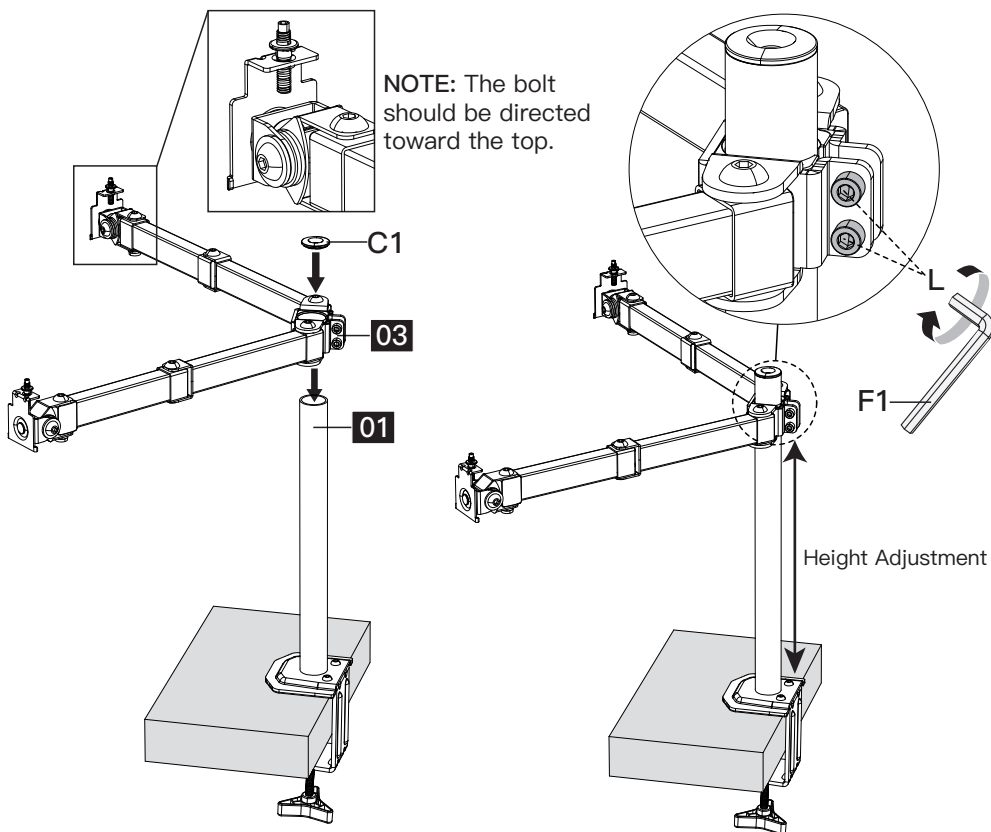


Slide the swivel extension arm [03] downwards to your desired height, and tighten the bolts [L] to hold the arm in place. Ensure the bolts are securely tightened.



CASE: If the head is not straight.





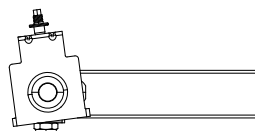


Solution

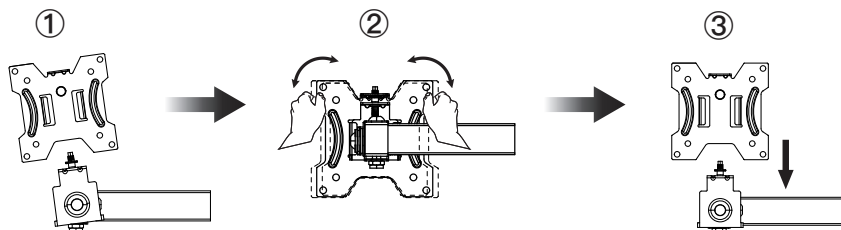


Step 3 Attach the VESA Plates to the Monitors

Select Monitor Bolts

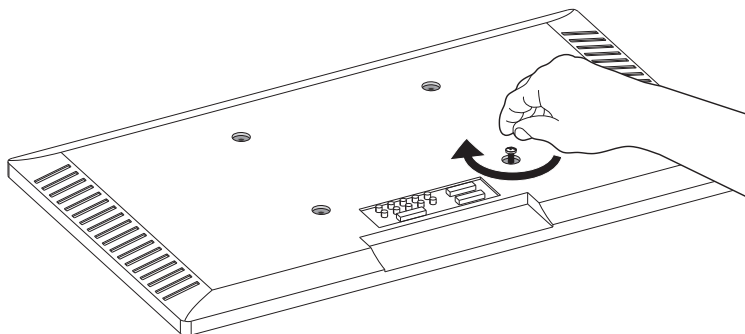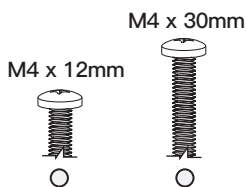


Hand thread bolts into the threaded inserts on the back of your TV to determine which bolt (M4 x 12mm or M4 x 30mm) to use. A minimum of 4–5 turns into the threading is required. Do not turn past the bottom of the hole.


Option A (For Flat Back Monitor)

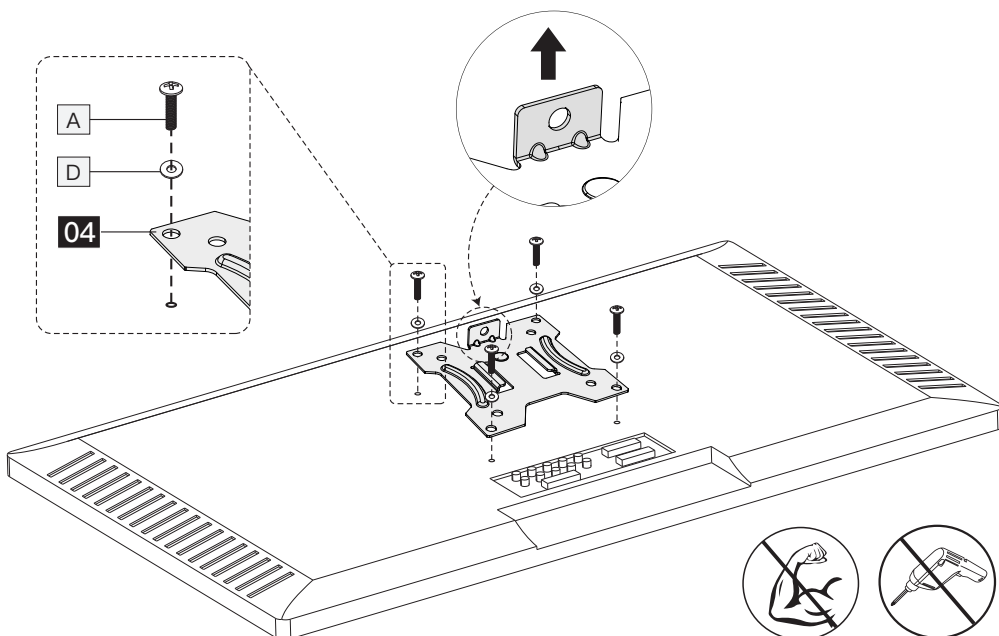

Option B (For Curved Back Monitor)

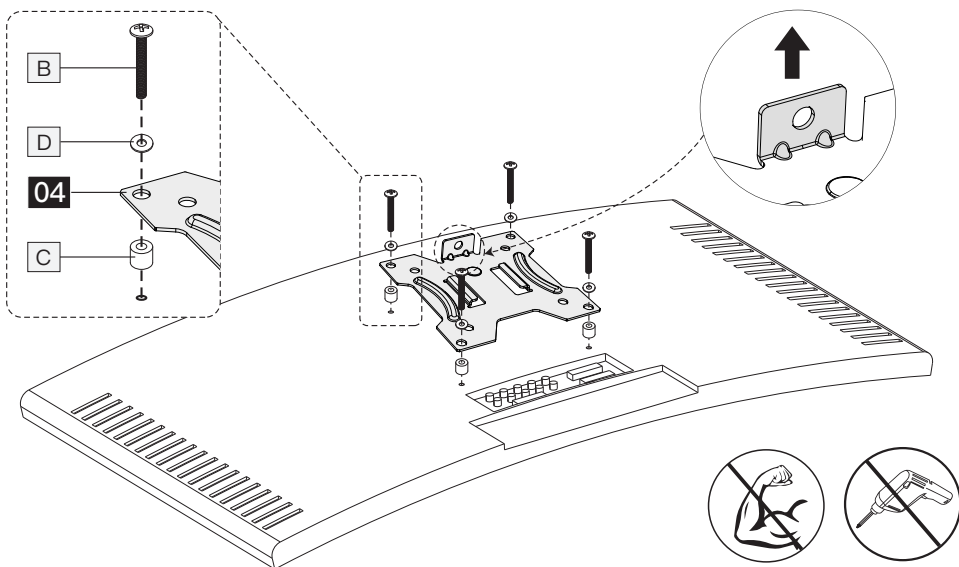

Step 4 Hang the Monitors on the Swivel Arm


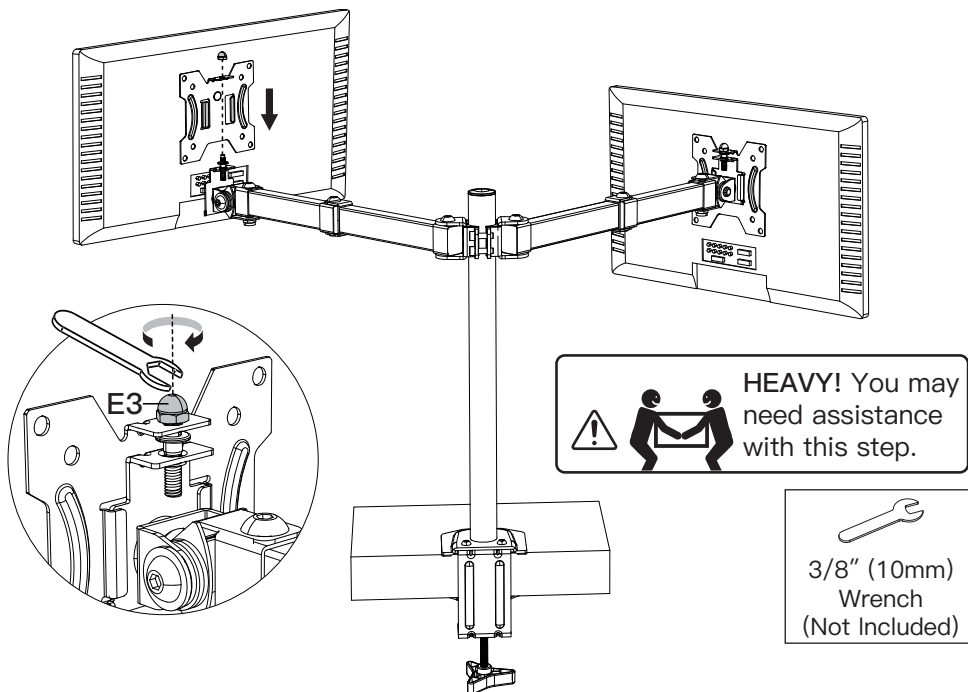


Hang the monitor on the head of the swivel arm using the hanging tab and nut [E3]. Tighten the nut [E3]. Make sure the nut is secured before you rotate the monitor.

Step 5 Alignment of Two Monitors


NOTE: Ignore this step if monitors are level.


3/8" (10mm)
Wrench
(Not Included)

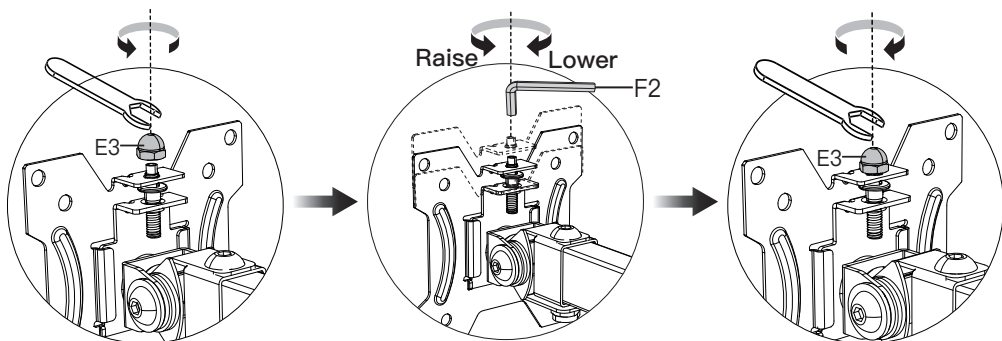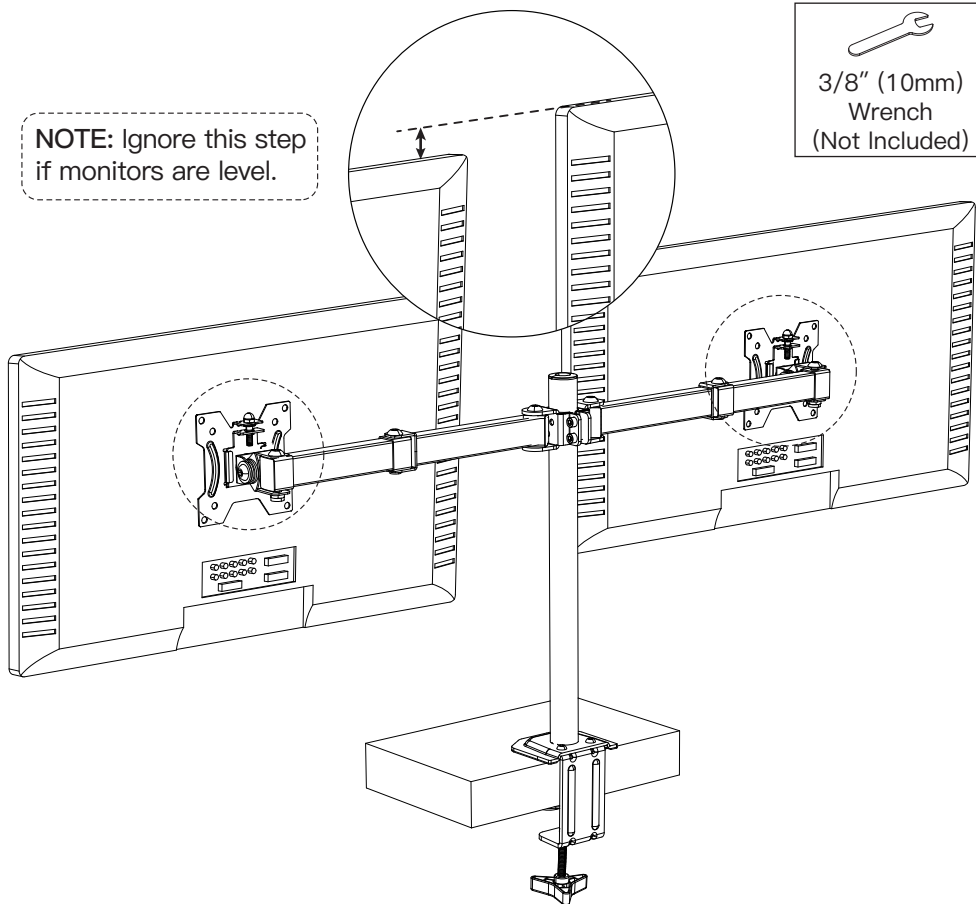


Remove the nut [E3] with wrench, then turn the bolt with small Allen key [F2] to raise or lower the monitor. Then retighten the nut [E3] after adjustment. Individual monitor height adjustment helps to perfectly align the monitors.

Step 6 Tilt Adjustment

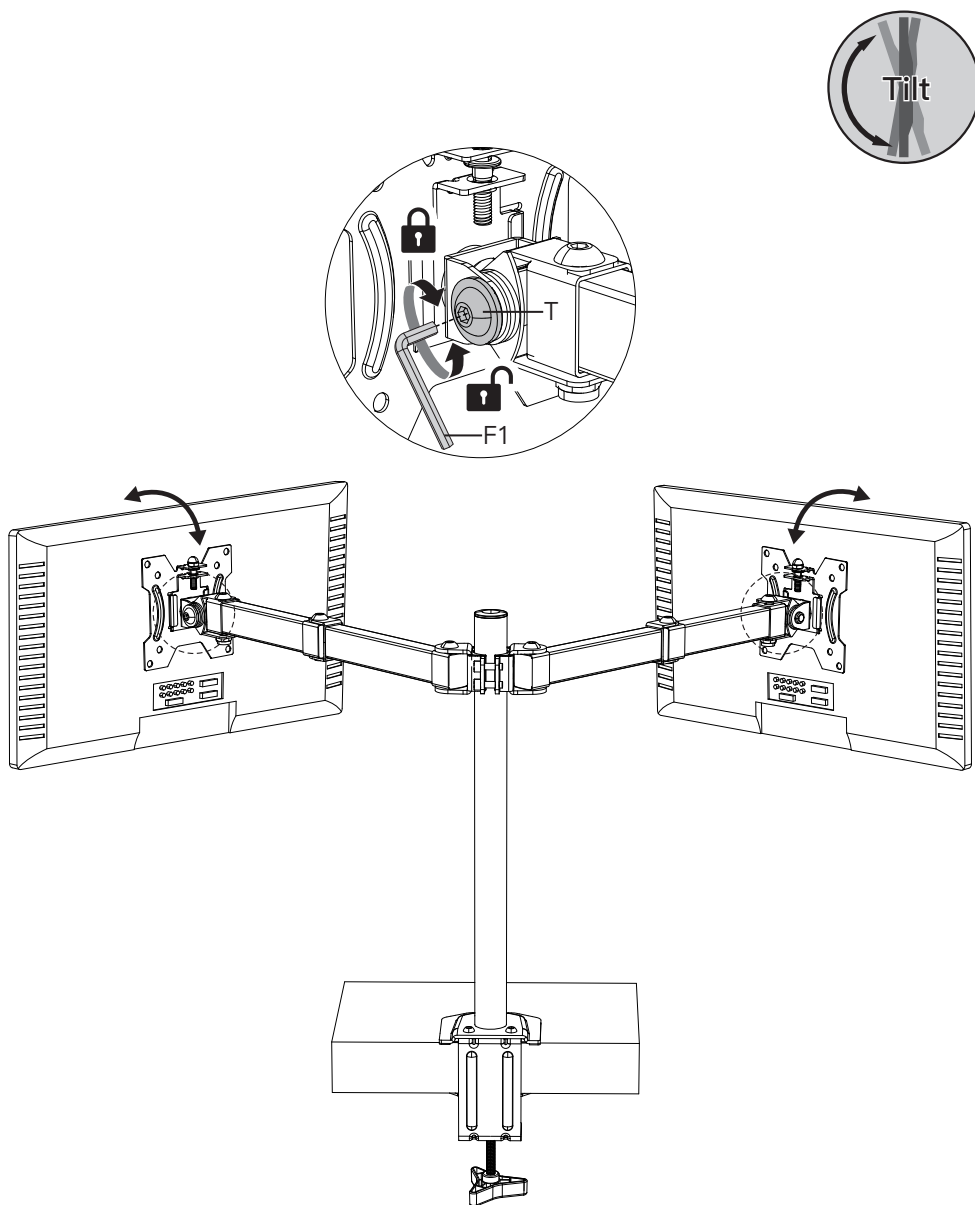


The monitor should adjust easily when moved, then stay in place. Adjust the tilt tension bolt [T] if your monitor naturally tilts up or down.

Step 7 Cable Management

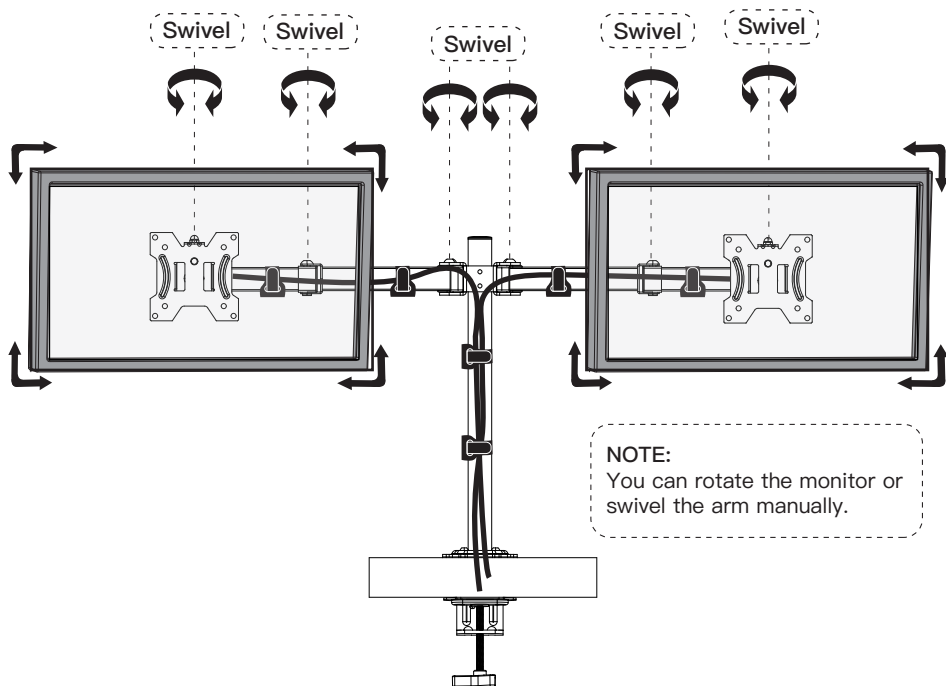

WARNING: Ensure the monitor bolts and bolts securing the monitors to the mount are fully tightened before rotation.

Step 8 Rotation Restriction

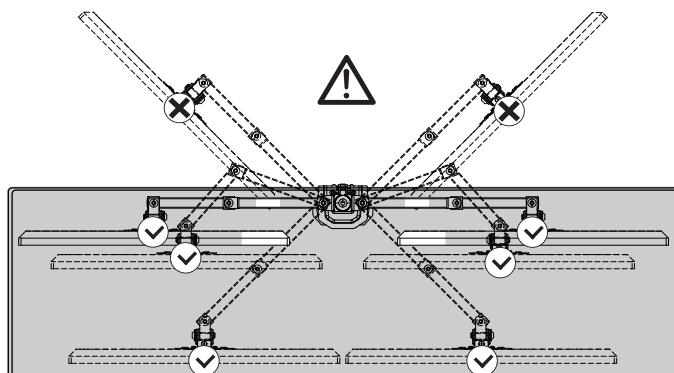

WARNING:

Do not position or swivel the monitor beyond the edge of the desktop. Doing so may cause the unit to tip over and fall.