



A2

Smart Glasses

Instruction manual

Safety Tips

Smart Glasses User Manual >>


Please read this manual carefully before using this product and keep it properly.

1. This product is not water-resistant. Do not use it in high-humidity environments such as bathrooms, showers, or saunas.
2. If you feel an abnormal temperature while wearing or charging the device, remove it and stop using it immediately.
3. If the device overheats or becomes unresponsive while not being worn, disconnect the charging cable immediately to avoid damage.
4. To prevent possible hearing damage, avoid prolonged use at high volume levels.
5. Do not use this product during strenuous exercise to avoid accidental injury.

Product Introduction

Smart Glasses User Manual >>

This product is an AI smart device in the form of glasses. It supports calls, music playback, recording, photography, video recording, simultaneous interpretation and AI dialogue, providing you with a comfortable all-weather AI smart experience.

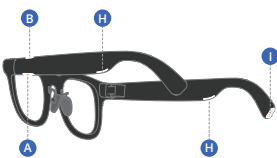

- | | | | | |
|-----------------------|------------------------|------------------------------|-------------------|------------------------|
| A Power on/off | B AI/recording | C Photo/video capture | D Touchpad | E MIC/Indicator |
| F Camera | G Privacy light | H Speaker | I USB-C | |

A Power on/off

- Toggle the switch forward or backward to turn the machine on or off.

C Photo/Video Recording

- Taking a photo: Short press.
- Recording a video: Double-click the button to start; short press the button to end.
- Force restarting : Long press for 16 seconds.
- Incoming call: Short press to answer, long press for 2 seconds to end.
- During a call: Short press once to end.

B AI/recording

- Wake up the AI Voice Assistant: Short press to wake up/close.
- AI Quick Image Recognition: Double-click the button.
- Record: Long-press the button to start recording, short press to end.

D Touchpad


- Play/Pause music: Double-tap the touch area.
- Adjust volume: Swipe forward to increase volume, swipe backward to decrease volume.
- Adjust volume: Swipe forward to increase; swipe backward to decrease
- Activate/close the phone's voice assistant: Long-press to activate/exit.

Instructions

Smart Glasses User Manual >>


(1) Power On/Off:

- Dial code below the left temple (as shown at position A in the figure above)
- Power on forward (indicator light flashes blue)
- Turn off the power (the indicator light turns off)

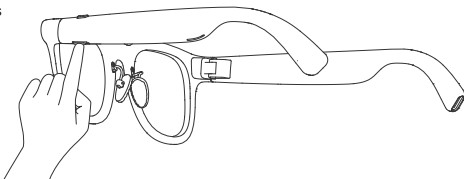

(2) Charge:

- The red indicator light is flashing: The device is low on battery. Please charge it immediately.
- A solid red indicator light indicates the device is charging.
- A solid green indicator light indicates the device is fully charged.

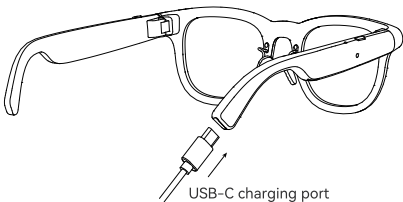

USB-C charging port

(3) Connecting devices:

- You can download it by searching "HeyCyan" on Google Play or App Store.
- You can scan the QR code below and follow the link to download and install the "HeyCyan" app.
- Device requirements: Support Android 9.0 and above, iOS 13.0 and above.
- Go to the APP homepage, click Connect Device, select the name of the device you want to connect to and pair it. After successful pairing, you can start using the glasses.



Scan the QR code to Download the app: HeyCyan

WARNING

Smart Glasses User Manual >>

Before using and operating this device, please read and follow the precautions below to ensure optimal performance and avoid dangerous or illegal situations.

1. In order to prevent hearing damage, please do not use high volume for a long time.
2. Do not heat or bend the temple of the glasses to avoid damaging the temple and causing functional failure.
3. This device shall not be used for direct observation of the sun, for the protection of artificial light sources, or as eye protection against mechanical impact injuries.
4. Using harsh cleaning tools or the wrong cleaning products may damage the product. Please use the included special eyeglass cloth or a clean, gentle cloth to clean the product. Use a standard neutral cleaning solution. Avoid abrasive cleaners, sprays, highly concentrated cleaning solutions, chemical cleaning solutions, alcohol, or acetone. Doing so may damage, deform, or discolor the frame, accessories, or lenses.



Warning: The smart watch should not be used for any medical purpose though it with dynamically monitor the heart rate at real time .