


Brief introduction

This instrument is an electronic intelligent food thermometer. It is full-featured and has the function of professional measuring food temperature.

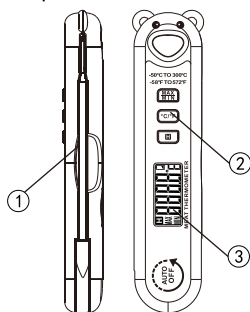

- ① Temperature probe
- ② Function button
- ③ Display screen

Power on/off

Turn on the probe and the machine turns on automatically. Retract the probe, the machine turns off automatically.

Max/Min measurement

Press the "  " key to turn on the max/min measurement mode, and press again to cycle through the max and min measurement values. Press this key again to exit Max/Min measurement, then return to normal measurement.

Data Hold

During measurement, short press "  " to turn on or off data hold function .

Temperature unit switching

During measurement, short press "  " to switch the Celsius or Fahrenheit unit .

Backlight

The green backlight is automatically lit at power on and goes off after 15 seconds. After the backlight is off, press any function key, the green backlight

will be re-lit for 15 seconds and then go off.

Technical index

1. Measuring temperature range:

-50°C~300°C

- -20°C~150°C: $\pm 1^{\circ}\text{C}$
- 150°C~200°C: $\pm 1.5^{\circ}\text{C}$

Other range of temperature:

$\pm 2^{\circ}\text{C}$

2. Operating environment:

-10~50°C / 20 ~90%RH

3. Storage environment:

-10~60°C / 20 ~90%RH

4. Battery: CR2032 coin cell X 1

Maintenance

Replace the battery

1) Turn off the power of the instrument

2) Loosen the screw on the battery cover with a screwdriver and open the battery cover.

3) Remove the old battery and replace it with a new one of the

same type (CR2032 button cell)

4) Then cover the battery cover and lock the battery cover with screws.

Cleaning

Use a mild detergent and a slightly damp cloth to clean the meter surface.