


ANLAN

Multifunctional Skin Care Machine

User Manual

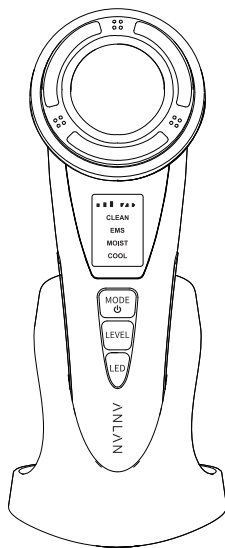

Thank you for purchasing the ANLAN Multifunctional Skin Care Machine. Please be sure to read this manual before use to ensure safe and correct use. In addition, this manual also serves as a warranty card, so please keep it in a safe place.

※ This product is not a medical device used for diagnosis or treatment, but a support product for general household use.

Safety Precautions



In order to prevent harm to users, please read this manual carefully and follow the manual step.

 Warning	Inappropriate use can lead to undesirable consequences.
 Attention	Please follow the instructions to use the machine to avoid hurting.

 Prohibition	 Warning
	Please don't use this device with other medical electronics. • Never use this device with following medical electrical equipment. • Tiny electro-magnetically damaged implant, such as pacemaker. • Medical electronics for life support such as artificial heart / artificial lung. • Portable medical electronics, such as device of electrocardiogram.
 Mandatory	 Attention
	The people mentioned below should consult a doctor before using the device. • Women in pregnancy • People with acute (painful) illness • Patients with tuberculosis • Patients with facial neuralgia • People with heart problems • People with malignant tumors • People with abnormal blood pressure • People suffering from infectious diseases • People with hemophilia • People with febrile illness • People with allergies • People suffering from infectious diseases

Mandatory	• People with a history of dermatitis like atopic and contact dermatitis • People with sensory disturbances due to severe peripheral circulatory disturbances such as diabetes
-------------------------	---

Product Details

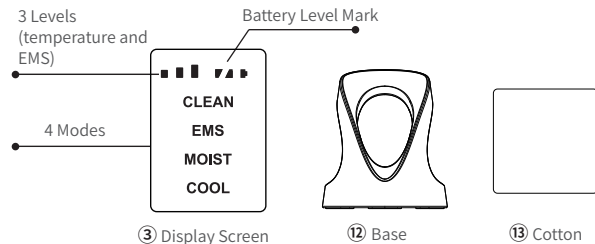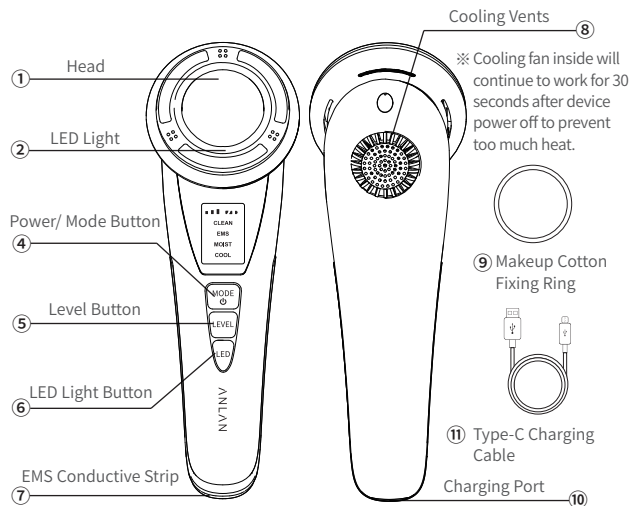

Specification

Product Name: Multifunctional Skin Care Machine
Model: C812A
Material: ABS, Stainless Steel
Product Size: Appr. 179*60*61mm
Product Weight: Appr. 195g
Vibration Frequency: 8000rpm
Temperature: Hot: 38 °C ~ 42 °C (± 3 °C) Cold: 6 °C ~ 10 °C (± 3 °C)
Wavelength of Light: Red Light (622nm), Blue Light (467nm), Green Light (523nm) (±5nm)
Battery Capacity: 1000mAh
Charging Time: Appr. 3 Hours
Automatic Power OFF: 5 Minutes (CLEAN, EMS, MOIST), 2 Minutes (COOL)
Accessories: User Manual, Type-C Charging Cable, Cotton Pad Ring, Base, Cotton Pad
Warranty: 1 Year

Before Use



For the first use, we recommend you test device on your arm. Try it on the skin with your toner, lotion or cream before long term using.



1. Wash your arm with cleanser, then wipe with towel.



2. Select "MOIST" mode and apply your skin care products to test it.



3. If there is no discomfort after 24 hours, you can use the device with reassurance.



Note

- Please remove your makeup and clean your face before using.
- Don't stay in one place for more than 10 seconds.
- Please adjust an proper temperature according to your needs.
- Be sure to touch the metal sensing area when using.
- Don't use on dry skin directly, skin care products are recommended.
- If you feel uncomfortable, stop using it and go to see a doctor.

Modes & Functions


Mode	Function	Recommend	Use Frequency	Level
CLEAN	Hot Vibration Ion+ Export Red/Blue/Green Light	Makeup Remover	Once a day, 5 minutes / time	Temp: 3 Level (Warm: 38°C-40 °C-42°C) Ion+ : 3 Level
EMS	EMS Vibration Red/Blue/Green Light	Toner, Lotion Mask, Serum	Once a day, 5 minutes / time	EMS: 3 Level
MOIST	Vibration Ion- import Red/Blue/Green Light	Toner, Lotion Mask, Serum	Once a day, 5 minutes / time	ion- : 3 Level
COOL	Cool Vibration Red/Blue/Green Light	Toner, Lotion Mask, Serum	Once a day, 2 minutes / time	Temp: 3 Level (Cool: 12°C-8°C-6 °C)

※ The device needs high power in COOL mode, which will cause the battery indicator to display inaccurately. This is normal and can be used normally.


※ You don't have to use each mode in order. You can choose the mode and usage time according to your skin condition.

※ Note: Excessive use will put a strain on your skin, so please avoid using all modes every day.


How to Attach / Detach the Cotton Pad Ring

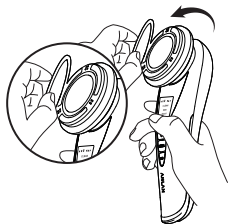

- ❶ Remove the cotton pad ring.

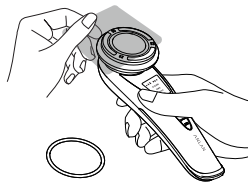

- ❷ Put cotton on the head.

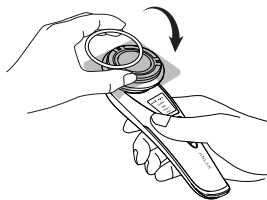

- ❸ Install the cotton pad ring.



- ❹ Apply makeup remover/toner to cotton.



Power / mode button

Press and hold to turn on / off.
Short press to adjust the modes.



Level button

Short press to adjust the temperature and EMS intensity.
※ Be sure to use from level 1 when using for the first time or until you get used to it.



LED light button

Short press to select red / blue / green light.
※ You will hear a beep notification before the machine automatically shuts down. Switching modes recalculates the auto-off time.

Micro current conductive strip

Be sure to hold the main body so that your hands touch the micro current induction strip of the handle.



EMS
Conductive
Strip



Using Steps

1. Wash face with facial cleanser and wipe off water.



2. When using CLEAN mode, wet cotton with your toner. (Do not use serum, lotion or gels.)


When using EMS, MOIST, COOL mode, apply lotion, serum, gel, sheet mask, etc.



3. Slowly move the device to massage face after applying skin care products.

※ Hold the conductive strip of device. If you don't touch it, you won't feel any vibration and micro current.

- ① From nose to forehead
- ② From bottom of forehead to top
- ③ From center of face to the outside
- ④ From chin to cheek

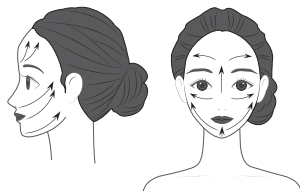

Maintenance

- Turn off the power after use.
- The main body cannot be washed with water.
- Never use thinner or benzine.
- If it is dirty, wipe it off with a towel or tissue.
- Do not put the main body in a fire or overheat.
- Do not leave product in direct sunlight or near heat.
- No one but a repair technician should disassemble, repair or modify.

- Do not leave the product in a humid place such as bathroom.
- Store it out of reach of children and in a place.
- Please do follow precautions and warnings above.
- We are not responsible for any injuries, malfunctions, damages caused by your incorrect use, disassembly, modification, repair, etc.

About Charging

- Never charge the product in a humid place such as when the terminal is wet or in the bathroom. There is a risk of fire, electric shock, and burns.
- Before charging, make sure the charging port is clean and dry.
- If the battery is low on power, it will beep.
- Estimated charging time is about 3 hours. When charging the main unit, the battery level mark flashes. When fully charged, the battery level mark lights up. (Caution: The charging time may vary depending on the charging environment.)
- Do not use while charging. Unplug the cable from the main unit except when charging.
- Be sure to use the working voltage, AC adapter, etc. under the conditions specified in this manual.
- If you are using the product for the first time or if you have not used it for a long time, charge it before using it. Also, to protect the built-in battery, charge it once a month even if it will not be used for a long time.
- A suitable room temperature for charging is 15-30 °C. Charging at low temperature will shorten the battery life, so please charge at an appropriate temperature. Also, charging speed may decrease at low temperatures.
- The main unit may become slightly hot during charging, but this is not a malfunction.
- If the operating time is abnormally short even when the battery is properly charged, contact customer service.

FAQ

Q: It seems that the device is still vibrating after the power was turned off.

A: After use, the device inside are still hot, so even if the power is turned off, the ventilation will continue to work for 30 seconds to cool down machine

Q: The head does not vibrate.

A: ① It is necessary to make an complete electronic circuit of this product to feel vibration. Hold the conductive strip on side of device and lightly put device top against your skin to create an electronic circuit. (If the head is separated from the skin, it will not vibrate because no electronic circuit can be created.)
② Always keep your skin moisturized with lotion or serum. If skin is too dry, transmission of vibration and EMS will be impaired, which may reduce the effect and cause skin problems.

Q: Can I use it on anything other than the face (body, etc.)?

A: Only for the face. Do not use on anything other than the face.

Q: Do you remove the cotton pad ring and use it?

A: Only CLEAN mode needs to be used with cotton pad ring. In modes other than CLEAN mode, you need to remove the cotton pad ring.

Q: Isn't it more effective to press it strongly?

A: You don't have to push hard. Apply lightly so as not to put a strain on your skin.

Q: Can I use it with makeup on?

A: Please do not use with makeup on, wash your face before using.

Q: My hand feels tingling during use, is it okay?

A: Please dry your hands before use. Since it works with a weak current, the current also flows in the hand to form a circuit. But it is a very small electric current, so it has no side effect to health.

Q: What is the estimated usage time? Is it okay to use it every day?

A: Skin care modes can be used everyday. clean modes are suggested to use 3 times/week.
We suggest you use it 15-20 minutes a day, but different people have different withstanding capacity, please shorten or extend use time according to actual situation.

Q: I have acne and inflammation on skin, can I use it?

A: As the skin is fragile during inflammation or acne, please avoid sensitive areas.

About the Disposal of Multifunctional Skin Care Machine



This product uses a lithium-ion battery. Lithium-ion batteries are a valuable recyclable resource. When disposing of used products, remove the lithium-ion battery and take it to a cooperating store that has a recycling box or a specific collection window.