



INSTRUCTION MANUAL

EN



Baby Bottle Sterilizer & Dryer

MODEL: LS-BE916

120V,60Hz,500W

Please read this user manual care fully before
using and save it for future reference

Sincerely Thank you

Thank you so much for purchasing from us and placing your trust in our brand.

GROWNSY - Parent's best helper.

GROWNSY creates modern and thoughtful baby products for parenthood. Starting from smart feeding essentials, GROWNSY provides a broad portfolio for all scenarios related to parents and babies. We are committed to building a one-stop maternal and baby life brand.

With the core concept of "making ideal products that express love and care", Grownsy insists on solving most difficult problems during manufacturing and offering the most convenient items to our user. Grownsy's products are modern in design, creative in structure, and smart in use.

For any questions or issues, please email us:

service@grownsy.com

Or SMS GROWNSY to (833)524-0498

We will go above and beyond to resolve any customer issue within 24 hours.

Randell

Founder of GROWNSY



Precautions and Warnings

Please read the manual carefully before use and operate in strict accordance with the methods in the manual.

1. If the power cord is damaged, it must be replaced by professionals from the manufacturer.
2. Please keep children or disabled people away from this product
3. Do not knot or bundle the main power cord. To avoid tripping over the power cord, do not hang it over the edge of the desk.
4. When working, place the product in a horizontal position stably.
5. Do not immerse the base for cleaning.
6. Do not use abrasive chemical detergents to clean this product.
7. Do not touch the product during work. Please take the bottles out after the machine cooling down to avoid burning.
8. Always disconnect it from the power source before assembling, disassembling or cleaning.
9. In order to avoid the danger caused by the false reset of the thermal circuit breaker, the machine cannot be powered by an external switching device, such as a timer or a circuit connected to a general-purpose component that is regularly turned on and off.
10. It is normal for the product body to become hot when working
11. If the appliance is abnormal, please stop using it immediately, pull it out from the socket, and have it repaired by a professional.
12. Do not unplug the power plug when your hands are wet.
13. Store the power cord of the plug when not in use.


Please operate in strict accordance with the operating regulations of this product. The company is not responsible for accidents caused by improper use.

Features

1. Compact and space-saving.
2. Equipped with a drying function to prevent bacteria growth in wet bottles.
3. User-friendly.
4. BPA-free.


The Name of Each Accessory

EN

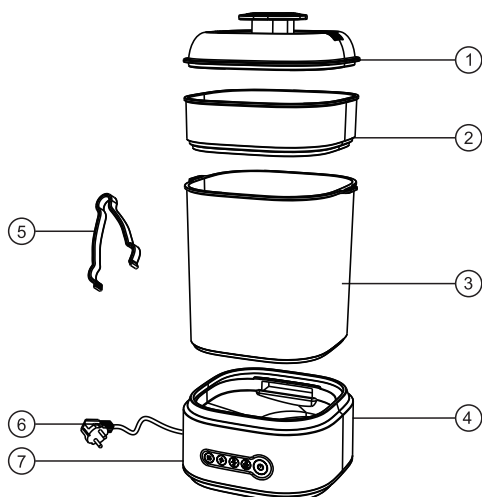

- 1-Top Lid 2-Basket for small parts 3-Bottle rack
4-Sterilizer base 5-Bottle clip 6- Power plug 7-Function panel

Panel introduction

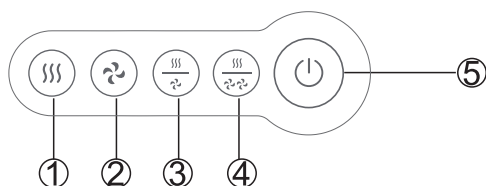

- ① Sterilization (8 mins) ② Drying (40-min drying + 24-hour storage)
③ Automatic Mode I (8-min sterilization + 40-min drying + 24-hour storage) ④ Automatic Mode II (8-min sterilization + 60-min drying + 24-hour storage)
⑤ Power ON/OFF

Product Parameter

Product Name	Bottle Sterilizer & Dryer	Model	LS-BE916
Power	120V,60Hz	Wattage	500W

EN

Steps of Usage

Step 1



Pour 90ml of distilled water (Be sure to use distilled water to prevent limescale build up)

Step 2



Put the bottle rack on the sterilizer base

Step 3



Put the cleaned baby bottle upside down on the bottle rack

Step 4



Put the upper smaller rack on the bottle rack

Step 5



Put the pacifier and accessories in the upper basket

Step 6



Cover the top lid then plug in power
Press the function button to choose the working mode

1. Power-On and Standby:

Plug in the power supply and pour 90ml of water into the unit. Press the switch button gently to turn on the device, which will enter standby mode. If no operation is performed within 5 minutes, the device will automatically shut down.

2. Sterilization Mode:

Press the sterilization button to initiate an 8-minute high-temperature sterilization program. The device will automatically shut down upon completion.

3. Drying Mode:

Press the drying button to start a 40-minute drying program.

After the program ends, the device will automatically enter a 24-hour storage mode.

4. Automatic Mode I (8-Minute Sterilization + 40-Minute Drying):

Press the automatic button 1 to start an 8-minute sterilization process, followed by a 40-minute drying mode. The device will then automatically enter a 24-hour storage state upon completion.

5. Automatic Mode II (8-Minute Sterilization + 60-Minute Drying):

Press the automatic button 2 to start an 8-minute sterilization process, followed by a 60-minute drying mode. The device will automatically enter a 24-hour storage state upon completion.

6. Mode Switching:

In working or standby mode, any button can be pressed to switch between functions at any time.

Note :

1. After sterilizing , please do not open the cap immediately to avoid burning.
2. Water should be poured from the side opposite to the air outlet to avoid water entering the inside of the product and causing damage.
3. The product is only intended for sterilizing and drying, not for other purposes.
4. After each use, clean the bottom of the machine and dry.

Cleaning & Maintenance

EN

Step 1




Pour 75 ml of
distilled water

Step 2



Pour one pack
citric acid

Step 3

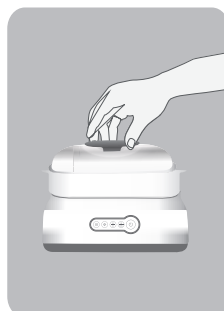


Cover the top lid then
press the sterilizing
mode

Step 4




Unplug the power
plug then hold
30 mins

Step 5

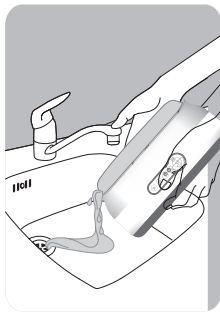

Pull out the water

Step 6

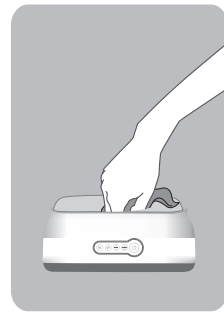

Dry the base with a rag

Descaling

1. Mix citric acid and water
2. Pour the citric acid and water into the product, choose “Sterilizing” Function.
3. Unplug the power and let it stand for another 30 minutes until the dirt is completely dissolved, then pour out the liquid and wipe the base.

Follow these steps for cleaning:

- * After use, unplug the power first
- * Drain the remaining liquid and wipe it off
- * Never immerse the base for cleaning

Q&A

Malfunction	Cause Analysis	Solution
Smelly	1. After long term use, limescale will build up and cause unpleasant odor after dry burning 2. Residual substances in the bottle will drop on product and cause unpleasant odor after dry burning.	1. Use distilled water and descale regularly 2. Make sure the bottle is cleaned before use
Slow heating / not working after a while	1. Limescale build up cause heat been blocked and damage the heating pipe 2. The heating tube/switch is damaged	1. Use distilled water and descale regularly 2. Please contact the after-sales service
Dirt on the bottom	A white lump or powdery substance gradually formed in the bottom of the product with minerals contained in water after boiling	Use distilled water and descale regularly
The bottle is still dirty after sterilization	Residues in bottles	Before sterilization, the bottle needs to be cleaned

Customer Service

GROWNSY strives for user friendly products for newborn and household items. We aim not only to create a product, but also an item that is filled with care love from us to our customers.

If you have any issues at all, please contact us directly (**service@grownsy.com**) and we will help you out.

Or SMS **GROWNSY** to (833)524-0498



Register Your Free Warranty

At **GROWNSY** we only use the highest quality products standard - but please don' t forget to register for your FREE one year warranty just in case...

www.grownsy.com/warranty

