


ROJECO

Smart Cat Litter Deodoriser


User Manual

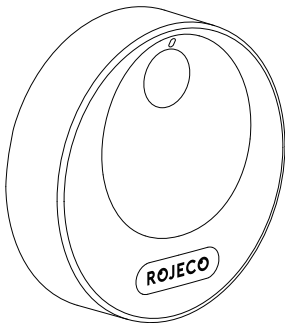

Model: RJWQ-02

Please read this manual carefully before

Product Description

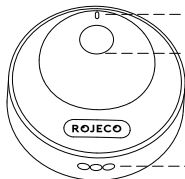


Indicator Light

Bio-sensor

Oxygen/
Negative Ion Outlet



Hanging Hole

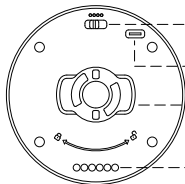

On/Off Button/Gears

Charging Port


Snap-on Base

Air Inlet

Operating Mode



Off Mode:
Switch off

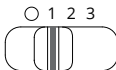

First gear:
10 minutes of work with 5 minutes of rest,
2 cycles for a total of 30 minutes



Second gear:
10 minutes of work with 5 minutes of rest, 3
cycles for a total of 45 minutes



Third gear:
10 minutes of work with 5 minutes of rest,
4cycles for a total of 60 minutes

Indicator Light Description

Indicator Lights	Status
Red light on	Low battery/charging
Green light on	Fully charged
Blue light on	Removing odour and bacteria
White light on	Monitoring status

Operating Status

1. Bio-sensor senses pets approaching, deodoriser goes into pause;
2. When the pet leaves, the deodoriser will start to operate;
(If the pet comes near again, the deodoriser will immediately go into pause)
3. No pets near within 6 hours, the odour eliminator works automatically for 10 minutes and stops for 5 minutes.

Installation


Paste

Installation position:


20-40cm from the litter, or inside the litter tray

Warm reminder:


1. Please paste it on a clean, flat, and smooth surface, it will be more solid;
2. Double-sided adhesive may stick off the white-grey of the wall, please choose a suitable location to paste;

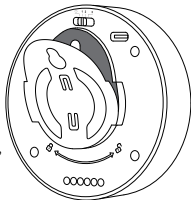

Charge Operation

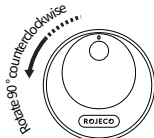

Disassembly

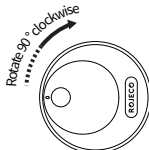

Installation

1. **[Disassembly]** : Hold the deodoriser, turn it 90° anti-clockwise to remove it and turn it off by flicking the on/off button to charge it with the 5V adapter;
2. **[Installation]** : Toggle the on/off button and select gear, adjust the deodoriser in the direction as shown in the picture, align the clasp with the slot in the base of the clasp, and reset by rotating 90° clockwise.



Caution : Do not use an adapter that exceeds the input voltage

Troubleshooting

Problem	Solution
The indicator light does not come on	1. Check the switch, toggle it to first or second gear; 2. Use 5V voltage adapter, charge it for a while and then switch it on; 3. If the above measures fail to solve the problem, please contact customer service.
Toggle switch not responding	1. Use 5V voltage adapter, charge it for a while and then switch it on and use it; 2. Check whether there is any foreign matter or card parts on the switch; 3. If the above measures fail to solve the problem, please contact customer service.
Unable to charge	1. Check that the output voltage of the power adapter is 5V; 2. Check whether the power cord is complete and make sure it is firmly connected; 3. If none of the above measures solves the problem, please contact customer service.
Bio-sensor failure	1. Check the switch and toggle it to first or second gear; 2. Check that the biosensor is not blocked; 3. Ensure that there is no direct light in front of the biosensor; 4. If the above measures do not solve the problem, please contact customer service.

Caution

1. This equipment contains electronic parts, do not use liquid cleaning.
2. This device is not waterproof, can not be washed, accidentally dropped into the water, should be immediately taken out to dry.
3. This device has a built-in lithium battery, please do not close to high temperature or fire source.
4. Please make sure the front of the device is not covered by obstacles.
5. Do not use your fingers or sharp objects to penetrate into the Oxygen/Negative Ion outlet.
6. Do not cover the oxygen/negative ion outlet and keep it clear.
7. Do not point the oxygen/negative ion outlet at the nose or mouth to avoid discomfort.
8. Please do not let pets bite, the built-in battery will lead to danger.
9. This device is not a toy, children under 8 years old should not operate the device. Children should not clean, maintain or use this device without adult supervision.

Specifications

Model : RJWQ-02

Battery capacity : 4000mAh/3.7V

Dimension : 94*94*33mm

Material : ABS

Accessories: Odor purifier, buckle base, double-sided tape × 2, USB power cord, manual

Odour purification method :

Oxygen + Negative Ion

Input voltage : 5V/1A

Weight : 197g