



Timekettle

Contact Us

 www.timekettle.co

 support@timekettle.co

 (+86) 075586725036 (Chinese) +1(833) 4911328 (English/Espanol)

***New T1
AI Translator
Manual***

English

I. Package List



Translator



Type-C
Charging Cable



Slot Pin




Lanyard



User Manual

II. Get to know your translator

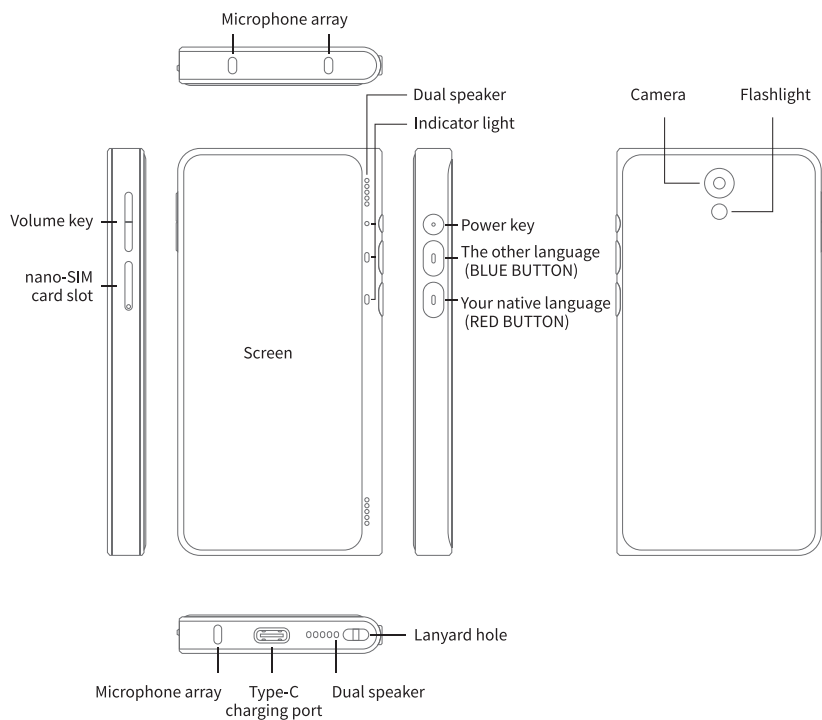


III. Basic Operation



Power on/Power off/Restart:

- Power on: press and hold the power button;
- Power off/restart: press and hold the power button to select Power Off/Restart.

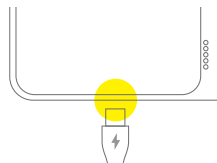

Charging

Connect the Type-C charging cable with a standard 5V1A charger to charge the Fluentalk T1.


Built-in eSIM

When the device is turned on for the first time, the system will automatically activate the eSIM wireless network, which takes about 2 minutes.

After successful activation, you can enjoy two years of free traffic for online translation.

Install nano-SIM card

1. Use the Slot Pin to eject the SIM card slot.
2. Put the nano-SIM into the card slot.

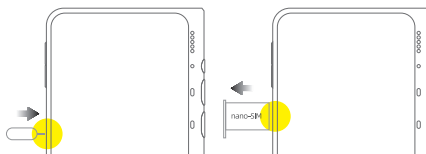


Use WLAN hotspot

The Fluentalk T1 will be able to share mobile data with other devices when nano-SIM card is activated.

*Please switch the network to your nano-SIM card in the setting after you have installed it in the card slot. [Setting - Network and Connection - MobileData]

*Nano-SIM needs to be purchased separately

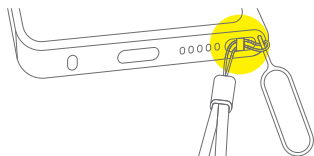

How to use lanyard

Put one end of the lanyard through the hole, and pull the other end out from the other side with the Slot Pin.



1



2

GESTURES

1.The previous screen: Swipe right on the edge of the left-hand side of the screen to return to the previous screen;

2.Quick settings bar:Swipe down to bring up the quick setting for WiFi, transfer data, Bluetooth, and flight mode.enable Bluetooth and flight mode.

IV. Translation Functions


Please refer to “User Guide” for detailed information about functions.

*The machine’s interface is subject to modifications or updates without prior notice!

1. One-Click Translation

Hold the RED button to speak your native language, and the translation will play automatically when you release. Hold the BLUE button to pick up another language from the other person, and the translation will play automatically when you release.

You can select your native language and the other language on the home screen or on the translation screen.

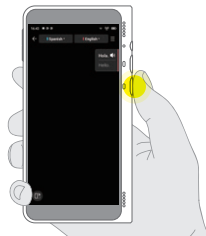

Rotate the screen

You can tap the switch button on the translation screen and rotate the screen to have a side-by-side conversation in different languages.

You can tap the language button on the screen to pause the translation.



2. Photo Translation

- Select the language you want to translate before taking the photo.
- Make sure the text you want to translate is clearly visible and as centered as possible.
- Tap the camera button, and Fluentalk T1 will automatically scan and translate the text. You can turn on the flashlight if too dark.
- Tap [Save] on the upper right corner, and the translated photo will be saved in the album.



3. Ask for Directions Mode

Double-push the power button, and Fluentalk T1 will automatically play the pre-configured translation you set up in advance.

You can configure the translation anytime on the [Custom] page.




4. Listen Mode

Place the Translator in front of the speaker, click [Record] to start recording and translating in real time.



5. Chat Translation


Select your native language and the other language, and put the Fluentalk T1 in corresponding direction. Tap Start button to begin the translation.

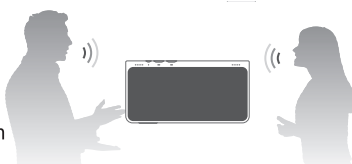

6. Offline Translation

You can enable or disable this function in the translation settings of any modes. Please be advised that offline language packs must be downloaded with internet connection before you can use Offline Translation.

*Notes: Offline Translation Package could only be downloaded with Internet connection.

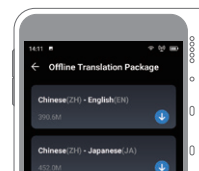

7. Translation setting

Tap the upper right corner of any translation functions to enter the translation setting. Speaking interval: configure the speaking interval depending on your preferred speaking speed and habits, and the translation engine will optimize the performance for you.

Voice playback: Fluentalk T1 automatically plays the translation by voice by default. To avoid disturbing others, you can disable "Voice playback".

8. Offline AI Engine Translation

When you have downloaded the offline language pack, you can perform translations without an internet connection. If you use the online translation mode, the T1 will automatically switch the translation engine according to the current network status to ensure that you can use the device for translation at any time.

V. FAQ

1. Inaccurate translation

- If your surroundings is noisy, it may affect the recording quality. It is recommended that you can find a place with less noise and try again.
- If you speak too far from Timekettle T1, it may lead to incomplete recording of your sentences. It is recommended that you can keep Timekettle T1 close to the mouth.

2. Timekettle T1 not responsive

The storage may be full. You may delete unnecessary files in [Storage Space] or reboot Timekettle T1.

3. Freeze up or breakdown

Improper use of Timekettle T1 may cause it to freeze. In this case, you can hold the power button for 20 seconds to reboot Timekettle T1.

4. No voice playback

You may have disabled the voice playback in the setting or the volume is too low.

5. Battery runs out too fast

If your Internet connection is unstable, Timekettle T1 may have to search the Internet frequently, causing the battery to run out fast. In this case, you may switch to a stable WiFi connection.

6. No mobile data after nano-SIM card is inserted

- Check if the nano-SIM card has been inserted properly;
- After checking it's inserted properly, reboot Timekettle T1;
- Wait one to two minute, and check if roaming and mobile data are enabled.

VI. Product Specification

Product Name: Portable Translator

Product Model: Timekettle T1

Size: 116.8*58.6*11.2 mm

Weight: 115 g

Processor: Quad-core ARM, 12nm, up to 2.0GHz

Storage: 4G (RAM), 32G (ROM)

Operating system: Android 10

Screen size: 4 inch OnCell Resolution: 540*1080

Camera: 8 megapixel

Microphone: Multiarray microphone

Speaker: Dual speakers

Charging: Type-C 5V 1A

Battery capacity: 1500 mAh

Communication mode: WIFI/Nano-SIM/ e-SIM (embedded)

Network: 2G/3G/4G LTE

Safety

Please read the following safety and warning information before using T1.

1. Do not use unofficially recommended charging methods to avoid fire, explosion, or other dangers.
2. Do not deliberately drop, burn, penetrate, squeeze, or immerse in liquid to avoid product damages.
3. Do not expose to high temperatures or around heating equipment such as microwaves or ovens.
4. Use the device within the range of 0°C ~ 35°C and store within the range of -20°C ~ 45°C. If the temperature is too high or too low, it will cause the device to malfunction.
5. Timekettle is not responsible for quality issues, product failures, and safety accidents caused by the use of unofficially approved accessories.

Corporate Information

Manufacturer: this product is authorized for manufacturing by Shenzhen Timekettle Technologies Co., Ltd.

Address: Room 612, Building 4, Minqi Science Park, Xili Road, Shenzhen, Guangdong Province, China

All rights reserved by Shenzhen Timekettle Technologies Co., Ltd.

Warranty regulations

1.If the product and accessories have any quality issues within 1 year (unless otherwise states by local laws & regulations) and 6 months respectively from the date of purchase, you may be qualified for free repair service with proof of purchase and warranty card.

2.What is NOT covered by the warranty:

- a. Product is worn due to regular usage.
- b. Failure to use in accordance with the instructions.
- c. Damage caused by human or irresistible factors.

3.Repair costs will incur for damages caused by man-made faults, beyond the warranty period, and irresistible factors.

Contact US

TEL: +1(833) 491-1328 Support: English/Español

Official Website: www.timekettle.co

Customer Service: support@timekettle.co