

YEELIGHT LED NECK BOOK LIGHT

YLODJ-0138

User Manual



YEELIGHT

Specifications

Thank you for purchasing the Yeelight Led Neck Book Light. Please read this manual carefully and keep it for future reference.

Please read this manual carefully and keep it for future reference.


We hope you enjoy your new product!

Model	YLODJ-0138
Input	DC 5V / 1A
Luminous Flux	40 lm
Rated Power	2,5 W
Color Temperature	4000K / 6500K / 2700K
Battery Capacity	1 000 mAh
Dimension	600x30x26mm / 23.62" × 1.18" × 1.02"
Color	Black
Material	ABS, Silicone Tube
Weight	110g / 3.88oz
Work Time	6H-24H
CRI	≥90

Package Contents

- 1 X USB Cable
- 1 X User Manual
- 1 X Neck Book Light

Product Diagram

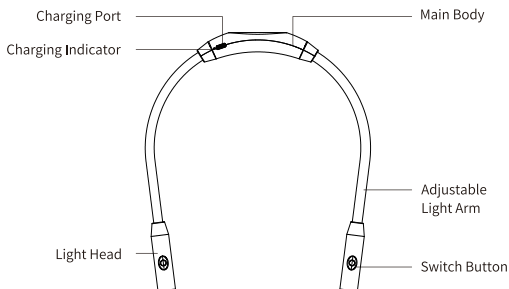

How to Use

- **Color Temperature Adjustment:** Long press the switch button to adjust the color temperature (Warm White / White / Warm).
- **Brightness Adjustment:** Short press the switch button once to 100% brightness, second time 75% brightness, three times brightness 50%, four times brightness 25%, five times turn off the light.
- **Charging Port:** It is recommended to use 5V 1A charger. Please use the Type-C charging cable when charging. It will take about 4 hours to fully charge.
- **Charging Status:** The indicator light is red when charging, and it is off when it is fully charged. The light will automatically turn off and enter the charging state when charging.

Product Care

1. Do not use a power supply that exceeds the rated voltage range. (Long time use outside the rated voltage range may damage the lamp)
2. Do not use the lamp in high temperature objects or humid places. (Do not install above objects such as stoves, gas and exhaust pipes to prevent damage)
3. It cannot be connected in series with other electrical appliances, and cannot be used in parallel with dimmers.
4. When the lamps need to be inspected and repaired, please entrust electrical professionals to operate. (Non-professional construction is prone to danger.)
5. When the lamp is abnormal, cut off the power supply quickly and contact the sales store.
6. If the external cord of this lamp is damaged, use the cord specially provided by the manufacturer or its service agent.

Warning: In order to prevent accidents such as damage, fall, electric shock, fire and other threats to personal safety, please install and use in strict accordance with the instructions. Do not modify the lamps and replace parts by yourself.

NOTE

1. When the lamp is working, do not look directly at the LED to prevent damage to your eyesight!
2. When the lamp is not used for a long time, charge it at least once every 20 days.
3. The light source of the lamp is not replaceable. When the light source cannot be used, you need to replace the neck book light.

Lamp Maintenance

In order to use this product safely and efficiently, please clean and check regularly (once every six months).

When cleaning the lamp, please cut off the power supply, use a soft cloth soaked soap water to wring it, and then wipe it with a dry cloth. Do not clean with other reagents , Otherwise it will cause the lamp to change color or damage.

YLODJ-0138

Manufacturer: Qingdao Yeelink Information Technology Co., Ltd.

Website: en.yeelight.com

Address: 10F-B4, Building B,

Qingdao International Innovation Park, No.1 Keyuan Weiyi Road,

Laoshan District, Qingdao City, Shandong Province, P.R.China

Customer Service Email: support@yeelight.com

