

# UT363

## Mini Anemometers

### Operating Instruction

#### 1. Introduction

UT363 is a stable, safe, reliable mini digital anemometer, widely used in mining, electric, iron and steel, petrochemical, energy-saving, navigation, fan manufacturing, exhaust ventilation, sporting and many more industries.

This operating manual includes relevant safety information and warnings. Please read this manual carefully and observe all the cautions strictly.

#### ⚠ Warning:

Before using the product, please read the operation safety rules carefully.

#### 2. Out of the Box

Open the packing box and take out the meter. Please check carefully if any items below are missing or damaged.

1. Main unit -----1
2. Operating manual-----1

#### 3. Operation Safety


1. Please check the meter and the accessories before using and beware of any damage or abnormal phenomenon. If you find the case is damaged or the LCD shows nothing, or you consider that the meter could not work properly anymore, please stop using it.
2. Observe the operating instructions while measuring.
3. Do not open the meter at will or change internal wiring to avoid damages to the meter.
4. When the LCD displays "🔋", replace the battery timely. Remove the battery if the meter is not used for a long time.
5. Do not store or use the meter in high temperature, high humidity, flammable, combustible, or strong electromagnetic environment.
6. Please use soft cloth and neutral detergent to clean the case for maintenance. Do not use grinding agent and solvent to avoid case corrosion and damaging the meter.

#### ⚠ Warning:


Based on the principle of magnetic induction wind speed measurement, the product may be interfered in strong electromagnetic radiation occasions, so please stay away from these occasions as far as possible when using it.

#### 4. Product Outlook

|   |             |   |               |
|---|-------------|---|---------------|
| 1 | Vane        | 2 | Meter         |
| 3 | LCD display | 4 | Function keys |

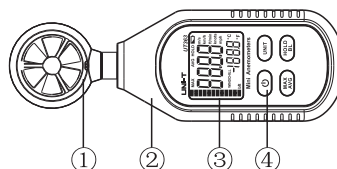

#### 5. Display Interface

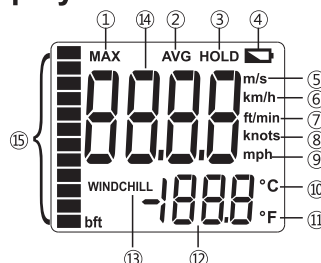

|    |                         |    |                   |
|----|-------------------------|----|-------------------|
| 1  | Maximum measurement     | 2  | Average value     |
| 3  | Data hold               | 4  | Low battery       |
| 5  | m/s                     | 6  | km/h              |
| 7  | ft/min                  | 8  | Knots             |
| 9  | Mph                     | 10 | Celsius           |
| 11 | Fahrenheit              | 12 | Temperature value |
| 13 | Wind chill notification | 14 | Wind speed value  |
| 15 | Beaufort scale          |    |                   |

#### 6. Key functions and setup

##### 1. ON/OFF:

Short press once to start up; short press again to power off.

Note: Product's auto power off feature can be disabled: Press and hold "HOLD" and then press "ON/OFF" key to enable/disable auto power off, LCD will display "APO OFF" to indicate status.

##### 2. UNIT: Unit conversion key:

Short press this key and the wind speed value cycles m/s, km/h, ft/min, knots, and mph. Long press this key and the temperature unit changes between °C and °F.

##### 3. MAX/AVG:

Pressing this key can select maximum, average and normal value measurement; select maximum and the meter will always show the maximum reading; select average and the meter will always show the average reading.

##### 4. HOLD/BL:

HOLD: Short press this key once to hold the measurement; short press this key again to exit data hold and continue normal measurement.

BL: Long press this key to turn on backlight; long press this key again to turn off backlight.

# 7. Technical Specification

## 1. Wind Speed and Temperature

| Function                | Range                       | Resolution | Accuracy                | Description                                                                 |
|-------------------------|-----------------------------|------------|-------------------------|-----------------------------------------------------------------------------|
| Wind Speed              | 0-30m/s (as standard)       | 0.1m/s     | $\pm(5\%rdg+0.5)$       |                                                                             |
|                         | 1.4~108 Km/h (refer only)   |            | $\pm(5\%rdg+15dgts)$    |                                                                             |
|                         | 0.7~58 Knots (refer only)   |            | $\pm(5\%rdg+10dgts)$    |                                                                             |
|                         | 0.8~67 mph (refer only)     |            | $\pm(5\%rdg+10dgts)$    |                                                                             |
|                         | 78~5905 ft/min (refer only) |            | $\pm(5\%rdg+180dgts)$   |                                                                             |
| Temperature             | -10~50°C                    | 0.1°C      | $\pm 2^{\circ}\text{C}$ |                                                                             |
|                         | 14°F~122°F                  | 0.2°F      | $\pm 4^{\circ}\text{F}$ |                                                                             |
| Beaufort Wind Scale     | 0~12                        | 1          | $\pm 1$                 | Only for reference                                                          |
| Sampling Rate           |                             |            | 0.5s                    | Sampling rate is twice per second.                                          |
| Overload Indication     |                             |            | OL                      | Shows "OL"                                                                  |
| MAX/AVG                 |                             |            | MAX/AVG                 | Shows "MAX/AVG"                                                             |
| Data Hold               |                             |            | HOLD                    | Shows "HOLD"                                                                |
| Backlight               |                             |            | BL                      | Manually turn on or off                                                     |
| Auto Power off          |                             |            | 5mins                   | Automatically power off after 5mins without operating                       |
| Low Battery             |                             |            | 3.0~3.5V                | Shows low battery prompt when power is 3.0~3.5V                             |
| Wind Chill Notification |                             |            | WIND CHILL              | Wind speed with 5m/s and Temperature under 0°C will be display "WIND CHILL" |

## 2. General Type

- LCD display: 4-bit LCD display. The displayed maximum is 9999.
- Overload indication: When the wind speed is over 45m/s or the temperature is lower than -10°C or higher than 50°C, "OL" will be displayed.
- Low battery display: Prompt "  ". The new battery should be replaced in time.
- Sampling rate: 2/s
- Sensor type: Magnetic induction type wind speed sensor and NTC negative temperature coefficient sensor.
- When the temperature is lower than 0°C and the wind speed is over 5m/s, the meter shows "WINDCHILL".
- Impact strength: Can withstand the impact of landing from 1 meter's height.
- Power requirement: 1.5V batteries (AAA) ×3
- Product size: 160×50×28mm
- Weight: 118g

## 3. Environment Specification

- Indoor use
- Altitude height: 2000m
- Pollution level: 2
- Working temperature and humidity:  
0°C~40°C (not greater than 80%RH)  
40°C~50°C (not greater than 45%RH)
- Storage temperature and humidity:  
-20°C~60°C (not greater than 75%RH)

## 4. Electrical Specifications

- Accuracy: Wind speed:  $\pm 5\%rdg + 0.5$  Temperature:  $\pm 2^{\circ}\text{C}$
- Environment temperature:  $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$
- Environment humidity:  $\leq 80\%RH$


## 5. General Maintenance

Warning: please do not open the meter case to avoid affecting device accuracy or damage to the meter.

- Maintenance and service of the meter should be accomplished by professional personnel or designated maintenance department.
- Clean the case by dry cloth periodically, detergent with abrasive or solvent composition shall not be used.

## 6. Battery Installation and Replacement

- The meter uses 3 pieces of AAA 1.5V batteries. Please see figure below for steps of battery installation and replacement.
- Turn the panel down, push the battery cover open in the direction of the arrow, lift the cover and remove the batteries; install new batteries in accordance of polarity indications.
- Please use batteries of same type instead of improper ones.
- Close the cover tightly after installing new batteries.

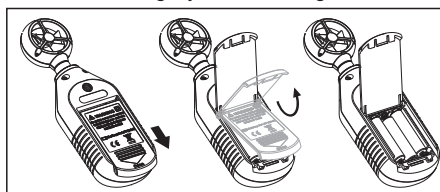

**UNI-T®**

**UNI-TREND TECHNOLOGY (CHINA) CO., LTD.**

No6, Gong Ye Bei 1st Road,  
Songshan Lake National High-Tech Industrial  
Development Zone, Dongguan City,  
Guangdong Province, China  
Tel: (86-769) 8572 3888  
<http://www.uni-trend.com>

## Safety warnings and information

All information regarding operation and use can be found in the operating instructions or on the product label. Read these instructions carefully before using the products and follow the instructions contained therein.

Please also read the following information before use:

### Safety precautions

1. Use measuring tools for their intended purpose. Do not use measuring tools for tasks for which they are not designed to avoid damage or incorrect measurement results.
2. Always ensure that the tool is in good working order before use. Damaged tools, such as cracked housings or damaged displays, can lead to incorrect measurements or the risk of accidents.
3. Calibrate measuring tools regularly to ensure their accuracy and reliability. Incorrectly calibrated devices can lead to incorrect results.

### Precautions

1. Use appropriate eye protection, especially when working with measuring tools that may emit radiation.
2. Keep measuring tools away from children and untrained persons to prevent accidental damage or misuse.
3. Avoid using measuring tools in extreme temperature or humidity conditions or in atmospheres with high dust concentrations, which may affect their accuracy and functionality.
4. When working with measuring tools, take care not to damage delicate measuring elements (e.g. sensors, probes).

### Safe use

1. Always ensure that the measuring tool is properly positioned and secured to avoid measurement errors or damage.
2. Use measuring tools only in designated areas that provide adequate stability and minimise the risk of accidents, such as slippery or uneven surfaces.
3. Never take measurements on live components or in conditions that may pose a safety hazard.

### Rules for use in appropriate conditions

1. Store measuring tools in a dry, cool place, away from moisture and direct sunlight, which may damage the devices or affect their accuracy.
2. When using measuring tools, make sure they are securely positioned and will not be exposed to shocks or impacts that could damage them.
3. Avoid using measuring tools in extreme conditions, such as high vibrations, hot surfaces, dust or moisture, unless the tool is designed for such use by the manufacturer.

### Maintenance instructions

1. Regularly check the condition of measuring tools, especially measuring elements (e.g. sensors, probes, displays) and batteries.
2. Follow the cleaning instructions provided by the manufacturer. Use appropriate cleaning materials (e.g. soft cloths) to avoid damaging delicate components.
3. Calibrate measuring tools regularly in accordance with the manufacturer's recommendations to maintain measurement accuracy.

### Safe disposal

1. Dispose of used or damaged measuring tools in accordance with applicable environmental and electronic recycling regulations.
2. Do not dispose of measuring tools in normal waste bins, as they may contain components that are harmful to the environment.
3. Contact your local authorities or recycling companies for information on the proper disposal of used measuring tools.

### Declaration of conformity

The products have been designed in accordance with the safety requirements set out in Regulation (EU) 2023/988 on general product safety, ensuring their compliance with applicable standards for the safety and health protection of users.

### EU representative

UNI-TREND TECHNOLOGY EU GMBH  
Affinger Strasse 12 86167 Augsburg,  
Germany